


User Manual for Removal and Installation of Air Filter

Step 1: Removal and Installation of Front Cover

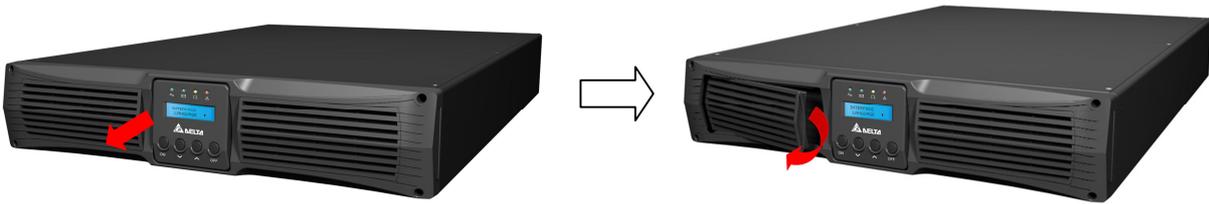

As shown in the above figure, remove the front panel along the direction of arrow, and vice versa.

Step 2: Removal and Installation of Air Filter from Front Cover

A: Installation of Air Filter.

A-1. Along the direction of arrow, insert the air filter through the 1st hook at the right end of the front cover.

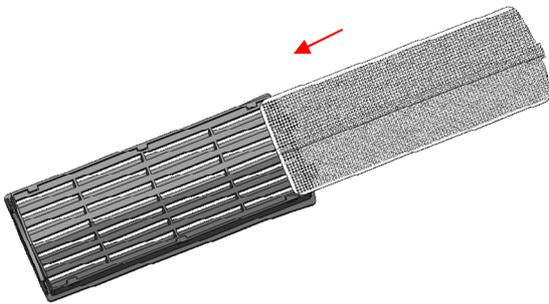


Figure (A-1)

A-2. Insert the air filter through the 2nd and 3rd hooks, till it is completely inserted into the front cover.

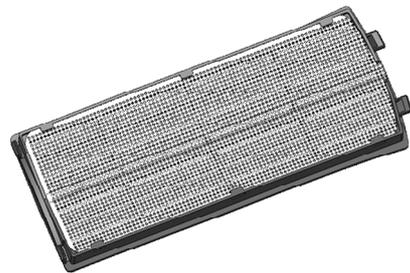


Figure (A-2)

B: Removal of Air Filter

B-1. Pull up the lug of the air filter (as shown in the direction of arrow) from the groove of front cover.

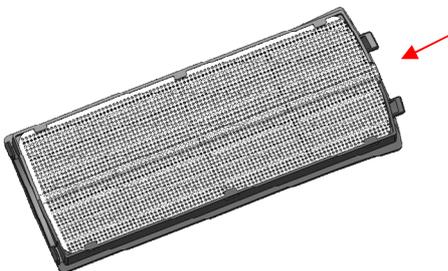


Figure (B-1)

B-2. Along the opposite direction of installation, pull the air filter out of the front cover.

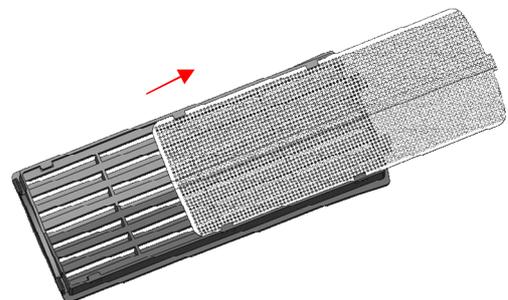


Figure (B-2)

Note: Please regularly (2-4 weeks) check the ventilation condition of air filter, and clean or replace the air filter based on the actual condition.