

The power behind competitiveness

Delta UPS - Ultron Family

HPH Series, Three Phase
20/30/40/60 kVA 208V

User Manual

Save This Manual

This manual contains important instructions and warnings that you should follow during the installation, operation, storage and maintenance of this product. Failure to heed these instructions and warnings will void the warranty.

Copyright © 2017 by Delta Electronics Inc. All Rights Reserved. All rights of this User Manual ("Manual"), including but not limited to the contents, information, and figures are solely owned and reserved by Delta Electronics Inc. ("Delta"). The Manual can only be applied to the operation or the use of this product. Any disposition, duplication, dissemination, reproduction, modification, translation, extraction, or usage of this Manual in whole or in part is prohibited without the prior written permission of Delta. Given that Delta will continuously improve and develop the product, changes may be made to the information in this Manual at any time without obligation to notify any person of such revision or changes. Delta will make all possible efforts to secure the accuracy and the integrity of this Manual. Delta disclaims any kinds or forms of warranty, guarantee, or undertaking, either expressly or implicitly, including but not limited to the completeness, faultlessness, accuracy, non-infringement, merchantability or fitness for a particular purpose of the Manual.

Table of Contents

Chapter 1 : Important Safety Instructions	1
1.1 Placement Warnings	1
1.2 Connection Warnings	1
1.3 Usage Warnings	1
1.4 Storage Warnings	3
1.5 Glossary of Symbols	3
1.6 Standard Compliance	4
Chapter 2 : Introduction	5
2.1 Product Introduction	5
Chapter 3 : Appearance and Mechanism	6
3.1 Appearance and Dimensions	6
3.2 Front View	7
3.3 Control Panel	8
3.4 Front View with Door Open and Internal Panel Removal	9
3.5 Rear View	15
Chapter 4 : Operation Modes	17
Chapter 5 : Installation and Wiring	22
5.1 Precautions Prior to Installation and Wiring	22
5.2 Installation Environment	22
5.3 UPS Transportation & Handling	23
5.4 UPS Installation	23
5.5 Wiring	25
5.5.1 Precautions Prior to Wiring	25
5.5.2 Single Input/ Dual Input Modification	27
5.5.3 Single Unit Wiring	29
5.5.4 Parallel Units Wiring	37
5.6 External Battery Cabinet Connection Precautions	40
Chapter 6 : Maintenance	43
Appendix 1 : Technical Specifications	44
Appendix 2 : Warranty	46

Chapter 1 : Important Safety Instructions

1.1 Placement Warnings

- Install the UPS in a well-ventilated indoor area, away from excess moisture, heat, dust, flammable gas or explosives.
- Leave adequate space around all sides of the UPS for proper ventilation. Please refer to **5.2 Installation Environment**.

1.2 Connection Warnings

- The UPS must be well grounded due to a possible risk of current leakage.
- It is necessary to install protective devices and 4-pole contactors when the UPS is connected to the mains and bypass source. For relevant information, please refer to **5.5.1 Precautions Prior to Wiring**.
- The protective devices connecting to the UPS must be installed near the UPS and must be easily accessible for operation.

1.3 Usage Warnings

- This is a class-A product. In a domestic environment, this product may cause radio interference, in which case, the user is required to take adequate measures.
- The UPS can be used to power computers and associated peripheral devices, such as monitors, modems, cartridge tape drives, external hard drives, etc.
- Use of this equipment in life support applications where failure of this equipment can reasonably be expected to cause the failure of the life support equipment or to significantly affect its safety or effectiveness is not recommended. Do not use this equipment in the presence of a flammable anesthetic mixture with air, oxygen or nitrous oxide.
- The parallel UPSs can connect with common batteries. Before paralleling batteries, please make sure the battery voltage difference between each UPS is lower than 5Vdc.
- If the UPS needs to be connected to a motor load, it must be confirmed by qualified service personnel.
- The external vents and openings in the UPS are provided for ventilation. To ensure reliable operation of the UPS and to protect the UPS from overheating, these vents and openings must not be blocked or covered. Do not insert any object into the vents and openings that may hinder ventilation.

- In a low temperature environment (below 0°C), you must allow the UPS to adjust to room temperature for at least one hour before using to avoid moisture condensing inside the UPS.
- Do not put beverage containers on the UPS, battery cabinet or any other accessory associated with the UPS.
- The risk of dangerous high voltage is possible when the batteries are still connected to the UPS even though the UPS is disconnected from the mains. Do not forget to disconnect battery cables to completely cut off the battery source.
- Do not open or remove the cover of the UPS to avoid high voltage electric shock. All maintenance services must be performed by qualified service personnel.
- Do not open or mutilate the battery or batteries. The released electrolyte is harmful to the skin and eyes and may be toxic.
- Do not dispose of the battery or batteries in a fire. The batteries may explode.
- The batteries contain chemical substances that may jeopardize or pollute our environment. Please contact the supplier shown on the batteries to properly dispose of the batteries.
- A battery can present a risk of electric shock and high short-circuit current. The following precautions should be observed before replacement of batteries:
 1. Remove watches, rings, or other metal objects.
 2. Use tools with insulated handles.
 3. Wear insulating gloves and boots.
 4. Do not lay tools or metal parts on the top of batteries.
 5. Disconnect the charging source prior to connecting or disconnecting the batteries' terminals.
- Contact qualified service personnel if either of the following events occur:
 1. Liquid is poured or splashed on the UPS.
 2. The UPS does not run normally after this User Manual is carefully observed.



NOTE:

If you use the UPS in an area that generates or incurs dust, you should install dust filters in the UPS to ensure normal product life and function.


1.4 Storage Warnings

- **Prior to Installation**

If the UPS needs to be stored prior to installation, it should be placed in a dry area. The allowable storage temperature is between -15°C and +40°C.

- **After Usage**

Press the **OFF** key () once and the LCD will appear with the following screen. If you want to turn off the UPS, please press the **DOWN** key (). Make sure the UPS is in bypass mode, disconnect the UPS from the utility power and the battery power, remove all equipment from the UPS and store the UPS in a dry and well-ventilated area at a temperature between -15°C and +40°C. Idle batteries must be fully recharged approximately every three months if the UPS needs to be stored for an extended period of time. The charging time must not be less than 24 hours each time.

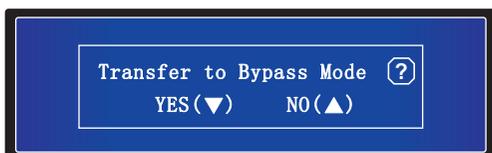

1.5 Glossary of Symbols

No.	Symbol	Description
1	 NORMAL	Online mode LED indicator: green
2	 BATTERY	Battery mode LED indicator: yellow
3	 BYPASS	Bypass mode LED indicator: yellow
4	 FAULT	Fault LED indicator: red
5	 ON	ON key
6	 OFF	OFF key
7	 ESC	Goes back to previous screen or cancels current selection
8	 ▼	Moves down/ Decreases number
9	 ▲	Moves up/ Increases number
10	 ↵	Confirms selection

No.	Symbol	Description
11		EPO key
12	R	R phase of AC Input/ Bypass Input/ UPS Output
13	S	S phase of AC Input/ Bypass Input/ UPS Output
14	T	T phase of AC Input/ Bypass Input/ UPS Output
15	N	AC Input neutral line/ Bypass Input neutral line/ UPS Output neutral line / Battery neutral line
16		For UPS grounding
17		For critical load grounding/ For external battery cabinet grounding
18	+	Positive battery terminal
19	-	Negative battery terminal

1.6 Standard Compliance

This product meets the following safety standards and electromagnetic compatibility (EMC) inspection standards:

- UL 1778
- CSA C22.2 No. 107.3-14
- FCC Part 15 Class A (EMC)
- IEC 61000-4-2 (ESD) Level 4
- IEC 61000-4-3 (Radiated Field) Level 3
- IEC 61000-4-4 (EFT) Level 4
- IEC 61000-4-5 (Surge) Level 4

Chapter 2 : Introduction


2.1 Product Introduction

The HPH 20-60kVA 208V Series UPS (hereinafter referred to as UPS) is a three-phase four-wire online uninterruptible power supply, which provides reliable and stable sine-wave power to your electronic devices. The UPS applies the latest design of DSP digital control technology and highest quality assembly, with an output power factor up to unity. The efficiency of the UPS reaches up to 94% in online mode and up to 98% in ECO mode.


With its outstanding features, the UPS not only provides safe, reliable and uninterrupted power to your sensitive electronic equipment at all times, but also produces greater electric power efficiency at less cost. The HPH 20-60kVA 208V Series UPS provides four different rated power levels, 20kVA, 30kVA, 40 kVA and 60kVA, for your selection.

Chapter 3 : Appearance and Mechanism

3.1 Appearance and Dimensions

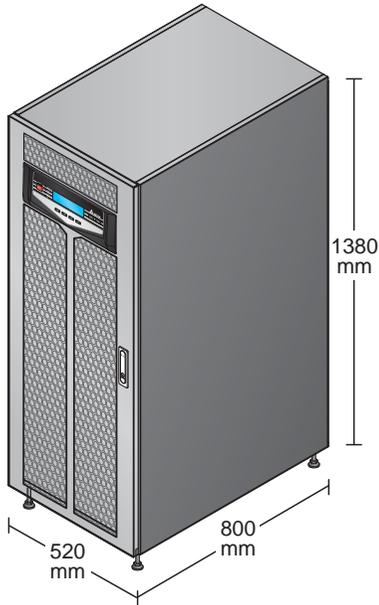


(Figure 3-1: 20/ 30kVA UPS Appearance and Dimensions)

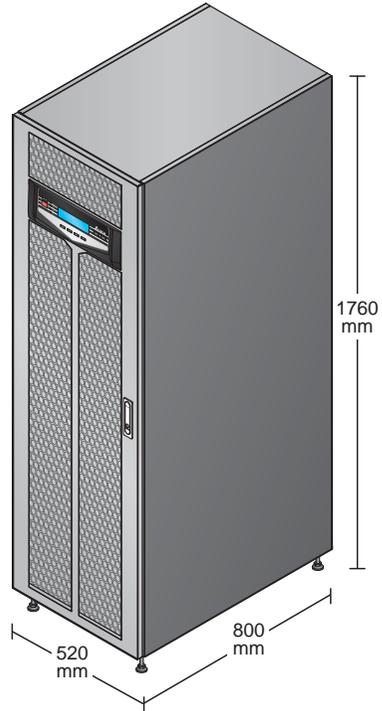


(Figure 3-2: 40/ 60kVA UPS Appearance and Dimensions)

3.2 Front View

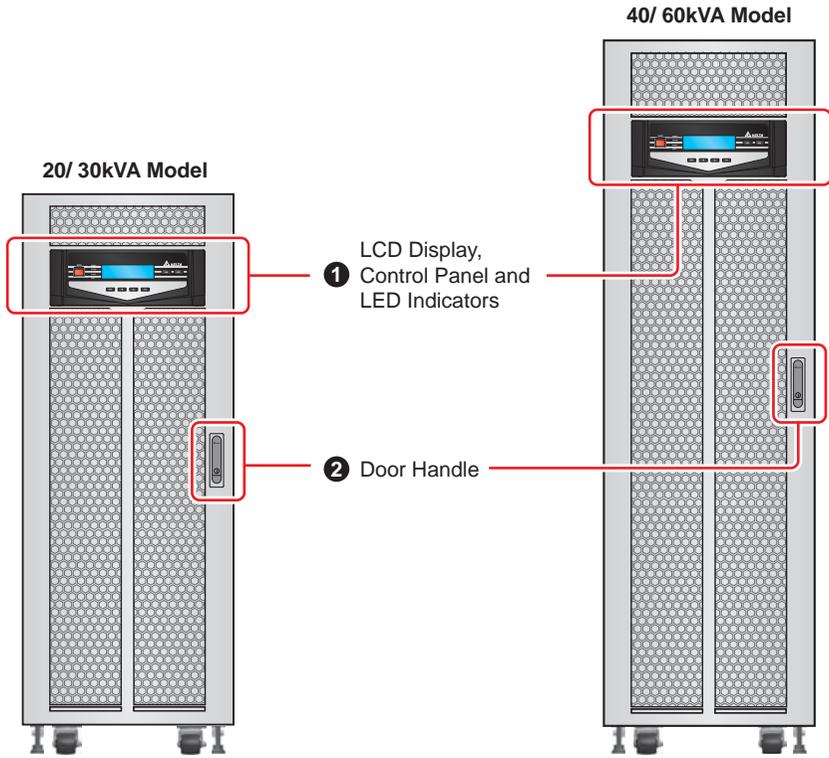


(Figure 3-3: Front View)

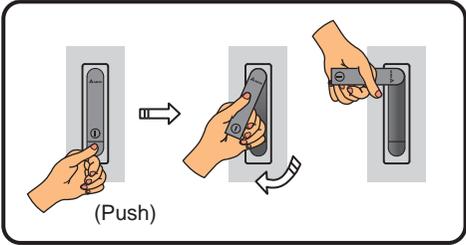No.	Item	Description
1	LCD Display, Control Panel and LED Indicators	<ol style="list-style-type: none"> 1. LCD displays the status of the UPS. 2. Control panel includes ESC, move-up, move-down, confirmation, ON, OFF and EPO buttons. 3. LED indicators include NORMAL, BATTERY, BYPASS and FAULT. Please refer to 3.3 Control Panel.
2	Door Handle	<p>Please refer to Figure 3-4 for how to open the UPS's front door.</p>  <p>The diagram shows a hand pushing the door handle, followed by a hand rotating the handle, and finally a hand pulling the handle to open the door.</p>

(Figure 3-4: Open the Front Door)

3.3 Control Panel

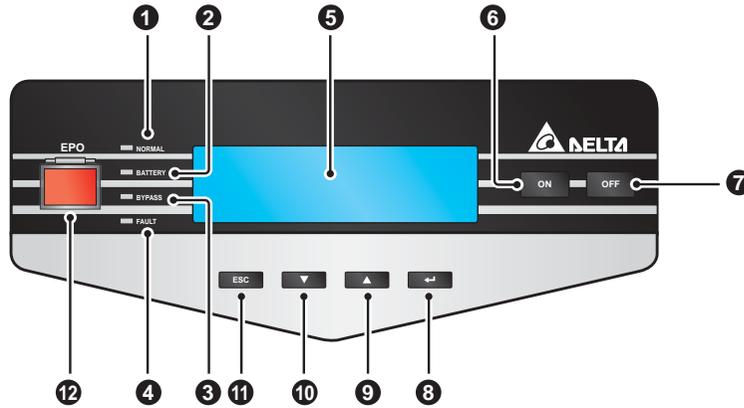

(Figure 3-5: Control Panel)

No.	Item	Description
①	<input type="checkbox"/> NORMAL	The UPS is operating in online mode and the utility AC power is normal.
②	<input type="checkbox"/> BATTERY	The UPS is operating in battery mode and the batteries are discharging.
③	<input type="checkbox"/> BYPASS	The UPS is operating in bypass mode.
④	<input type="checkbox"/> FAULT	The UPS has abnormalities.
⑤	LCD Display	Displays the UPS operating status and relevant monitoring data.
⑥	<input type="button" value="ON"/>	ON key: Press the key for 3~4 seconds and release it after hearing a beep to start up the UPS.
⑦	<input type="button" value="OFF"/>	OFF key: Press the key once and the LCD shows the following screen. To shut down the UPS, press the DOWN key (<input type="button" value="▼"/>). <div style="border: 1px solid black; padding: 5px; margin: 10px 0; text-align: center;"> Transfer to Bypass Mode <input type="button" value="?"/> YES (<input type="button" value="▼"/>) NO (<input type="button" value="▲"/>) </div>
⑧	<input type="button" value="←"/>	Confirms selection.
⑨	<input type="button" value="▲"/>	Moves up/ Increases number.
⑩	<input type="button" value="▼"/>	Moves down/ Decreases number.

No.	Item	Description
11	ESC	Goes back to previous screen or cancels current selection.
12		<p>When an emergency event occurs, press the EPO key () for more than one second to shut down the rectifier, inverter and output of the UPS immediately.</p> <p>To reset, disconnect the EPO key () , press the unit's OFF key () for 3 seconds, and then press the unit's ON key () for 3 seconds to enter into online mode.</p>


3.4 Front View with Door Open and Internal Panel Removal


- **Models with Internal Batteries: GES203HH77A035/ GES303HH77A035/ GES403HH77A035/ GES603HH77A035**



NOTE:

After you open the front door and remove the corresponding internal panels, you will see the view shown in *Figure 3-6*.

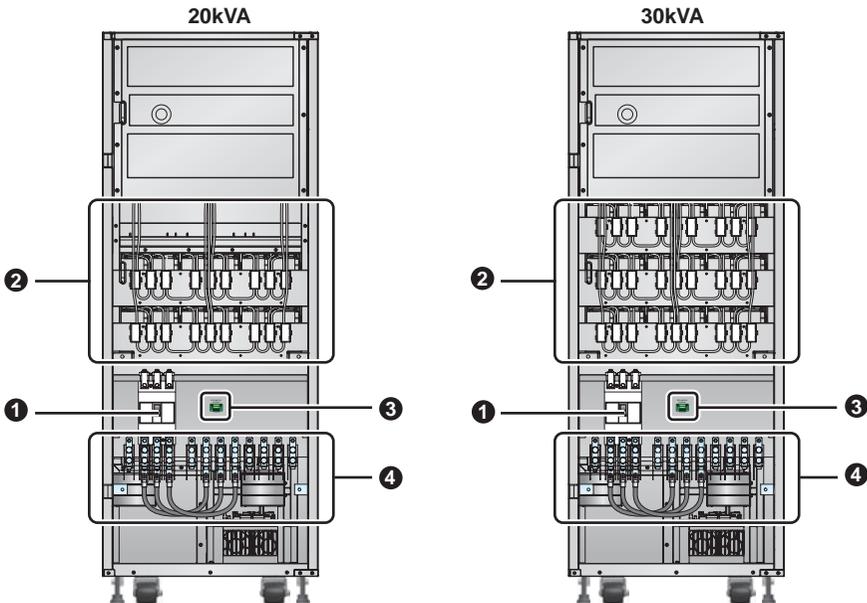

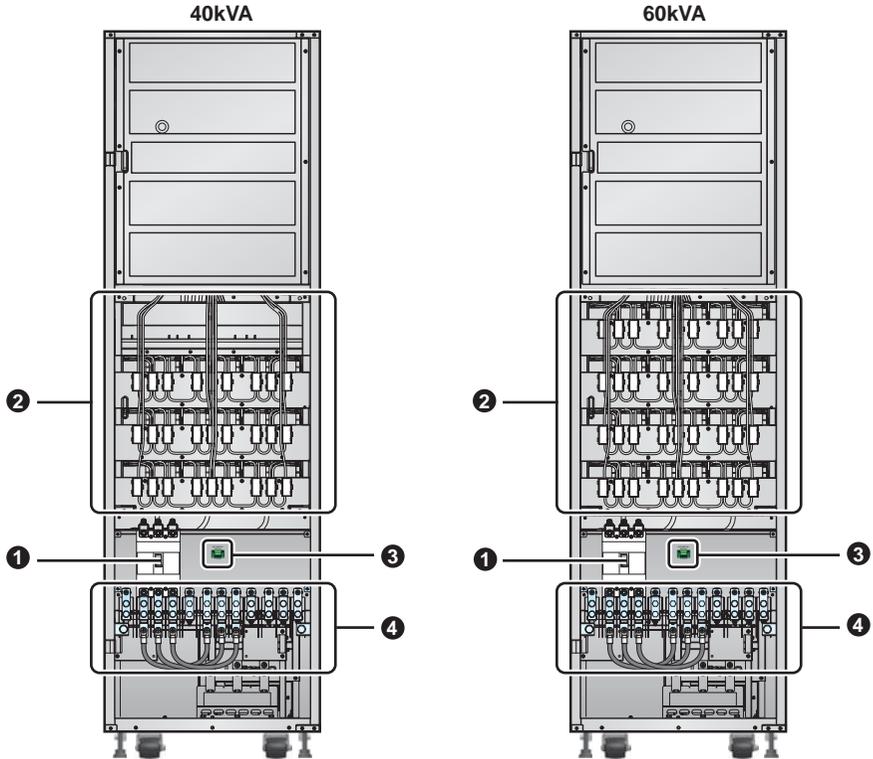

(Figure 3-6: Front View with Door Open and Internal Panel Removal (Models with Internal Batteries))

1 Input Breaker

Controls the UPS system’s main input switch and is used for safety protection.

2 Internal Battery Cabinet


The four UPS models have different contents inside the internal battery cabinet. Please refer to the table below for more information.

1. The internal battery cabinet includes:

No.	Item	Q'ty			
		20kVA	30kVA	40kVA	60kVA
1	Internal Batteries	48	72	72	96
2	Battery Tray	12	18	18	24

2. The internal batteries, battery trays and battery cables shown in the table above and **Figure 3-6** have already been configured at factory. Only qualified service personnel can perform battery installation, wiring and connection.

3 External Switch Status Dry Contacts

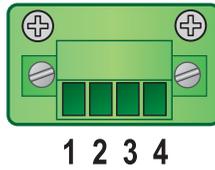

(Figure 3-7: External Switch Status Dry Contacts)


1. Dry contacts 1 & 2: Connect to the user-supplied Manual Bypass Breaker.
2. Dry contacts 3 & 4: Connect to the user-supplied Output Breaker.




NOTE:

The Manual Bypass Breaker and Output Breaker should be supplied by the user and connected to the above mentioned External Switch Status Dry Contacts. The purpose is to detect the Manual Bypass Breaker and Output Breaker's ON/ OFF status.

4 Wring Terminal Block

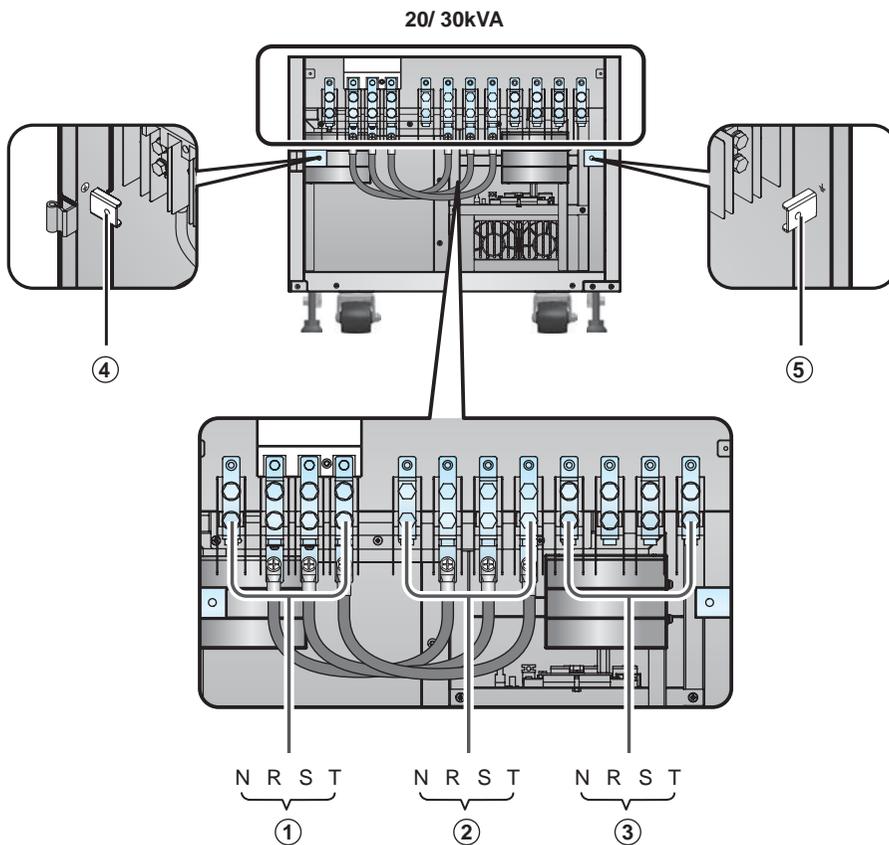

(Figure 3-8: Wring Terminal Block_20/30kVA)

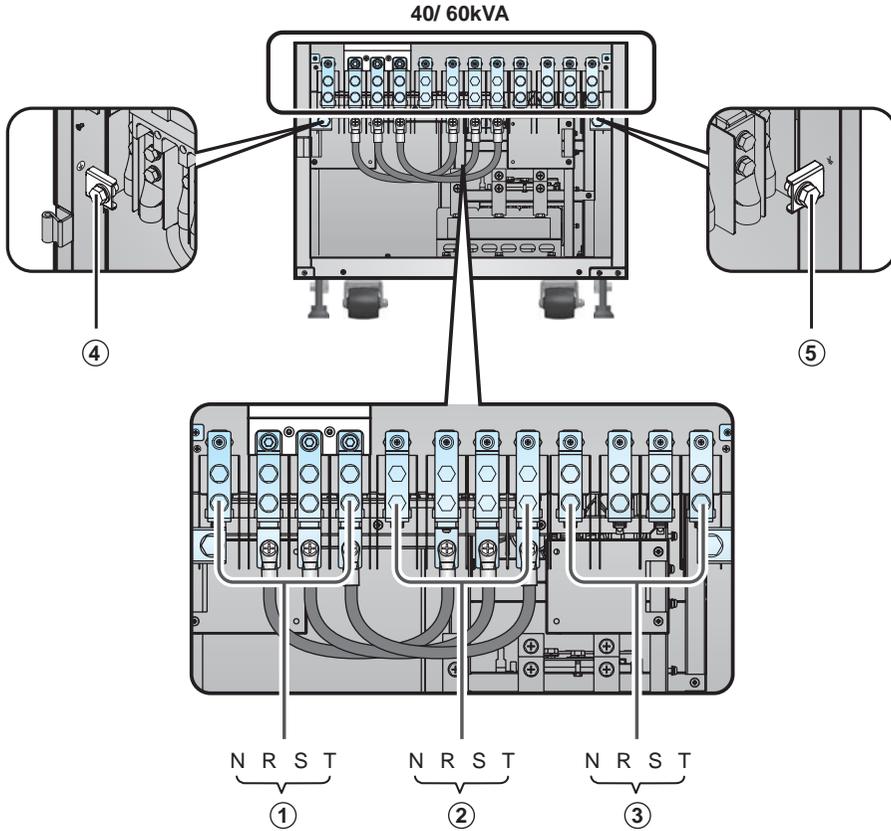

(Figure 3-9: Wiring Terminal Block_40/ 60kVA)


No.	Item	Description
①	AC Input Terminal Block (N/ R/ S/ T)	Connects to the main AC source.
②	Bypass Input Terminal Block (N/ R/ S/ T)	Connects to the bypass source.
③	UPS Output Terminal Block (N/ R/ S/ T)	Connects to the critical loads.
④	⊕	For the UPS grounding.
⑤	⊕	For the critical loads' grounding.

- **Models without Internal Batteries: GES203HH77B035/ GES303HH77B035/ GES403HH77B035/ GES603HH77B035**



NOTE:

After you open the front door and remove the corresponding internal panels, you will see the view shown in **Figure 3-10**.

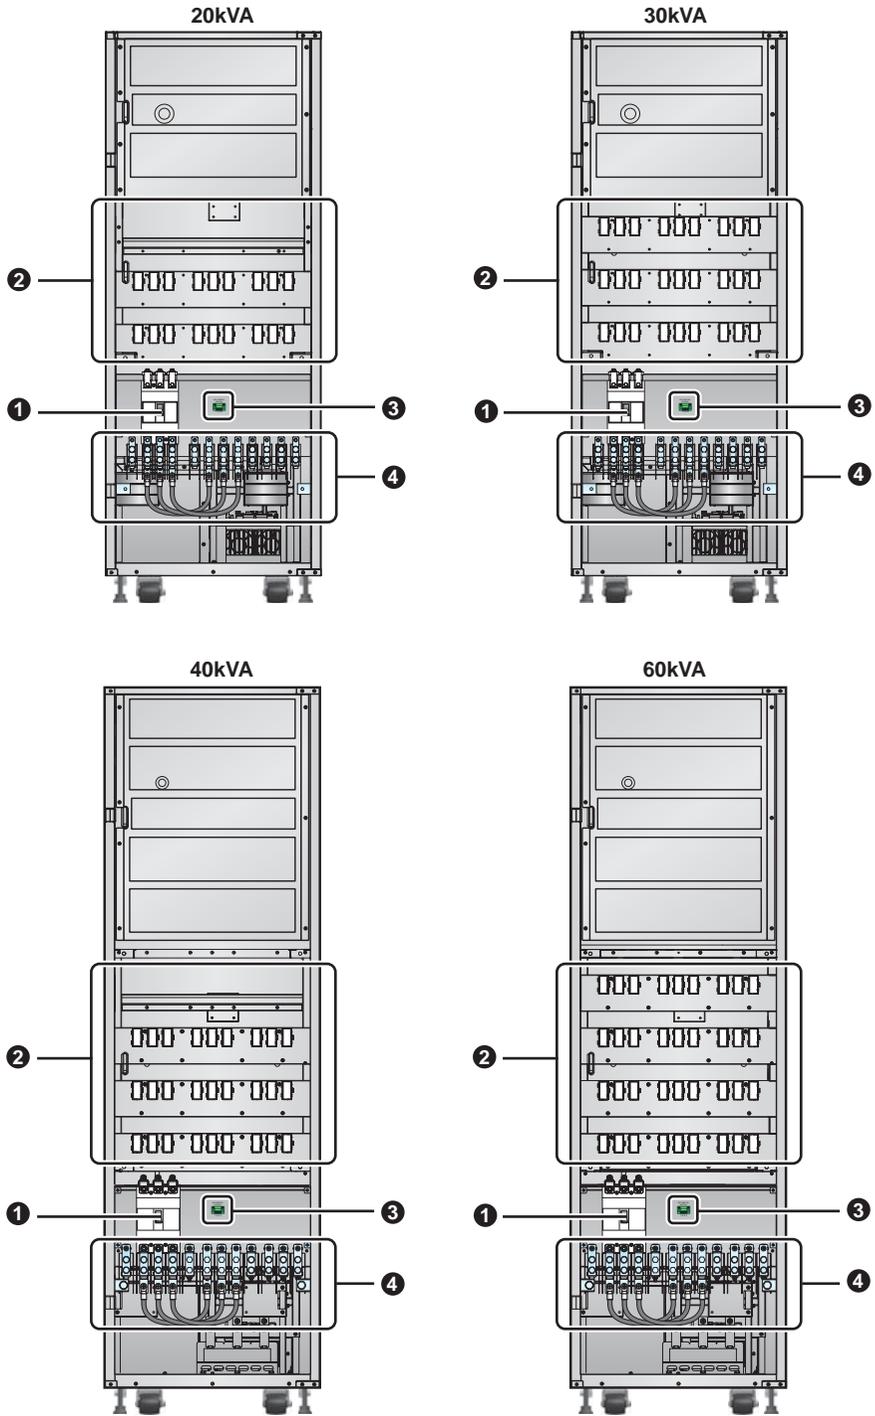

(Figure 3-10: Front View with Door Open and Internal Panel Removal (Models without Internal Batteries))


① Input Breaker

Controls the UPS system's main input switch and is used for safety protection.

② Internal Battery Cabinet

The internal battery cabinet does not include any batteries. Please install our suggested type of batteries. For battery type, please contact your local dealer or service personnel. Please note that you need to additionally purchase a battery kit (not provided) for battery installation. For battery installation and configuration, please refer to **Figure 3-6** and **5.5.3 Single Unit Wiring** . Only service personnel can perform battery installation, wiring and connection.

③ External Switch Status Dry Contacts

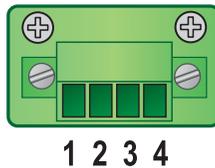

(Figure 3-11: External Switch Status Dry Contacts)

1. Dry contacts 1 & 2: Connect to the user-supplied Manual Bypass Breaker.
2. Dry contacts 3 & 4: Connect to the user-supplied Output Breaker.




NOTE:

The Manual Bypass Breaker and Output Breaker should be supplied by the user and connected to the above mentioned External Switch Status Dry Contacts. The purpose is to detect the Manual Bypass Breaker and Output Breaker's ON/ OFF status.

④ Wring Terminal Block

Please refer to **Figure 3-8** and **Figure 3-9**.

3.5 Rear View

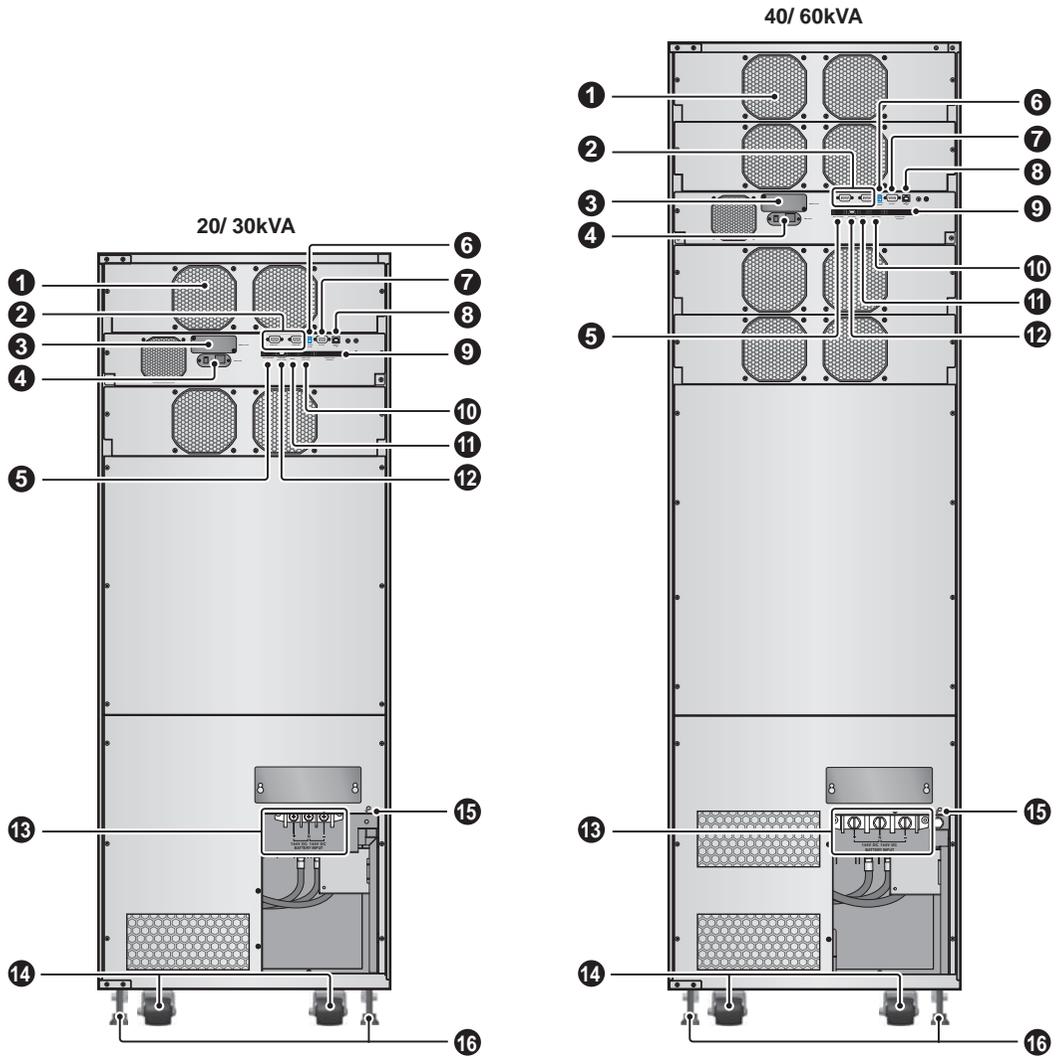

(Figure 3-12: 20/ 30kVA & 40/ 60kVA Rear View)

No.	Item	Description
①	DC Fans	Cool and ventilate the UPS.
②	Parallel Ports	For UPS parallel usage.
③	SMART Slot	Connects SNMP/ Relay I/O/ MODBUS card.
④	MINI Slot	Connects Mini SNMP/ Mini Relay I/O/ Mini USB/ Mini MODBUS/ Mini TVSS card.


No.	Item	Description
⑤	Battery Dry Contacts	Detects at maximum two external battery cabinets' temperature.
⑥	Parallel Switch	Controls parallel ports' status (ON or OFF).
⑦	RS-232 Port	Connects to a computer.
⑧	USB Port	Connects to a computer.
⑨	Output Dry Contacts	Receive the UPS system's event information.
⑩	Input Dry Contacts	Receive external information of devices connected to the input dry contacts.
⑪	REPO Port	When an emergency event occurs, the UPS immediately disconnects the power supply and shuts down the unit safely.
⑫	Charger Detection Port	Connects to a charger box and detects the charger status.
⑬	Battery Input Terminal Block (+/- / N)	 NOTE: Please remove the bottom panel to see the Battery Input Terminal Block. Connects an external battery cabinet. Only batteries with the same type and rating can be paralleled.
⑭	Casters	The casters are designed for a short distance movement only. Do not use the casters to move the UPS over a long distance. The casters are not designed to provide long-term support for the UPS after installation. Please refer to 5.4 UPS Installation for how to firmly fix the UPS on the ground.
⑮	⏏	For external battery cabinet's grounding.
⑯	Levelers	The levelers are designed to provide long-term support for the UPS.

Chapter 4 : Operation Modes

This chapter provides a basic description of the UPS system's path of electrical power in its various operating modes.

- **Online Mode**


The critical load is supplied by the inverter, which derives its power from the utility AC power, and the UPS charges the batteries as needed and provides power protection to the equipment. During on-line mode, the NORMAL LED indicator (NORMAL) illuminates (green).

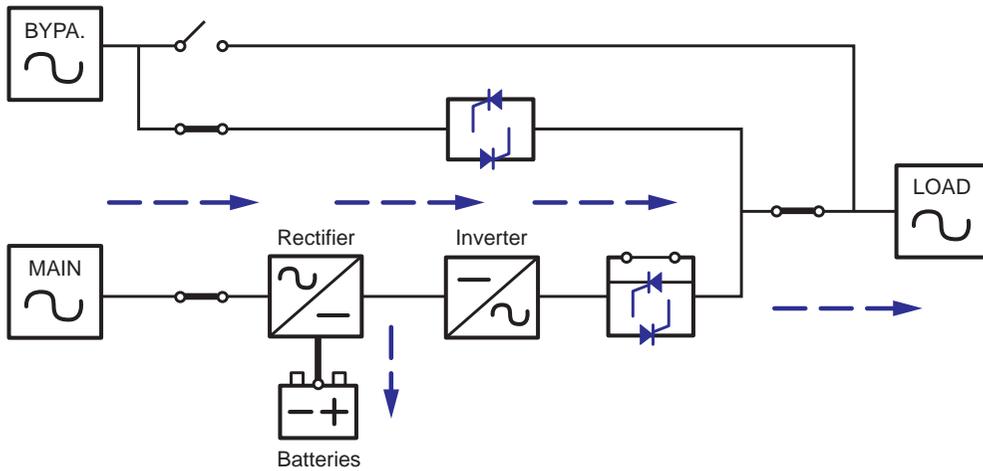

(Figure 4-1: Path of Electrical Power through the UPS in Online Mode)

- **Standby Mode**


When the input voltage and frequency of the utility AC power are within the normal range, the UPS runs in standby mode and charges the batteries. The bypass and the inverter have no output.

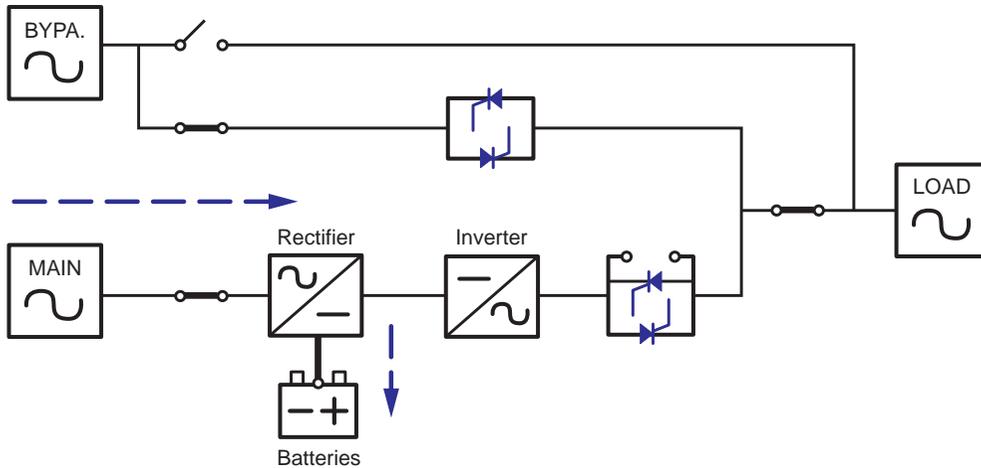

(Figure 4-2: Path of Electrical Power through the UPS in Standby Mode)

- **ECO Mode**


The UPS can be set in ECO mode manually. In ECO mode, when the utility input voltage is within the $\pm 10\%$ range of rated voltage, the load is supplied by the utility power and the BYPASS LED indicator (**BYPASS**) illuminates (yellow); if out of the range, the load is supplied by the inverter and the NORMAL LED indicator (**NORMAL**) illuminates (green).

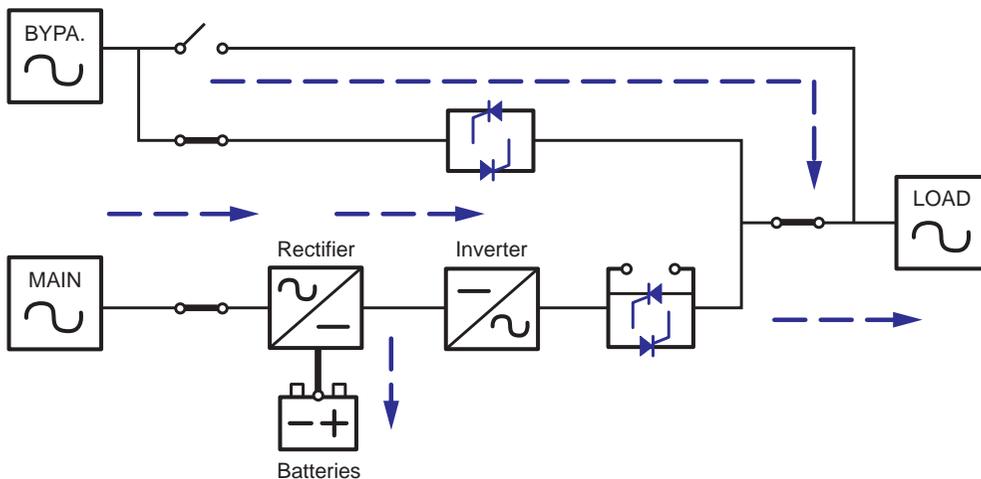

(Figure 4-3: Path of Electrical Power through the UPS in ECO Mode)

- **Battery Mode**

When the UPS is operating during a power outage, the batteries provide DC power, which maintains inverter operation to support the critical load. During battery mode, the BATTERY LED indicator ( BATTERY) illuminates (yellow).

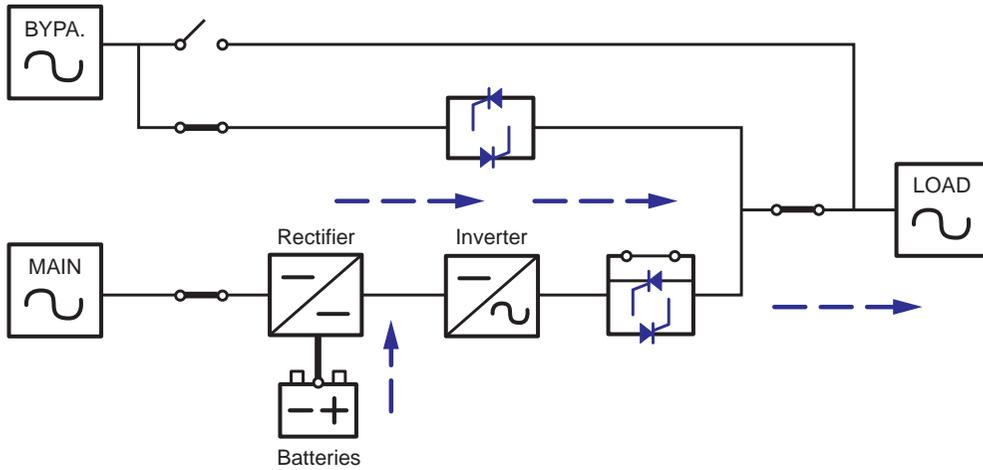


(Figure 4-4: Path of Electrical Power through the UPS in Battery Mode)

Table 4-1: The battery status is as follows

Battery Capacity	Buzzer	LCD Display
Full/ Mid	The alarm beeps once every 10 seconds. (ON for 0.1 second and OFF for 9.9 seconds)	BATTERY CAPACITY 00V/ 000%
Low	The alarm beeps once every 0.5 second. (ON for 0.1 second and OFF for 0.4 second)	BATTERY CAPACITY 00V/ 000%
Depleted	Long beep	SHUT DOWN DUE TO LOW BATTERY

• **Bypass Mode**

The critical load is directly supplied by the utility power and the batteries are charged. During bypass mode, the BYPASS LED indicator ( **BYPASS**) illuminates (yellow).

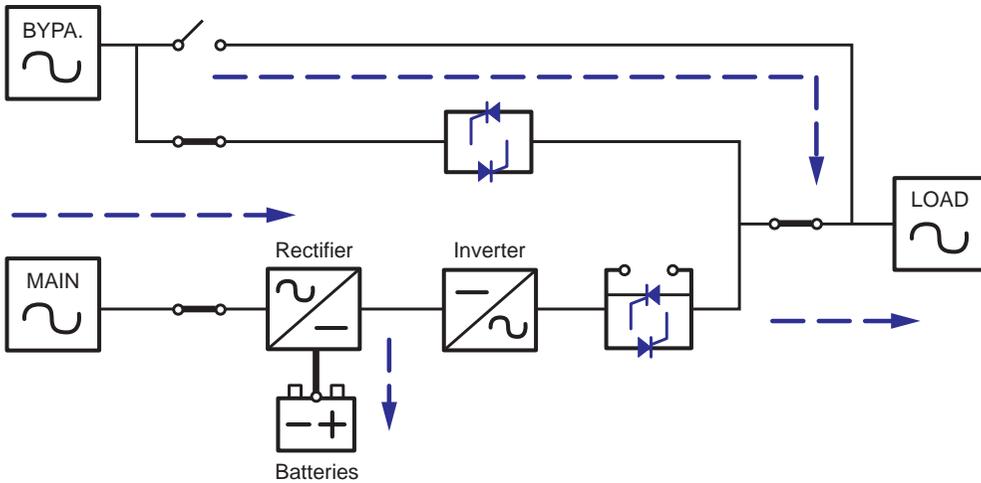

(Figure 4-5: Path of Electrical Power through the UPS in Bypass Mode)


• **Manual Bypass Mode**

If UPS system maintenance or repair is required, the UPS system may be bypassed without interrupting the supply of power to the attached load.



WARNING:


The UPS system must be de-energized completely before performing maintenance or repair by shutting it down completely after switching to manual bypass mode.

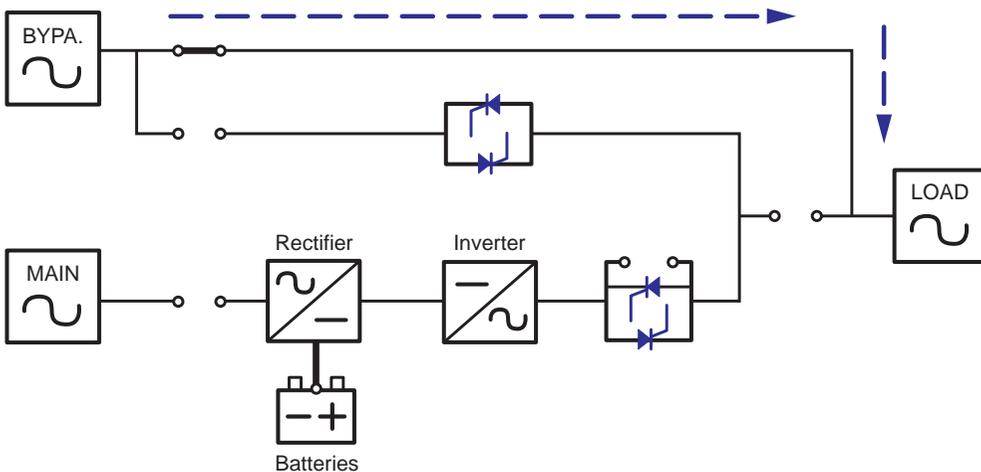

(Figure 4-6: Path of Electrical Power through the UPS in Manual Bypass Mode)

- **Converter Mode**

When the UPS is manually set in converter mode, the output frequency can be set as 50Hz or 60Hz. After the output frequency is set up, the system will automatically disable the bypass function. Once the inverter shuts down, there is no bypass output. During converter mode, the NORMAL LED indicator (NORMAL) illuminates (green).

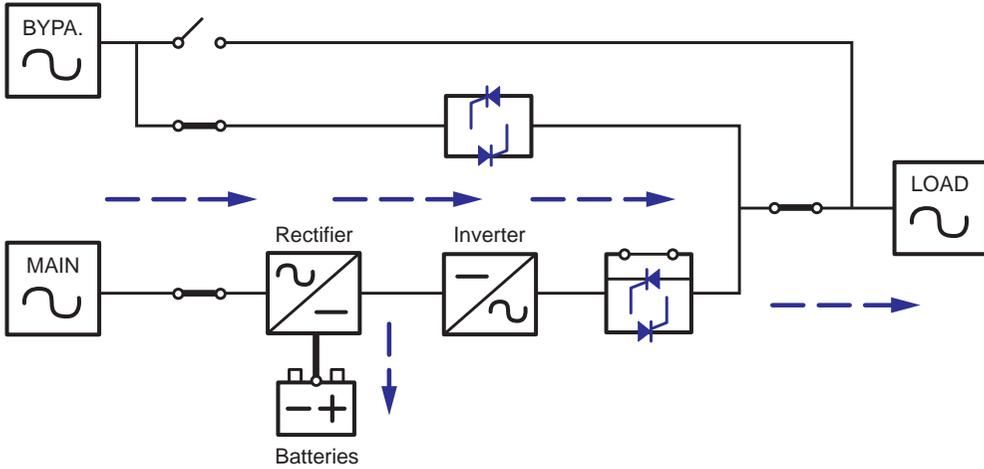

(Figure 4-7: Path of Electrical Power through the UPS in Converter Mode)

Chapter 5 : Installation and Wiring

5.1 Precautions Prior to Installation and Wiring

Please read this user manual thoroughly before installation and wiring. Only authorized Delta engineers or qualified service personnel can perform installation and wiring. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or qualified service personnel. If you use a forklift or other equipment to move the UPS, please make sure its load bearing is sufficient. For the weight of the UPS, please refer to **Appendix 1: Technical Specifications**.

5.2 Installation Environment

- Install the UPS indoors. Do not place it outdoors.
- Make sure that transportation routes (e.g. corridors, doors, gates, elevators, floors, etc.) and installation area can accommodate and bear the weight of the UPS, any associated battery cabinets and all handling equipment. For the weight of the UPS, please refer to **Appendix 1: Technical Specifications**.
- The installation place must be kept clean and tidy at all times.
- Ensure that the installation area is big enough for maintenance and ventilation. Since the fans of the UPS ventilate from the front to the rear, it is recommended that you place the external battery cabinet next to the UPS and:
 1. Keep a distance of 100cm from the front of the UPS and the external battery cabinet for maintenance and ventilation.
 2. Keep a distance of 50cm from the rear and both sides of the UPS and the external battery cabinet for maintenance and ventilation.
- Keep the installation area's temperature around 0°C ~ 30°C and humidity below 95%. The highest operating altitude is 2000 meters above sea level. Please consider the derating values when operating the UPS over 1000 meters. The optimum operating temperature for the batteries is 25°C.

**WARNING:**

Do not use air conditioners or similar equipment to blow into the rear side of the UPS and hinder ventilation.


5.3 UPS Transportation & Handling

There are four casters at the bottom of the UPS. Please pay attention to the movement of the casters to avoid accidents when you move the UPS from its pallet. The casters are designed to move on level ground. Do not move the UPS on an uneven surface. This might cause damage to the casters or tip the UPS which could damage the unit. If you need to move the UPS over a long distance, please use appropriate equipment like a forklift. Do not use the UPS casters to move the unit over a long distance.

5.4 UPS Installation


To avoid tipping the UPS, please reinstall the balance supports that were removed from the UPS during the unpacking process. Please follow the following steps.

- 1 After you decide the installation area, follow the mounting hole diagram below to drill holes.

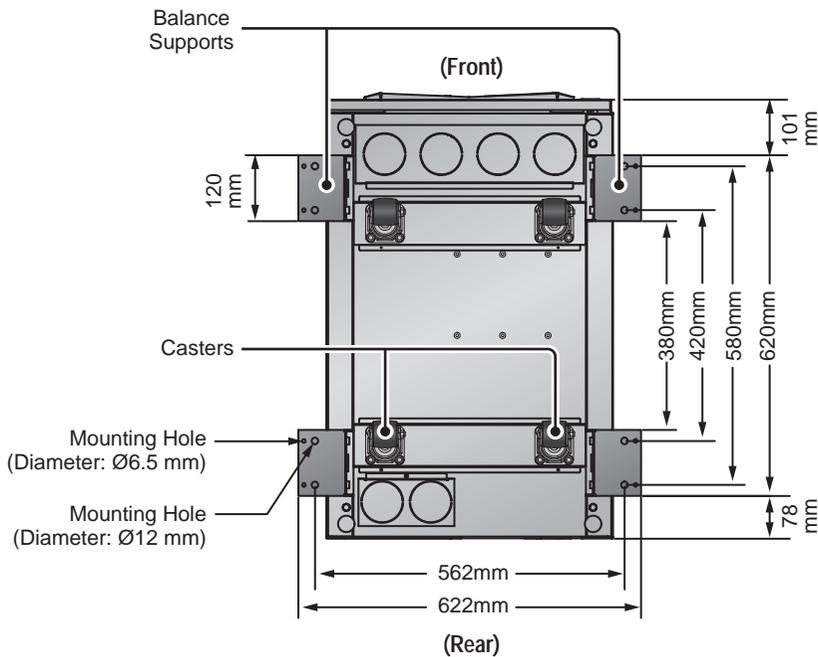


(Figure 5-1: Mounting Hole Diagram)

- 2 Place the UPS over the drilled holes, use the levelers to stabilize the UPS on the ground and use the M8 screws (that were removed from the UPS during the unpacking process) to reinstall the balance supports on the UPS. Please refer to the figure below.

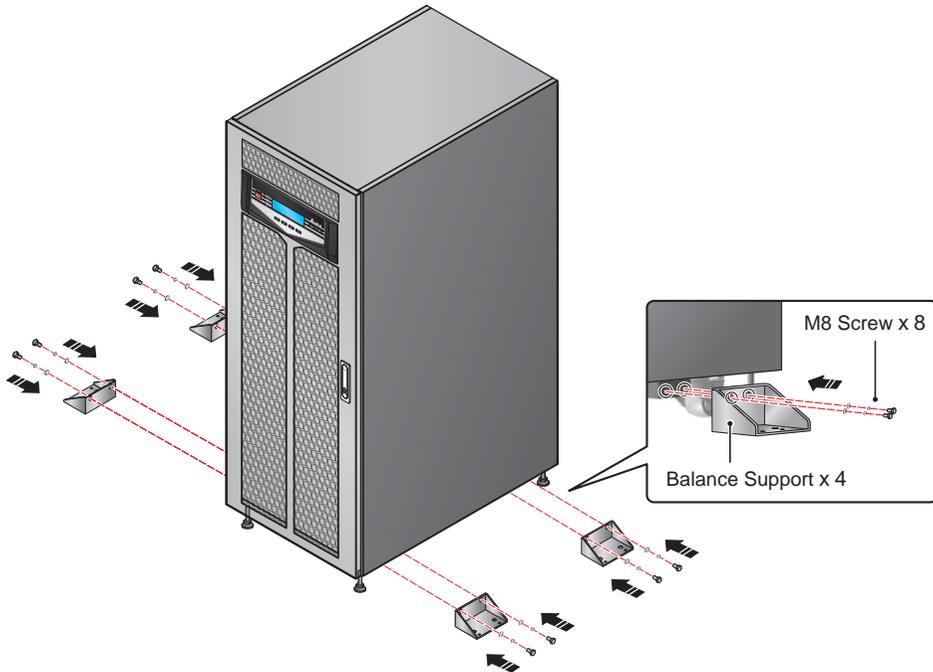

(Figure 5-2: Balance Support Installation)

- 3 Use eight user-supplied M10 bolts to fix the four balance supports on the ground to avoid UPS movement.

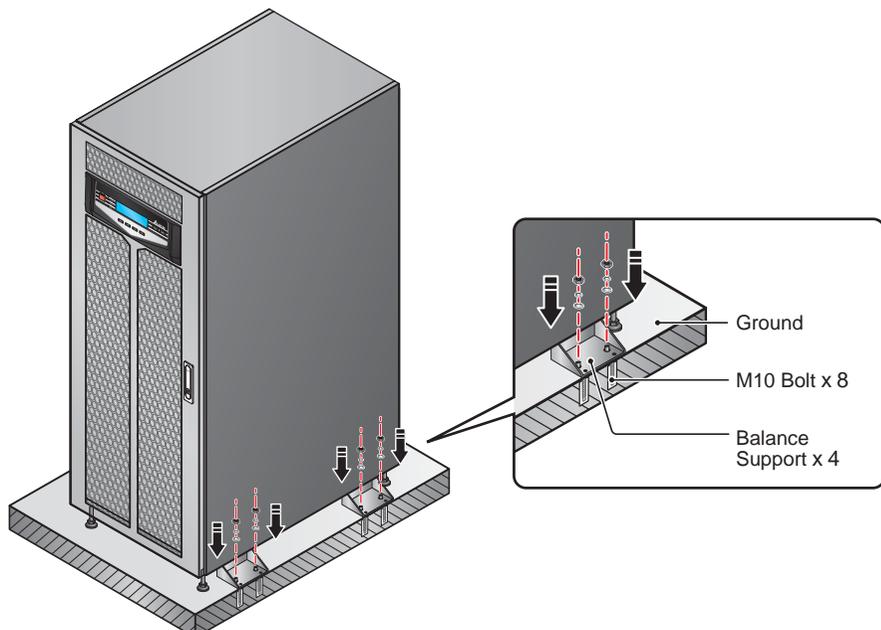

(Figure 5-3: Fix the Balance Supports on the Ground)

5.5 Wiring

5.5.1 Precautions Prior to Wiring

- The wiring must be performed by qualified professional personnel.
- Before wiring or making any electrical connection, make sure the power supplied to the input and output of the UPS is completely cut off and the internal and external batteries are completely disconnected.
- When connecting the UPS to the utility AC power and bypass source, protective devices and 4-pole contactors must be installed. The protective devices and 4-pole contactors must use approved components that meet safety certifications. Please refer to the table below for suggested protective devices. For the installation of the protective devices and 4-pole contactors, please see **Figure 5-9, 5-10, 5-12 and 5-13**.

UPS	Suggested Protective Device
20kVA	D-Curve 75A circuit breaker
30kVA	D-Curve 125A circuit breaker
40kVA	D-Curve 150A circuit breaker
60kVA	D-Curve 225A circuit breaker

- When connecting the critical loads to the UPS, a listed certified breaker must be installed between them. Refer to the table below.

UPS	Suggested 3-Pole Circuit Breaker
20kVA	C-Curve 75A circuit breaker
30kVA	C-Curve 125A circuit breaker
40kVA	C-Curve 150A circuit breaker
60kVA	C-Curve 225A circuit breaker

- Check that the size, diameter, phase, and polarity of each cable connecting to the UPS is correct. For the specifications of input/ output/ battery cables and circuit breakers, please refer to **Table 5-1**.

Table 5-1: Specifications of Input/ Output/ Battery Cables and Circuit Breakers

Capacity (kVA)	20kVA	30kVA	40K kVA	60K kVA
AC Input Cable*	2 AWG (25mm ²)	1/0 AWG (50 mm ²)	3/0 AWG (70 mm ²)	250 kcmil (120 mm ²)
Bypass Input Cable*	2 AWG (25mm ²)	1/0 AWG (50 mm ²)	3/0 AWG (70 mm ²)	250 kcmil (120 mm ²)
Output Cable*	2 AWG (25mm ²)	1/0 AWG (50 mm ²)	3/0 AWG (70 mm ²)	250 kcmil (120 mm ²)
Battery Input Cable*	1 AWG (35 mm ²)	1/0 AWG (50 mm ²)	3/0 AWG (70 mm ²)	300 kcmil (150 mm ²)
Tightening Torque	130 inch lbs.			
Input Breaker	75A (3-polex1)	125A (3-polex1)	150A (3-polex1)	225A (3-polex1)

* Use only cooper wire rated 90°C or higher.

**NOTE:**

1. In accordance with National Electrical Codes (NEC), please install a suitable conduit and bushing.
 2. Please refer to national and local electrical codes for acceptable non-fuse breakers and cable size.
 3. Cables with PVC material and with temperature resistance up to 105°C are suggested.
 4. Make sure that the input/ output/ battery cables are locked tightly.
- When connecting with the external battery cabinet, please confirm the polarity. Do not reverse the polarity.
 - The grounding cable of the external battery cabinet must be connected to the (\perp) terminal of the battery terminal block.
 - Installer should consider the maximum current and wiring gauge that may be required for future expansion of parallel configurations.
 - The UPS default setting is single input. If there is an intention to change the UPS into dual input or hot standby redundancy configuration, please contact qualified service personnel. Check whether the electric potential of the neutral line (N) of the bypass source is the same as that of the neutral line (N) of the main AC source. If they do not share a common neutral line system, add an isolation transformer to the bypass source.

- The input of the UPS must be a Y connection, and the neutral line (N) must be connected to avoid UPS failure. Do not connect the UPS's neutral line (N) with the ground terminal (⊕).
- If there is a floating voltage between the input power's neutral (N) and the ground (⊕) and you require that the VNG of the UPS should be zero, it is suggested an isolation transformer be installed in front of the UPS input side and the UPS neutral (N) be connected with the ground (⊕).
- The utility AC power must be three phases (R/ S/ T) and meet specifications on the UPS rating label. When connecting the utility input power to the UPS, make sure it is in positive phase sequence.
- Connect the external battery cabinet's grounding terminal to the grounding terminal (⊕) of the UPS's battery terminal block. Do not connect the grounding terminal of the external battery cabinet to any other grounding system.
- The ground terminal (⊕) of the UPS must be grounded. Please use ring-type terminal for wiring.



WARNING:

1. Incorrect wiring will lead to severe electric shock and damage to the UPS.
2. For single input, the UPS will not work normally if the main input power's neutral (N) is not firmly connected or is not connected to the AC Input Block's neutral (N) terminal.

For dual input, the UPS will not work normally if the main input power's neutral (N) is not firmly connected or is not connected to the AC Input Block's neutral (N) terminal, and the bypass power's neutral (N) is not firmly connected or is not connected to the Bypass Input Block's neutral (N) terminal.

5.5.2 Single Input/ Dual Input Modification




WARNING:

1. Only authorized Delta engineers or service personnel can modify single input/ dual input setup.
2. For dual input, the main AC source's Neutral (N) must be connected with the bypass source's Neutral (N).

The UPS default setting is single input. If you want to modify it into dual input, please follow the following steps.


- 1 Open the front door and remove the corresponding internal panels. After that, you will see the wiring terminal block.

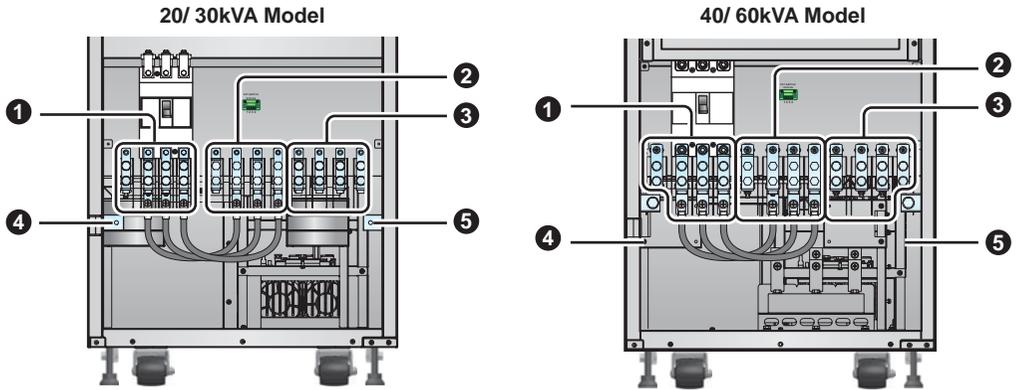

(Figure 5-4: Wiring Terminal Block)

No.	Item	Description
①	AC Input Terminal Block (N/ R/ S/ T)	Connects to the main AC source.
②	Bypass Input Terminal Block (N/ R/ S/ T)	Connects to the bypass source.
③	UPS Output Terminal Block (N/ R/ S/ T)	Connects to the critical loads.
④	⊕	For the UPS grounding.
⑤	⊕	For the critical loads' grounding.

② Remove the three cables shown in **Figure 5-5** to modify the UPS from single input into dual input.

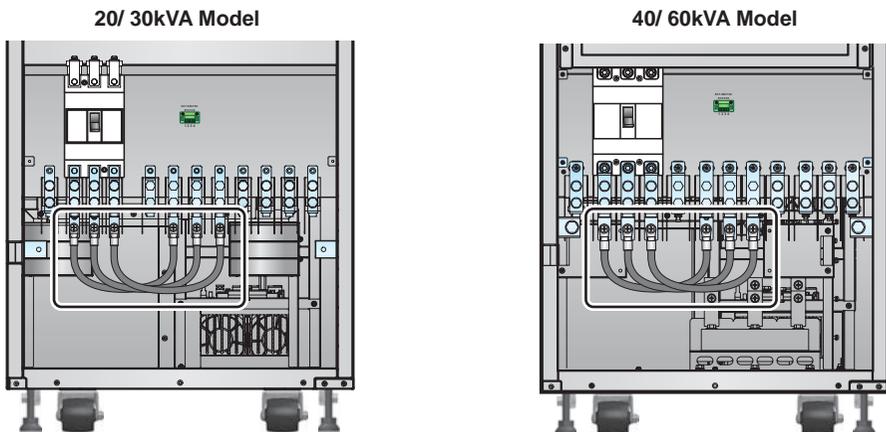

(Figure 5-5: Three Cables Location)



NOTE: If you want to modify the UPS from dual input into single input, please reinstall the three cables shown in **Figure 5-5**.

5.5.3 Single Unit Wiring




NOTE: Prior to wiring, please read **5.5.1 Precautions Prior to Wiring** first.

- **Single Input (Single Unit)**

When there is only one AC power source, single unit wiring procedures are as follows.

- 1 Open the UPS's front door, remove the front and rear panels, and you will see the wiring terminal block shown in **Figure 5-6 ~ Figure 5-8**.

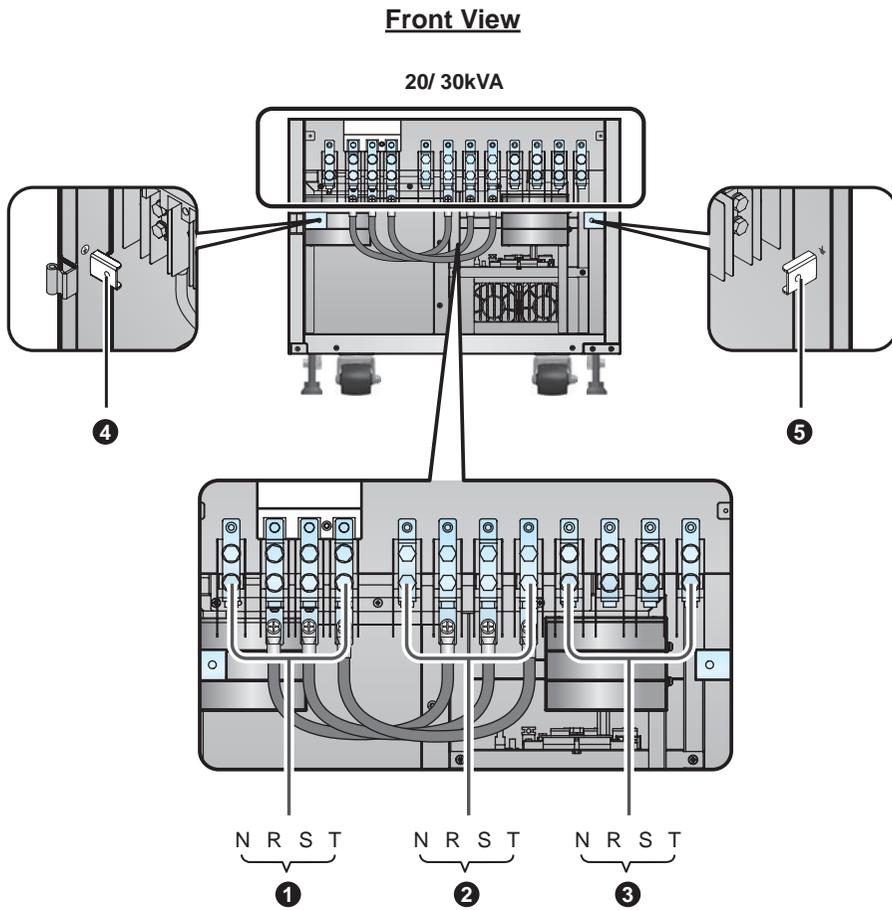


(Figure 5-6: Front View_Wring Terminal Block_20/ 30kVA)


- 2) Ensure that you understand the functions of the wiring terminal block shown in **Figure 5-6 ~ Figure 5-8**.

No.	Item	Description
1	AC Input Terminal Block (N/ R/ S/ T)	Connects to the main AC source.
2	Bypass Input Terminal Block (N/ R/ S/ T)	Connects to the bypass source.
3	UPS Output Terminal Block (N/ R/ S/ T)	Connects to the critical loads.
4		For the UPS grounding.
5		For the critical loads' grounding.
6	Battery Input Terminal Block (+/ -/ N)	 NOTE: Please remove the bottom panel to see the Battery Input Terminal Block. Connects an external battery cabinet. Only batteries with the same type and rating can be paralleled.
7		For the external battery cabinet's grounding.

- 3) Confirm the UPS rating voltage is 120/ 208Vac or 127/220Vac, and the battery rating voltage is ± 144 Vdc.
- 4) Confirm the input breaker is in the **OFF** position. For the position of the breaker, refer to **Figure 3-6**.
- 5) Select the proper input, output and battery cables according to the UPS capacity (please refer to **Table 5-1**).
- 6) Connect the main AC source/ output/ external battery cabinet cables to the relevant wiring terminal blocks and do not forget to ground the UPS (please refer to **Figure 5-9** and **Figure 5-10**).

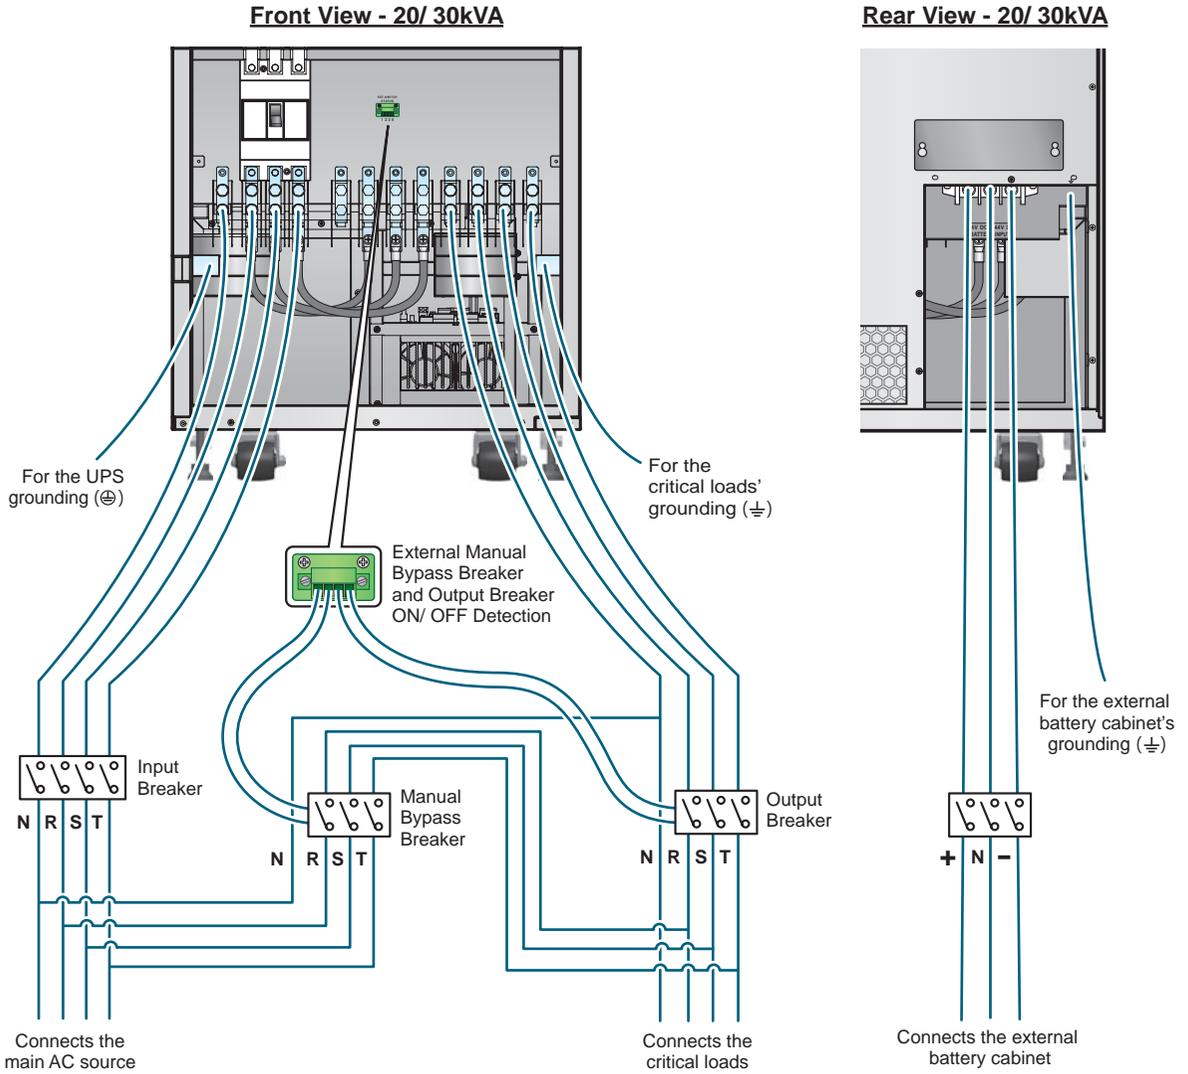

(Figure 5-9: Single Unit Single Input Wiring Diagram_20/30kVA)

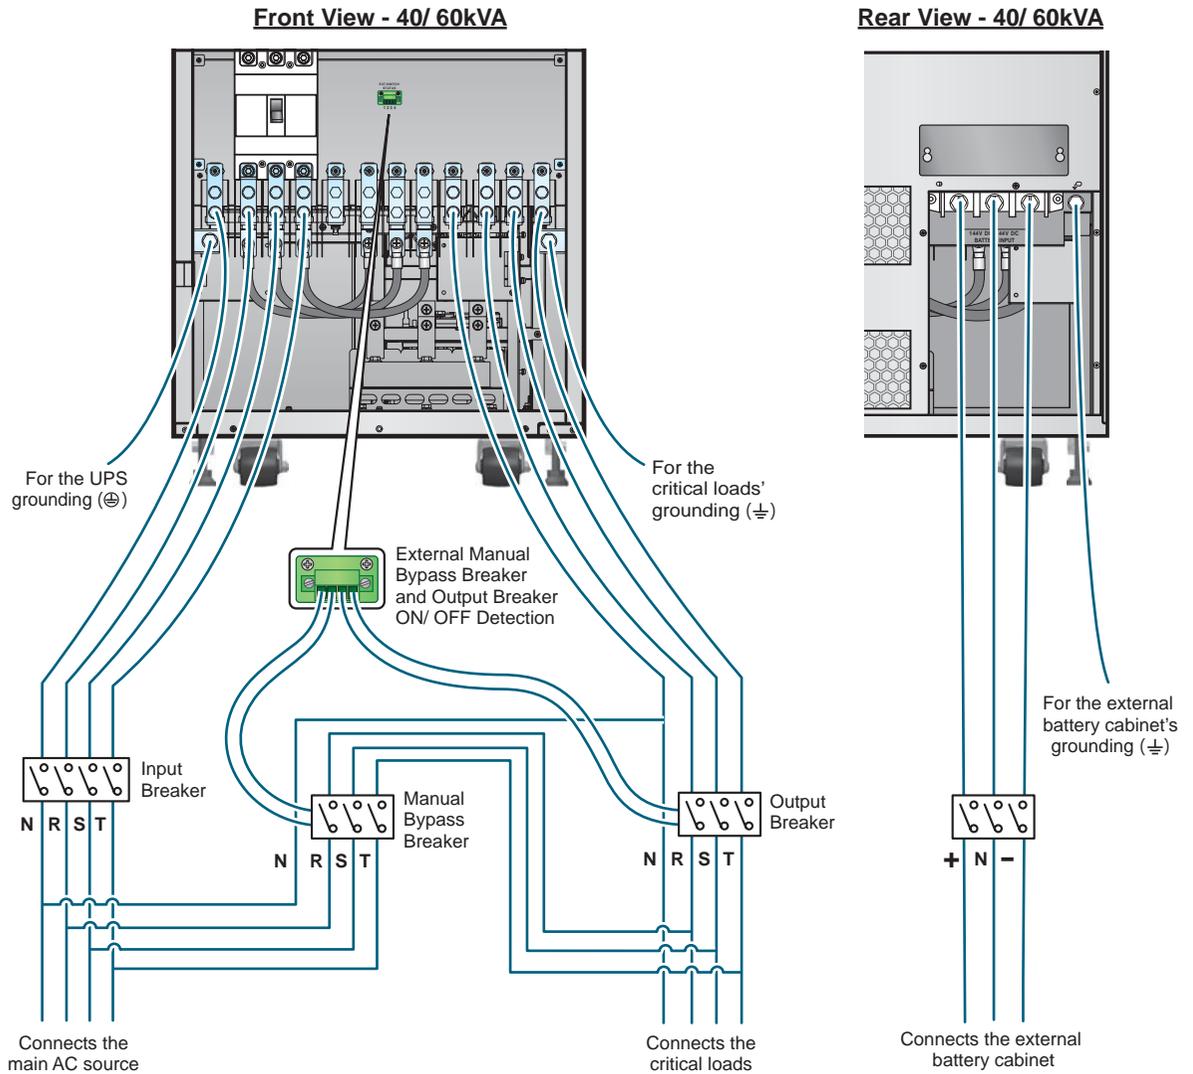

(Figure 5-10: Single Unit Single Input Wiring Diagram_40/60kVA)


- 7 Only qualified service personnel can perform internal battery installation and wiring. For UPS with part No. GES203HH77B035 or GES303HH77B035 or GES403H-H77B035 or GES603HH77B035, open the UPS's front door, follow the table below to install correct strings of batteries (not provided; for battery type, please contact service personnel) and the battery kit (not provided). Do not connect the batteries in reverse. For internal battery installation and wiring, please refer to **Figure 5-11**. For battery kit installation, please contact service personnel.

Table 5-2: How many strings of batteries should be installed?

UPS	20kVA	30kVA	40K kVA	60K kVA
String Q'ty	4	6	6	8
Battery Q'ty	48	72	72	96

 **NOTE:** One string includes 12 batteries.

Front View with Door Open and Internal Panel Removal

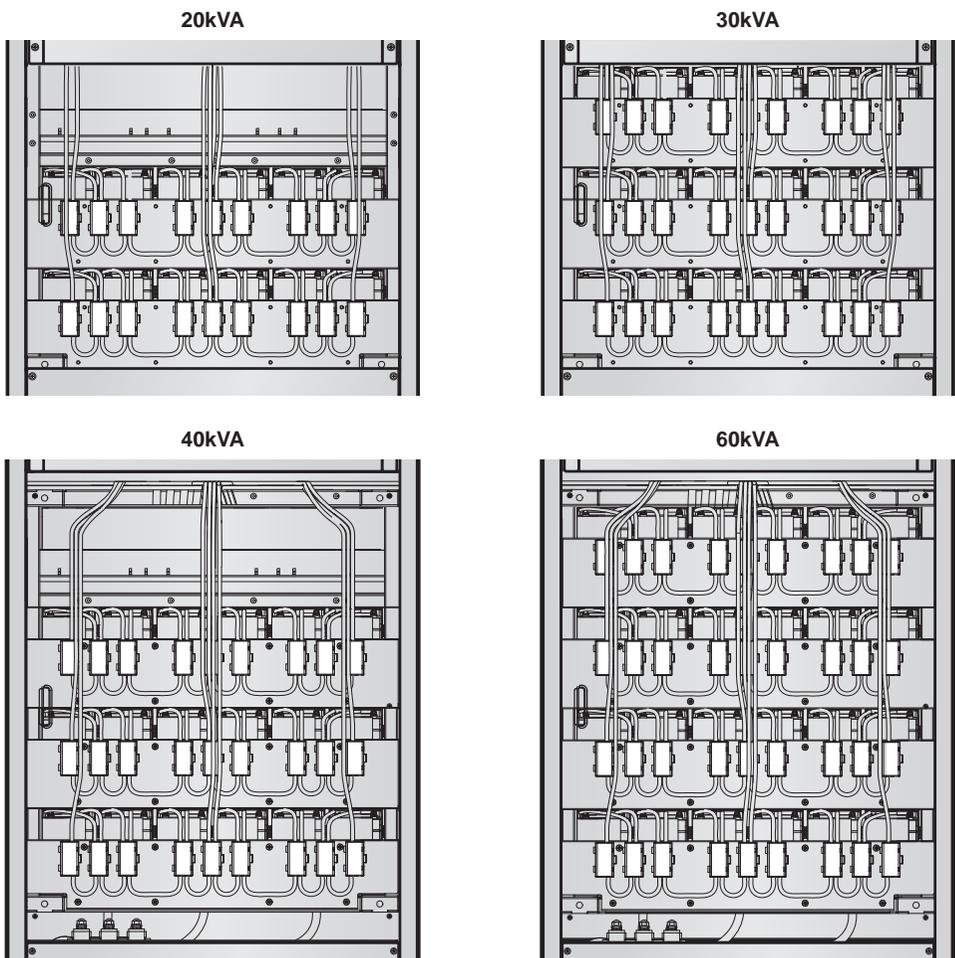


(Figure 5-11: Internal Battery Installation and Wiring)


- **Dual Input (Single Unit)**

When there are two AC power sources, single unit wiring procedures are as follows.

- 1 Follow **5.5.2 Single Input/ Dual Input Modification** to modify the UPS into dual input. Please note that only authorized Delta engineers or service personnel can modify single input/ dual input setup.
- 2 Follow steps 1 ~ 5 stated in section **Single Input (Single Unit)**.
- 3 Connect the main AC source/ bypass source/ output/ external battery cabinet cables to the relevant wiring terminal blocks and do not forget to ground the UPS (please refer to **Figure 5-12** and **Figure 5-13**).

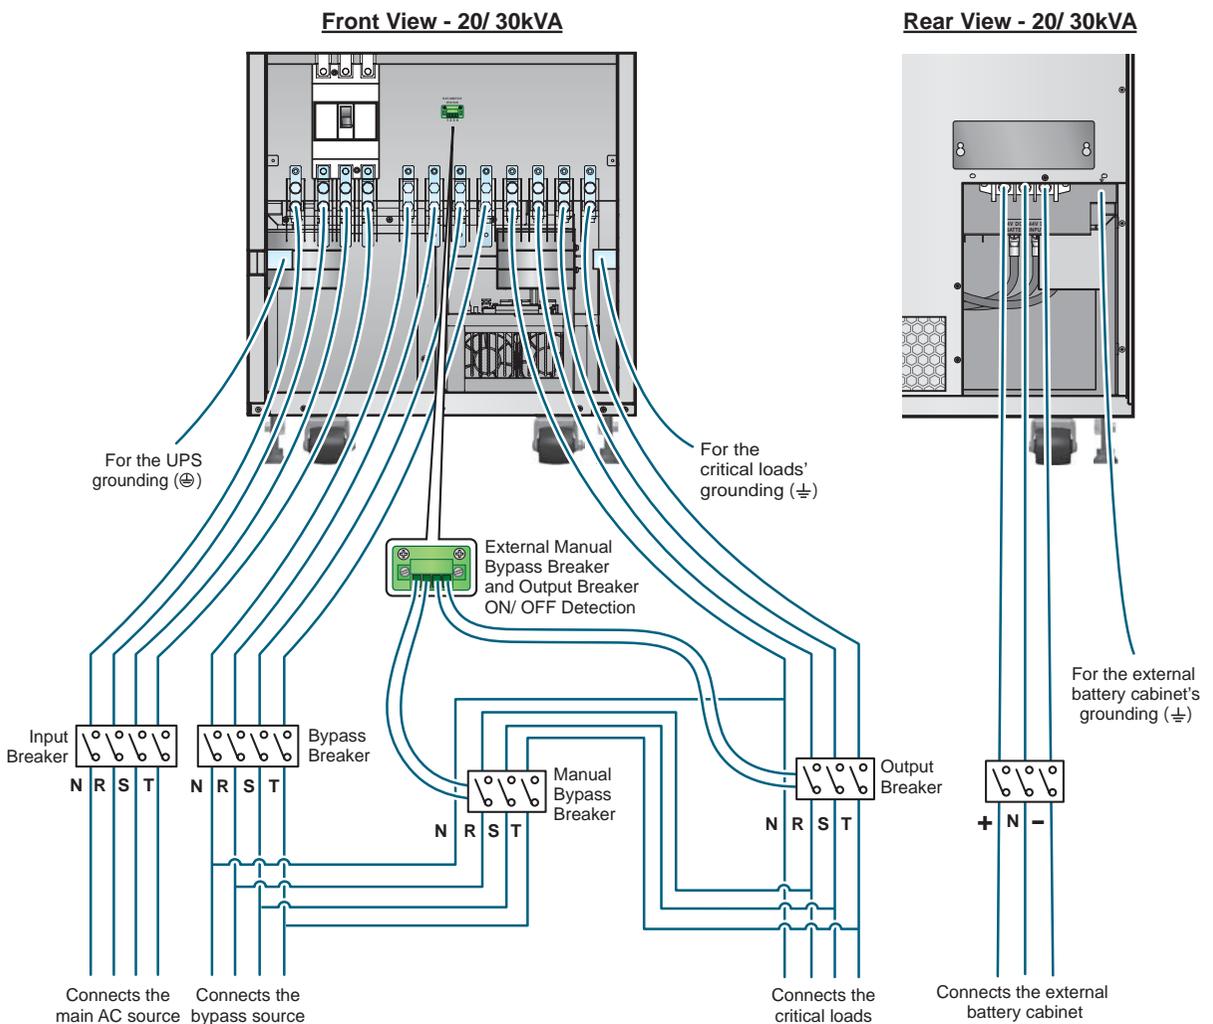

(Figure 5-12: Single Unit Dual Input Wiring Diagram_20/ 30kVA)

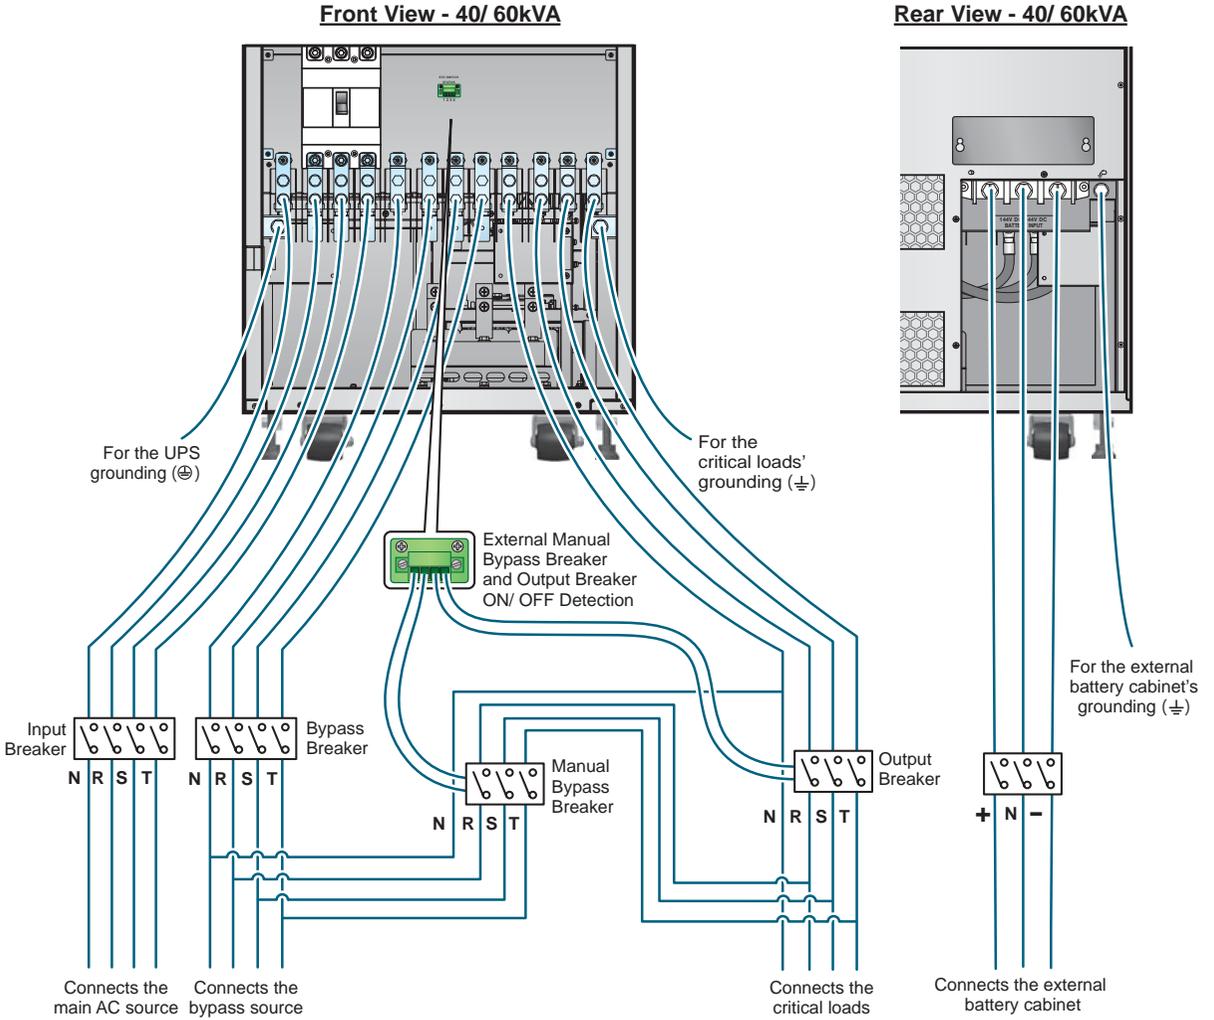

(Figure 5-13: Single Unit Dual Input Wiring Diagram_40/ 60kVA)

4 Follow step 7 stated in section **Single Input (Single Unit)**.

5.5.4 Parallel Units Wiring




NOTE: Prior to wiring, please read **5.5.1 Precautions Prior to Wiring** first.

- **Single Input (Parallel Units)**

When there is only one AC power source, single unit wiring procedures are as follows.

- 1 Please follow steps 1 ~ 5 stated in section **Single Input (Single Unit)**.
- 2 Connect the main AC source/ output/ external battery cabinet cables to the relevant wiring terminal blocks and do not forget to ground the parallel UPSs (please refer to **Figure 5-9 ~ 5-10** and **Figure 5-14**).

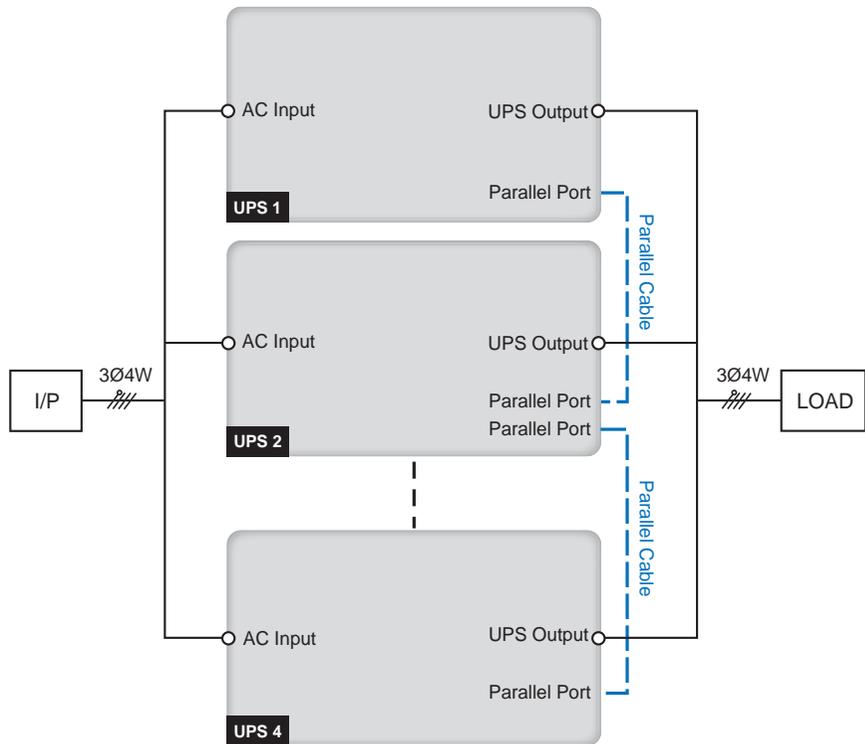


(Figure 5-14: Parallel Units Single Input Wiring Diagram)

- 3 Use the provided parallel cable to connect the parallel ports on the parallel units. Please see **Figure 3-12** for parallel port location.
- 4 Set up each UPS's parallel switch in the **ON** or **OFF** position.

**NOTE:**

When you parallel UPSs, you need to set up each UPS's parallel switch to activate parallel function. The parallel switch includes two DIP switches. To turn on a DIP switch, switch the DIP to the down position; to turn off a DIP switch, switch the DIP to the up position.

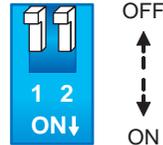Parallel Switch

1. When two UPSs are paralleled, turn on each UPS's DIP switches.
2. When three UPSs are paralleled, turn off the middle UPS's DIP switches and turn on the remaining UPSs' DIP switches.
3. When four UPSs are paralleled, turn off the middle two UPSs' DIP switches and turn on the remaining UPSs' DIP switches.

⑤ Follow step ⑦ stated in section **Single Input (Single Unit)**.


**WARNING:**

1. When UPSs are paralleled, the length of each unit's input cables/ output cables must be equal. This ensures that the parallel UPSs can equally share the equipment loads in bypass mode.
2. Only UPSs with the same capacity, voltage and frequency can be paralleled; otherwise, parallel functions will fail.
3. Before start-up of parallel units, qualified service personnel should set ID (0, 1, 2 or 3) through the LCD. Otherwise, parallel UPSs cannot be started. If the symbol '!' appears after an ID number, it indicates there is a conflict between ID numbers.

- **Dual Input (Parallel Units)**

When there are two AC power sources, parallel units' wiring procedures are as follows.

- ① Follow **5.5.2 Single Input/ Dual Input Modification** to modify the UPS into dual input. Please note that only authorized Delta engineers or service personnel can modify single input/ dual input setup.
- ② Please follow steps ① ~ ⑤ stated in section **Single Input (Single Unit)**.
- ③ Connect the main AC source/ bypass AC source/ output/ external battery cabinet cables to the relevant wiring terminal blocks and do not forget to ground the parallel UPSs (please refer to **Figure 5-12 ~ 5-13** and **Figure 5-15**).

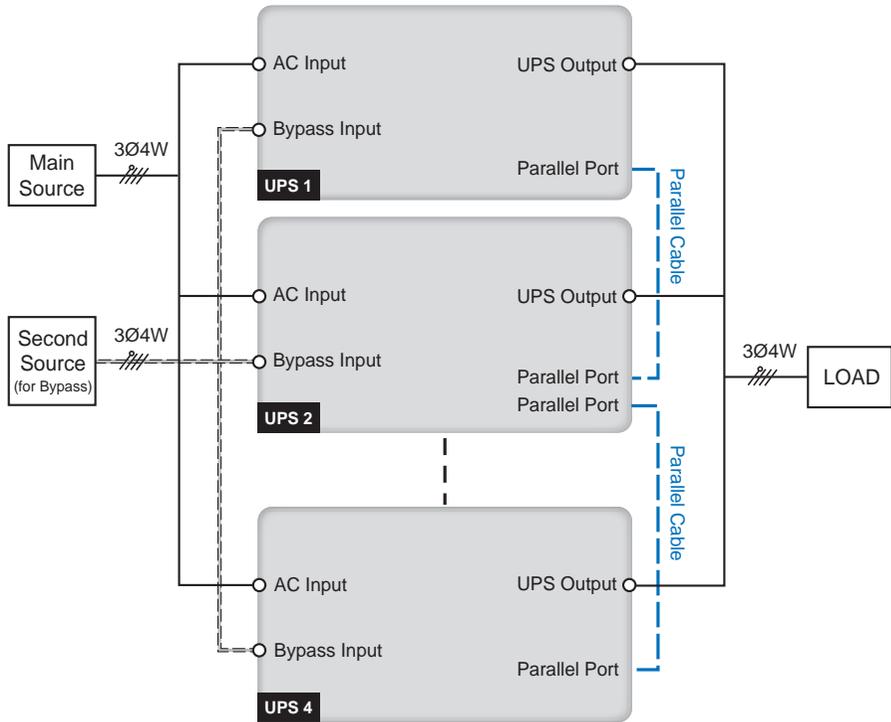

(Figure 5-15: Parallel Units Dual Input Wiring Diagram)


- 4 Use the parallel cable to connect the parallel ports on the parallel units. Please see **Figure 3-12** for parallel port location.
- 5 Set up each UPS's parallel switch in the **ON** or **OFF** position.



NOTE:

When you parallel UPSs, you need to set up each UPS's parallel switch to activate parallel function. The parallel switch includes two DIP switches. To turn on a DIP switch, switch the DIP to the down position; to turn off a DIP switch, switch the DIP to the up position.

Parallel Switch

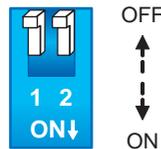

1. When two UPSs are paralleled, turn on each UPS's DIP switches.
2. When three UPSs are paralleled, turn off the middle UPS's DIP switches and turn on the remaining UPSs' DIP switches.
3. When four UPSs are paralleled, turn off the middle two UPSs' DIP switches and turn on the remaining UPSs' DIP switches.

6 Please follow step 7 stated in section **Single Input (Single Unit)**.



WARNING:

1. When UPSs are paralleled, the length of each unit's input cables/ output cables must be equal. This ensures that the parallel UPSs can equally share the equipment loads in bypass mode.
2. Only UPSs with the same capacity, voltage and frequency can be paralleled; otherwise, parallel functions will fail.
3. Before start-up of parallel units, qualified service personnel should set ID (0, 1, 2 or 3) through the LCD. Otherwise, parallel UPSs cannot be started. If the symbol '!' appears after an ID number, it indicates there is a conflict between ID numbers.

5.6 External Battery Cabinet Connection Precautions



WARNING:

1. You can connect loads to the UPS only after the batteries are fully charged. This guarantees that the UPS can provide sufficient backup power to the loads connected when a power failure occurs.
2. A battery can present a risk of electric shock and high short-circuit current. Servicing of batteries and battery cabinets must be performed or supervised by qualified service personnel knowledgeable in batteries, battery cabinets and the required precautions. Keep unauthorized personnel away from batteries and battery cabinets.

• **Battery**

1. Charge Voltage
 - 1) Float voltage: ± 163.2 Vdc (default)
 - 2) Boost voltage: ± 168 Vdc (default)
2. Charge Current

UPS	20 kVA	30 kVA	40K kVA	60K kVA
Default	2A	3A	3A	4A
Minimum	1A	1A	1A	1A
Maximum	10A	10A	20A	20A

3. Low Battery Shutdown: 120Vdc (default: 120Vdc)

4. Number of Internal Batteries:

	20kVA	30 kVA	40K kVA	60K kVA
Internal Battery Q'ty	12Vdc x 48 PCS (Total: 4 Strings)	12Vdc x 72 PCS (Total: 6 Strings)	12Vdc x 72 PCS (Total: 6 Strings)	12Vdc x 96 PCS (Total: 8 Strings)
 NOTE: One string includes 12 batteries.				



NOTE:

1. You can adjust the charge current from 2A to the maximum. Each adjustment level is 0.5A.
2. If you need to modify the charge current default setting and low battery shutdown default setting, please contact your local dealer or service personnel.
3. Only qualified service personnel can perform wiring and installation for external batteries. For external battery installation and wiring, please contact Delta service personnel. The Q'ty of external batteries in one string could be 11 PCS, 12PCS or 13 PCS. When 11 PCS external batteries are installed for one string, please note the following:

Vbat > 123V PF: 0.9 → 1

Vbat < 120V PF: 1 → 0.9

4. For internal battery configuration, one string includes 12 batteries. If you would like to use the internal batteries and the external batteries at the same time, please make sure (1) the Q'ty of external batteries in one string is 12 PCS and (2) the voltage difference between the internal batteries and the external batteries is less than 5Vdc.

- Only use the same type of batteries from the same supplier. Never use old, new and different Ah batteries at the same time.
- The number of batteries must meet UPS requirements.
- Do not connect the batteries in reverse.
- Use a voltage meter to measure whether the total voltage, after the external battery cabinet connection, is around 12.5Vdc × the total number of batteries.
- When connecting the external battery cabinet to the UPS, it is compulsory to install an appropriate non-fuse DC breaker and fast-acting fuses (when short-circuit occurs, the melting current must be 5~6 times of the battery fuse's rating current).




NOTE: Recharge time will be extended; take note of charger capacity.

- To extend battery backup time, you can connect several external battery cabinets to the UPS. Please note that the number of the batteries in each paralleled external battery cabinet must be the same.

UPS	20 kVA	30 kVA	40K kVA	60K kVA
Circuit Breaker Rating Current	75A	125A	150A	225A
Battery Cable	35 mm ²	50 mm ²	95 mm ²	120 mm ²
Battery Fuse	80A	125A	150A	225A

- The breaker must be a 3-pole non-fuse DC breaker with characteristics of 1-pole 125Vdc, 2-pole 300Vdc and 3-pole 450Vdc. Follow **Figure 5-16** to install a 3-pole non-fuse DC breaker and fast-acting fuses between the UPS and the external battery cabinet.

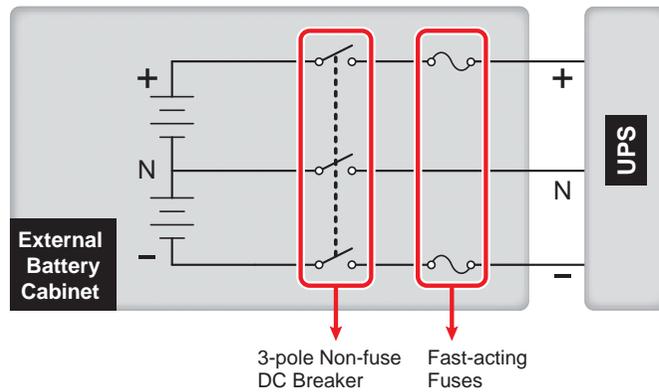

(Figure 5-16: A 3-pole Non-fuse DC Breaker and Fast-acting Fuses Installation)

- The parallel UPSs can connect with common batteries.
- Battery Alarm**

When the batteries connected to the UPS have the following problems, the UPS system will sound one of the following alarms.

No.	Battery Status	Alarm
1	Battery Test Fail	Sounds once every 2 seconds
2	Battery Low Warning	Sounds once every 0.5 second
3	Battery Low Shutdown	Long beep (5 seconds)
4	Battery Missing	Sounds once every 2 seconds

Chapter 6 : Maintenance

- **UPS**

1. UPS Cleaning:

Regularly clean the UPS, especially the vents and openings, to ensure that the air freely flows into the UPS to avoid overheating. If necessary, use an air-gun to clean the vents and openings to prevent any object from blocking or covering these areas.

2. UPS Regular Inspection:

Regularly check the UPS every half year and inspect:

- 1) Whether the UPS, LEDs, and alarm function are operating normally.
- 2) Whether the UPS works in bypass mode (normally, the UPS will work in normal mode). If yes, check if any error, overload, internal fault, etc. occurs.
- 3) Whether battery voltage is normal. If the battery voltage is too high or too low, find the root cause.

- **Battery**

The HPH 20-60kVA 208V Series UPS uses sealed lead-acid batteries. The battery life depends on the temperature, the usage, and the charging/ discharging frequency. High temperature environments and high charging/ discharging frequency will quickly shorten the battery life. Please follow the suggestions below to ensure a normal battery lifetime.

1. Keep operating temperature between 15°C~25°C.
2. When the UPS needs to be stored for an extended period of time, the batteries must be recharged once every three months and the charging time must not be less than 24 hours each time.

- **Fan**

Higher temperatures shorten fan life. When the UPS is running, please check if all fans work normally and make sure if the ventilation air can move freely around and through the UPS. If not, replace the fans.



NOTE:

Please ask your local dealer or customer service for more maintenance information. Do not perform maintenance if you are not trained for it.

Appendix 1 : Technical Specifications

Model		HPH-20K-LV-B HPH-20K-LV- BN*1	HPH-30K-LV-B HPH-30K-LV- BN*1	HPH-40K-LV-B HPH-40K-LV- BN*1	HPH-60K-LV-B HPH-60K-LV- BN*1
Power Rating		20kVA/20kW	30kVA/30kW	40kVA/40kW	60kVA/60kW
Waveform		Sine Wave			
Input	Nominal Voltage	208/120Vac, 220/127Vac			
	Voltage Range	125~253Vac (L-L)/72 ~ 146Vac (L-N)*2			
	Frequency	50/60 Hz			
	Frequency Range	40 ~ 70 Hz			
	Input Current	67.5A	100A	135A	200A
	Power Factor	> 0.99 (full load)			
Output	Voltage	208/120Vac, 220/127Vac			
	Power Factor	Unity			
	Voltage Regulation	± 1%			
	Voltage Harmonic Distortion	< 1.5% (linear load)			
	Overload Capability	≤ 105%: Continuous; 105%~125%: 10 minutes.; 125~150%: 1 minute.; >150%: 1 second			
	Output Frequency	50/60 Hz ± 0.05 Hz			
Efficiency	Online Mode	Up to 94%			
	ECO Mode	Up to 98%			
Battery	Type	SMF/ VRLA			
	Battery Voltage	± 144 Vdc (default)			
	Charge Current	10A		20A	
	Charge Voltage	Float charge 163 ± 3 Vdc ; Boost charge 168 ± 3 Vdc (default)			
	Discharge Time*3	9.5 minutes (9Ah × 48PCS)	9.5 minutes (9Ah × 72PCS)	6.5 minutes (9Ah × 72PCS)	5.2 minutes (9Ah × 96PCS)

Model		HPH-20K-LV-B HPH-20K-LV- BN*1	HPH-30K-LV-B HPH-30K-LV- BN*1	HPH-40K-LV-B HPH-40K-LV- BN*1	HPH-60K-LV-B HPH-60K-LV- BN*1
Audible Noise		< 65 dBA		< 70 dBA	
LED & LCD		LED indicators and Multi-language LCD display			
Communication Interfaces		SMART Slot x 1, MINI Slot x 1, Parallel Port x 2, RS232 Port x 1, REPO Port x 1, Charger Detection Port x 1, Input Dry Contact x 2, Output Dry Contact x 6			
Environment	Operating Altitude	1000 meters (without derating)			
	Operating Temperature	0 ~ 40°C			
	Ambient Storage Temperature	-15 ~ 40°C			
	Relative Humidity	0% ~ 95% (non-condensing)			
Physical	Dimensions (W x D x H)	520 x 800 x 1380 mm		520 x 800 x 1760 mm	
	Weight (with batt.)	340 kg	420 kg	450 kg	530 kg
	Weight (without batt.)	196 kg	204 kg	234 kg	242 kg



NOTE:

1. Refer to the rating label for the safety rating.
2. All specifications are subject to change without prior notice.
3. *1 : UPS with this model has no batteries inside.
4. *2 : When input voltage range is 72~108Vac (L-N) and 125~187Vac (L-L), the sustainable loading is from 63% to 100% of UPS capacity.
5. *3 : At 70% load with internal batteries.

Appendix 2 : Warranty

Seller warrants this product, if used in accordance with all applicable instructions, to be free from original defects in material and workmanship within the warranty period. If the product has any failure problem within the warranty period, Seller will repair or replace the product at its sole discretion according to the failure situation.

This warranty does not apply to normal wear or to damage resulting from improper installation, operation, usage, maintenance or irresistible force (i.e. war, fire, natural disaster, etc.), and this warranty also expressly excludes all incidental and consequential damages.

Maintenance service for a fee is provided for any damage out of the warranty period. If any maintenance is required, please directly contact the supplier or Seller.

**WARNING:**

The individual user should take care to determine prior to use whether the environment and the load characteristic are suitable, adequate or safe for the installation and the usage of this product. The User Manual must be carefully followed. Seller makes no representation or warranty as to the suitability or fitness of this product for any specific application.

No. 501325210101

Version : V 1.1

Release Date : 2017_08_07



5013252101