



The power behind competitiveness

Delta UPS Ultron Family

IPT Series, Three-Phase, 380/ 400/ 415 Vac
40/ 50/ 100/ 120 kVA

User Manual

SAVE THIS MANUAL

This manual contains important instructions and warnings that you should follow during the installation, operation, storage and maintenance of this product. Failure to heed these instructions and warnings will void the warranty.

Copyright © 2025 by Delta Electronics Inc. All Rights Reserved. All rights of this User Manual ("Manual"), including but not limited to the contents, information, and figures are solely owned and reserved by Delta Electronics Inc. ("Delta"). The Manual can only be applied to the operation or the use of this product. Any disposition, duplication, dissemination, reproduction, modification, translation, extraction, or usage of this Manual in whole or in part is prohibited without the prior written permission of Delta. Given that Delta will continuously improve and develop the product, changes may be made to the information in this Manual at any time without obligation to notify any person of such revision or changes. Delta will make all possible efforts to secure the accuracy and the integrity of this Manual. Delta disclaims any kinds or forms of warranty, guarantee, or undertaking, either expressly or implicitly, including but not limited to the completeness, faultlessness, accuracy, non-infringement, merchantability or fitness for a particular purpose of the Manual.

Table of Contents

SAVE THIS MANUAL	2
Chapter 1 : Important Safety Instructions	7
1.1 Installation Warnings.....	7
1.2 Connection Warnings.....	7
1.3 Usage Warnings	8
1.4 Storage Warnings.....	10
1.5 Standard Compliance	10
Chapter 2 : Introduction	11
2.1 General Overview.....	11
2.2 Package Inspection.....	11
2.3 Functions & Features	15
2.4 Exterior & Dimensions.....	16
2.5 Front View.....	18
2.6 Internal View.....	19
2.7 Tri-color LED Indicator & Buzzer.....	20
Chapter 3 : Operation Modes	23
3.1 On-Line Mode.....	24
3.2 Battery Mode.....	25
3.3 Bypass Mode	26
3.4 Manual Bypass Mode.....	27
3.5 ECO Mode.....	28
3.6 Frequency Conversion Mode.....	29
Chapter 4 : Communication Interfaces	30
4.1 Communication Interfaces (I): on the Front of the UPS with Its Front Door Open.....	31
4.1.1 Display Port.....	32
4.1.2 Parallel Ports.....	32

4.1.3	RS-232 Port & USB Port	33
4.1.4	REPO Dry Contacts	33
4.1.5	External Battery Temperature Detection	34
4.1.6	Input Dry Contacts	34
4.1.7	Output Dry Contacts	36
4.1.8	Backfeed Shunt Trip Function	38
4.1.9	Battery Breaker Status Dry Contacts	39
4.1.10	External RS-485 Port	39
4.1.11	Battery Start Button	40
4.2	Communication Interfaces (II): at the Rear of the Touch Panel	40
4.3	Cable Routing for the Communication Interfaces	42
Chapter 5 : Installation and Wiring		44
5.1	Before Installation and Wiring	44
5.2	Installation Environment	44
5.3	UPS Installation	46
5.4	Wiring	53
5.4.1	Pre-wiring Warnings	53
5.4.2	Single Input to Dual Input Modification	57
5.4.3	Single Unit Wiring	58
5.4.3.1	Single Input (Single Unit)	59
5.4.3.2	Dual Input (Single Unit)	62
5.4.4	Parallel Units Wiring	64
5.5	External Battery Cabinet Connection Warnings	66
5.6	Installation of Rodent Shields	75
Chapter 6 : UPS Operation		78
6.1	Pre Start-up & Pre Turn-off Warnings	78
6.2	Start-up Procedures	79
6.2.1	On-Line Mode Start-up Procedures	79
6.2.2	Battery Mode Start-up Procedures	80
6.2.3	Bypass Mode Start-up Procedures	81
6.2.4	Manual Bypass Mode Start-up Procedures	82

6.2.5	ECO Mode Start-up Procedures	84
6.2.6	Frequency Conversion Start-up Procedures	86
6.3	Turn-off Procedures.....	88
6.3.1	On-Line Mode Turn-off Procedures	88
6.3.2	Battery Mode Turn-off Procedures	89
6.3.3	Bypass Mode Turn-off Procedures	89
6.3.4	Manual Bypass Mode Turn-off Procedures	90
6.3.5	ECO Mode Turn-off Procedures	90
6.3.6	Frequency Conversion Mode Turn-off Procedures	90
6.4	Start-up & Turn off Procedures for Parallel Units	91
Chapter 7 : LCD Display & Settings		94
7.1	LCD Display Hierarchy	94
7.2	How to Turn on the LCD	98
7.3	Introduction of Touch Panel and Function Keys.....	99
7.4	Password Entry	104
7.5	Check Kilowatt-Hour	105
7.6	UPS Settings.....	107
7.6.1	Bypass Setting.....	107
7.6.2	Mode Setting	107
7.6.3	Input & Output Setting	108
7.6.4	Battery & Charging Setting.....	109
7.6.5	Parallel Setting.....	111
7.6.6	Dry Contact Setting	112
7.6.7	General Setting.....	113
7.6.8	Net Setting.....	115
7.6.9	Net Notification	118
7.6.10	Control.....	119
7.7	System Maintenance	120
7.7.1	Warning	120
7.7.2	Historical Event	121
7.7.3	Statistics	121
7.7.4	Test.....	121
7.7.5	Clear	122

7.7.6	Advanced Diagnosis	122
7.7.7	Version & S/N.....	123
Chapter 8 : Optional Accessories		124
8.1	EMS Function on the LCD Screen.....	125
Chapter 9 : Maintenance.....		129
Appendix 1 : Technical Specifications		130
Appendix 2 : Warranty.....		134

Chapter 1 : Important Safety Instructions

1.1 Installation Warnings

- This is a three-phase on-line uninterruptible power supply (hereafter referred to as 'UPS'). It can be used for commercial and industrial applications.
- Install the UPS in a well-ventilated area, away from excess moisture, heat, dust, flammable gas or explosives. To avoid fire accidents and electric shock, the indoor area must be free of conductive contaminants. For the temperature and humidity specifications, please refer to *Appendix 1: Technical Specifications*.
- Leave adequate space around all sides of the UPS for proper ventilation and maintenance. Please refer to *5.2 Installation Environment*.
- Only authorized Delta engineers or service personnel can perform installation and maintenance. If you want to install the UPS by yourself, please install it under the supervision of authorized Delta engineers or service personnel.
- Follow the IEC 60364-4-42 standard to install the UPS.

1.2 Connection Warnings

- Before applying electrical power to the UPS, make sure that the UPS is grounded to avoid a possible risk of current leakage.
- You can parallel a maximum of eight UPS units.
- The UPS must be connected with an external battery cabinet (user-supplied, handled and configured by Delta service personnel). Please refer to *5.5 External Battery Cabinet Connection Warnings* for relevant information.
- It is necessary to connect the protective devices with the UPS when the UPS is connected to power sources and critical loads.
- The protective devices connected to the UPS must be installed near the UPS and easily accessible for operation.
- Protective Devices:
 1. For single input, you must install (1) a protective device between the main AC source and the UPS and (2) a protective device between the connected critical loads and the UPS.
 2. For dual input, you must install (1) a protective device between the main AC source and the UPS, (2) a protective device between the bypass source and the UPS and (3) a protective device between the connected critical loads and the UPS.
 3. For grounding information, please refer to *Figure 5-17* and *Figure 5-20*.

- The recommended electrical rating of the input, output and backfeed protective devices are as follows. Application of the protective devices shall be in accordance with local installation codes.

40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
600V/ 100A	600V/ 100A	600V/ 225A	600V/ 225A

- Each protective device should have the functions of overcurrent protection, short circuit protection, insulating protection and shunt trip feature.
- When selecting the protective devices, please take each power cable's current capacity and the system's overload capacity (please refer to **Appendix 1: Technical Specifications**) into consideration. Besides, the short-circuit capacity of the upstream protective devices must be equal to or larger than the capacity of the UPS's input protective devices.
- Due to abnormalities in the UPS, the fault current may reach 20 kA. At the time, the UPS's internal semi-conductor fuses will take 8 ~ 10 ms to open. Thus, the reaction time of the upstream*¹ protective devices must be more than 10 ms so that the fuses would have sufficient time to interrupt the fault current, and the UPS's bypass will be able to keep supplying power to the loads.



NOTE:

*¹ For dual input application, this refers to the bypass upstream.

- If the UPS is supplied by a power source whose neutral is grounded, each protective device must be a 3-pole type. If the UPS is supplied by a power source whose neutral is not grounded, each protective device must be a 4-pole type.

1.3 Usage Warnings

- Only qualified service personnel can upgrade the UPS's firmware.
- Before installation, wiring and working on the UPS's internal circuits, please completely cut off all power supplying to the UPS, including the input power and battery power.
- The UPS is specifically designed for information technology equipment and used to power computers, servers, and associated peripheral devices. If you want to connect any capacitive loads or non-linear loads (that have serious surge current) to the UPS, it needs to be de-rated according to on-site applications. For such special applications, please contact Delta service personnel for the accurate UPS sizing. The UPS is not suitable for connecting with any asymmetrical loads. For the load suitability, please contact Delta customer service before purchasing.

- The external slits and openings in the UPS are provided for ventilation. To ensure reliable operation of the UPS and to protect the UPS from overheating, these slits and openings must not be blocked or covered. Do not insert any object into the slits and openings that may hinder ventilation.
- Before applying electrical power to the UPS, you must allow the UPS to adjust to room temperature 20 ~ 25°C (68 ~ 77°F) for at least one hour and ensure that there is no moisture condensing inside the unit.
- Do not put beverages on the UPS, external battery cabinet(s) or any other accessory associated with the UPS.
- Do not open or remove the covers or panels of the UPS to avoid high-voltage electric shock. Only authorized Delta engineers or service personnel can do so for installation or maintenance. If you want to open or remove the covers or panels, do it only under the supervision of authorized Delta engineers or service personnel.
- It is not recommended that you connect the UPS to any regenerative loads. For the load suitability, please contact Delta customer service before purchasing.
- The risk of dangerous high voltage is possible when batteries are still connected to the UPS even though the UPS is disconnected from the power sources. Before maintenance of the UPS, turn off each external battery cabinet's circuit breaker to completely cut off the battery power from the UPS.
- Do not dispose of the battery or batteries in a fire. The batteries may explode.
- Do not open or damage the battery or batteries. The released electrolyte is harmful to the skin and eyes and may be toxic.
- The UPS is electronic equipment that runs 24 hours continuously. To ensure its normal lifetime, regular maintenance of the UPS and batteries is of vital importance and necessary.
- Some components like batteries, power capacitors, and fans will become worn-out due to long-term usage, and this will increase the risk of UPS failure. To replace and maintain the components, please contact Delta service personnel.
- A battery can present a risk of electrical shock and high short-circuit current. Contact with any part of a grounded battery can result in electrical shock. Please observe the following precautions when working on batteries:
 1. Remove watches, rings, or other metal objects.
 2. Use tools with insulated handles.
 3. Wear rubber gloves and boots.
 4. Do not lay tools or metal parts on top of the batteries.
 5. Disconnect charging source and loads prior to installing or maintaining the batteries.

6. Remove battery grounds during installation and maintenance to reduce likelihood of shock. Remove the connection from ground if any part of the battery is determined to be grounded. Please note that the battery grounds mean any battery pole (+/ -) connecting to the ground.
- You must contact Delta customer service if any of the following events occurs:
 1. Any liquid is poured or spilled on the UPS.
 2. The UPS is deformed.
 3. Any conductive powders or metals enter into the UPS.
 4. The UPS does not run normally after you carefully followed the instructions in this *User Manual*.

1.4 Storage Warnings

- Use the original packing materials to pack the UPS to prevent any possible damage from rodents.
- If the UPS needs to be stored prior to installation, it should be placed in a dry indoor area. The allowable storage temperature is below 70°C (158°F) and relative humidity is below 95%.

1.5 Standard Compliance

- EN 62040-1
- EN 62040-2 Category C3
- EN 61000-4-2 Level 4
- EN 61000-4-3 Level 3
- EN 61000-4-4 Level 4
- EN 61000-4-5 Level 4
- EN 61000-4-6

Chapter 2 : Introduction

2.1 General Overview


The IPT series UPS, a three-phase Industrial Power Transformer-based uninterruptible power supply (hereafter referred to as 'UPS') is a dedicated design for large scale power systems such as transportation power systems, financial institutions, communication systems, network rooms, hospitals, monitoring, safety, and emergency systems as well as mission-critical facilities. The unit not only adopts advanced IGBT technology to provide high quality, low noise, pure and uninterruptible output power to the connected loads but also applies the latest design of DSP digital control technology and highest quality components.


2.2 Package Inspection

During UPS transportation, some unpredictable situations might occur. It is recommended that you inspect the UPS exterior packaging. If you notice any damage, please immediately contact the dealer from whom you purchased the unit.

Please check if any item is missing according to the following package list. If the UPS needs to be returned, carefully repack the UPS and all of the accessories using the original packing materials that came with the unit.

40/ 50kVA UPS

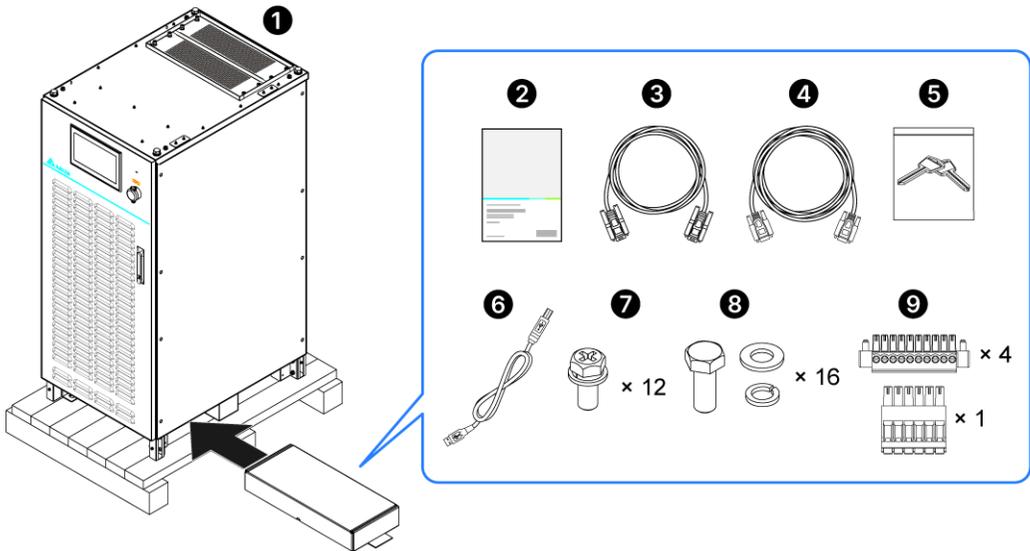


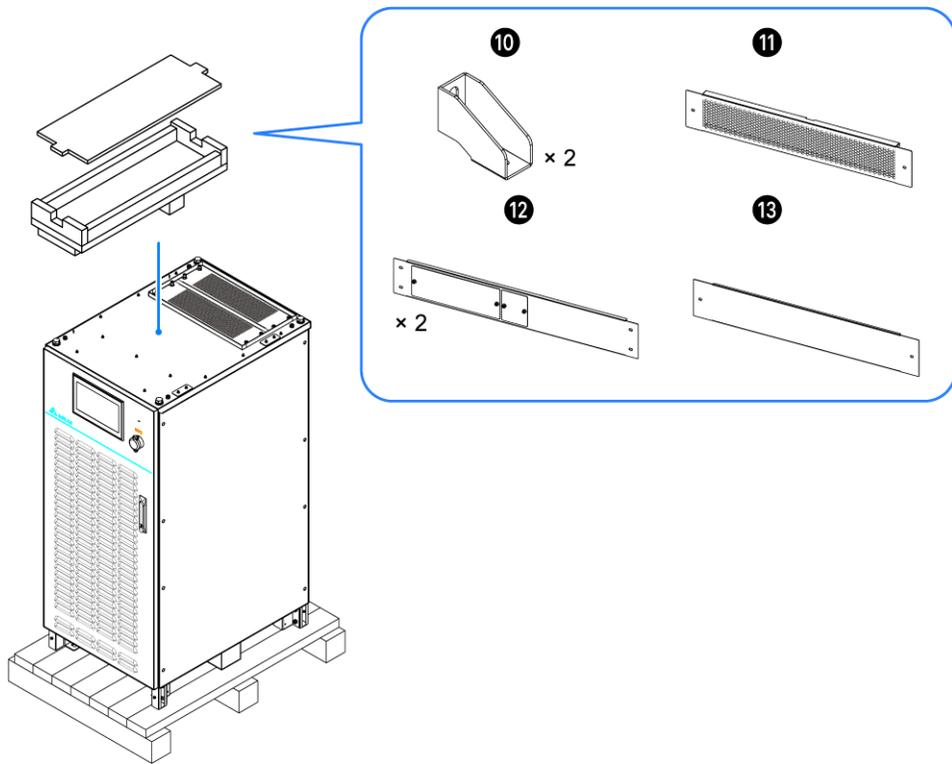


No.	Item	Q'ty
①	UPS	1 PC
②	User Manual	1 PC
③	RS-232 Cable	1 PC
④	Parallel Cable (length: 5 m (196.85"))	1 PC
⑤	Key	2 PCS
⑥	USB Cable	1 PC
⑦	M5 Screw (used for rodent shields)	12 PCS
⑧	M8 Screw & Flat Washer & Spring Washer (used for input, output, bypass, neutral, battery and grounding wiring)	16 PCS

No.	Item	Q'ty
9	Terminal Block (10-pin)	4 PCS
	Terminal Block (6-pin)	1 PC
10	Wall Bracket	2 PCS
11	Rodent Shield_ Front	1 PC
12	Rodent Shield_ Lateral	2 PCS
13	Rodent Shield_ Rear	1 PC

100/ 120kVA UPS

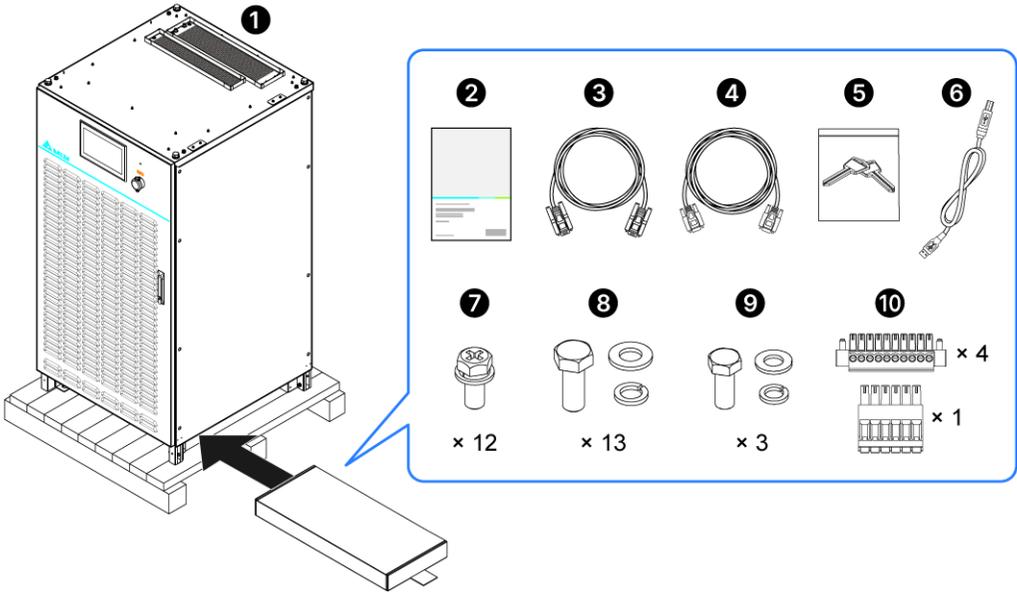

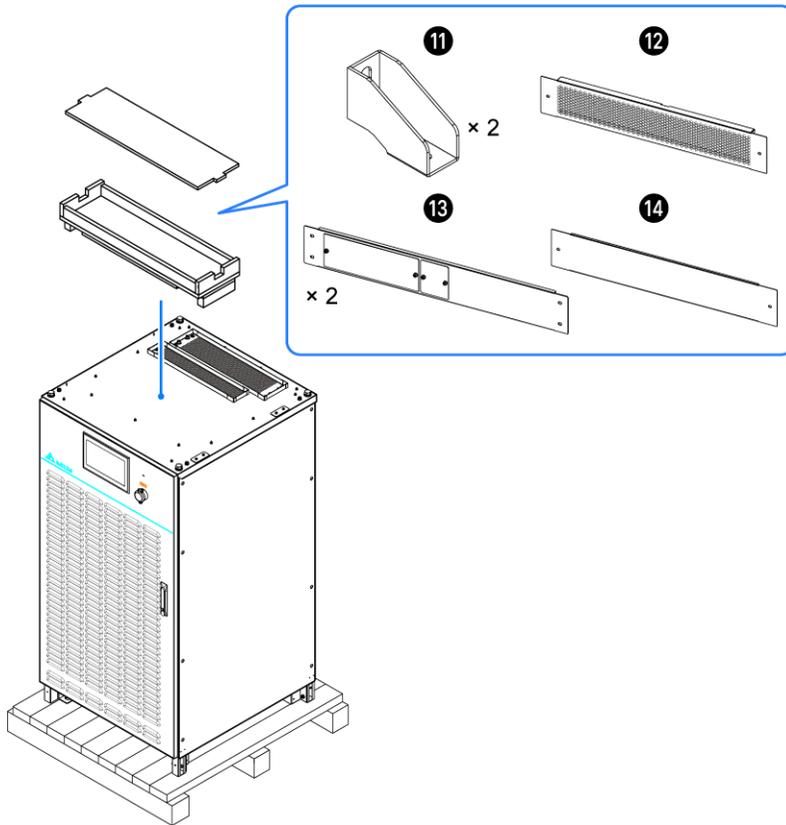

No.	Item	Q'ty
❶	UPS	1 PC
❷	User Manual	1 PC
❸	RS-232 Cable	1 PC
❹	Parallel Cable (length: 5 m (196.85"))	1 PC
❺	Key	2 PCS
❻	USB Cable	1 PC
❼	M5 Screw (used for rodent shields)	12 PCS
❽	M10 Screw & Flat Washer & Spring Washer (used for input, output, bypass, neutral and battery wiring)	13 PCS

No.	Item	Q'ty
9	M8 Screw & Flat Washer & Spring Washer (used for grounding wiring)	3 PCS
10	Terminal Block (10-pin)	4 PCS
	Terminal Block (6-pin)	1 PC
11	Wall Bracket	2 PCS
12	Rodent Shield_ Front	1 PC
13	Rodent Shield_ Lateral	2 PCS
14	Rodent Shield_ Rear	1 PC

2.3 Functions & Features

- True on-line double-conversion UPS adopts DSP chip and IGBT technology to protect your sensitive electronic equipment from power interruption.
- Wide AC input voltage range (324 Vac ~ 478 Vac) reduces frequent transfer from On-Line mode to Battery mode to save battery consumption and prolong battery life.
- Automatic input frequency detection enables operation at 50 Hz or 60 Hz.
- AC start-up function even when the UPS is not connected to the batteries.



WARNING:


Please note that when the UPS is not connected to the batteries, it will not protect your equipment if the utility power is lost.

- Dual-input design features an independent rectifier and a bypass static switch.
- Automatic restart:
 1. After a low battery shutdown, the UPS's inverter will restart in On-Line mode automatically right after the AC input resumes.
 2. The UPS returns automatically to On-Line mode from Bypass mode after an overload condition is cleared.
- Surge protection and EMI filter functions.
- Both auxiliary power and control circuit adopt redundancy design, which doubly enhances UPS reliability.
- Provides setting options such as battery test (schedulable) and battery replacement alarm.

- Smart battery charger design allows auto-charging or manual charging to shorten the charging time.
- Generator compatible.
- State-of-the-art microprocessor technology performs self-detection and monitors fan speed in real time, which provides complete and detailed operating status of the UPS.
- Built-in memory stores a maximum of 10,000 event logs.
- Fan speed auto adjustment prolongs fan life and reduces noise when the critical loads decrease. Moreover, fan failure detection circuit is established.

2.4 Exterior & Dimensions

40/ 50kVA UPS

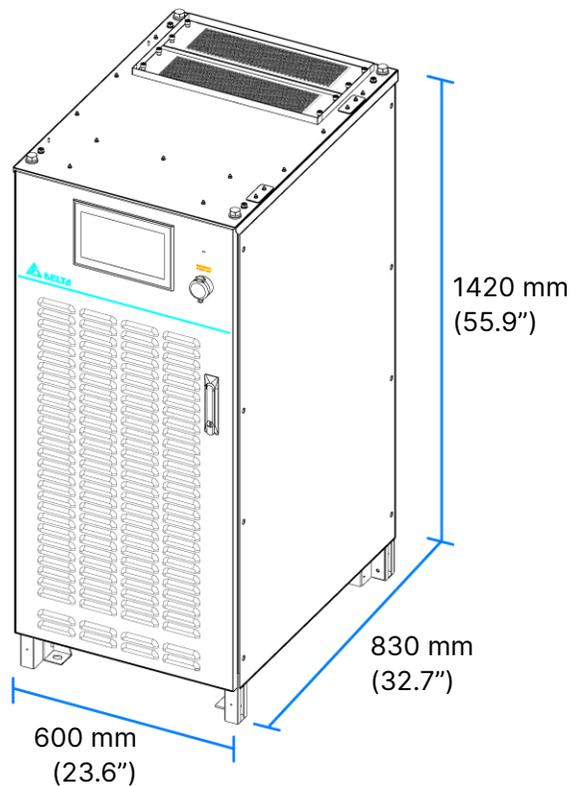

100/ 120kVA UPS

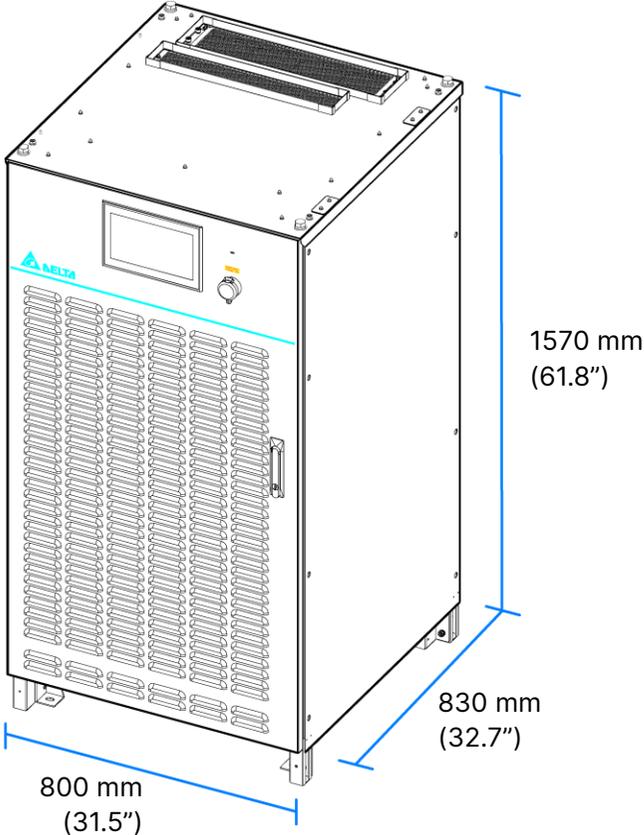


Figure 2-1: Exterior & Dimensions

2.5 Front View

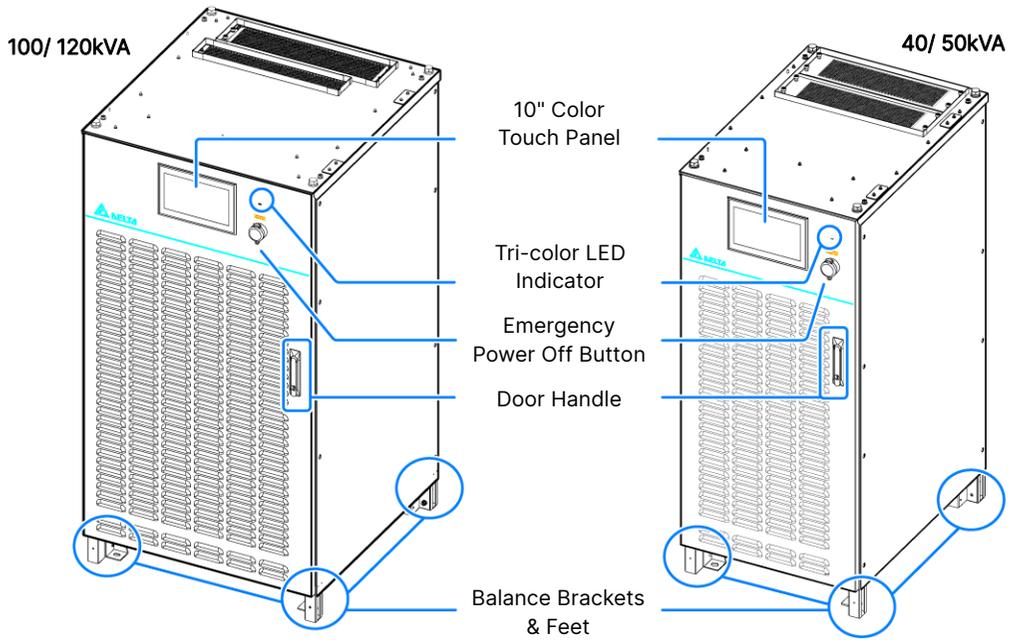


Figure 2-2: Front View

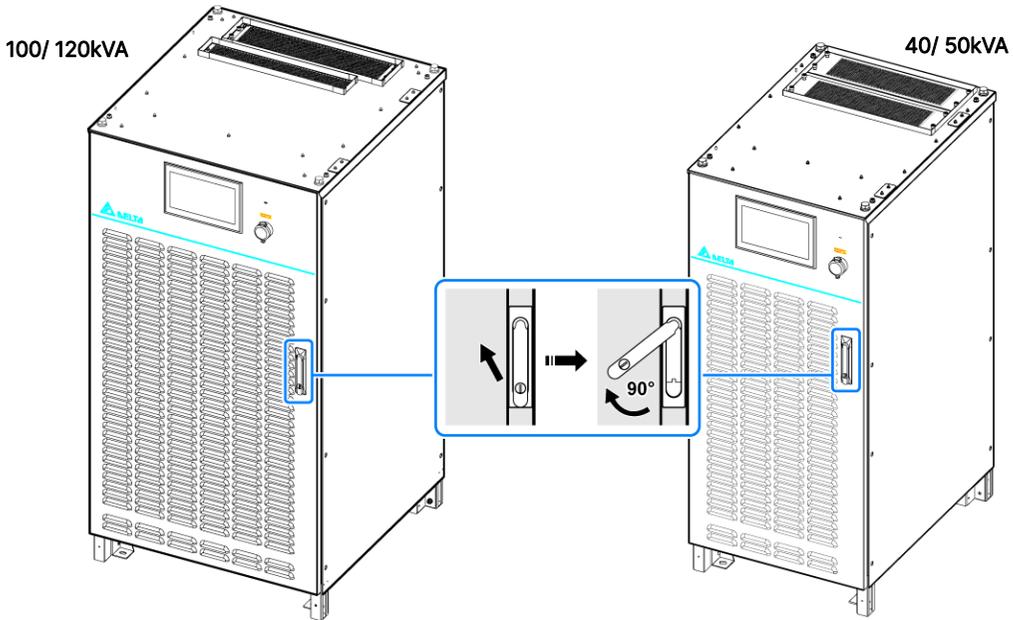


Figure 2-3: How to Open the Front Door

2.6 Internal View



WARNING:

Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel.

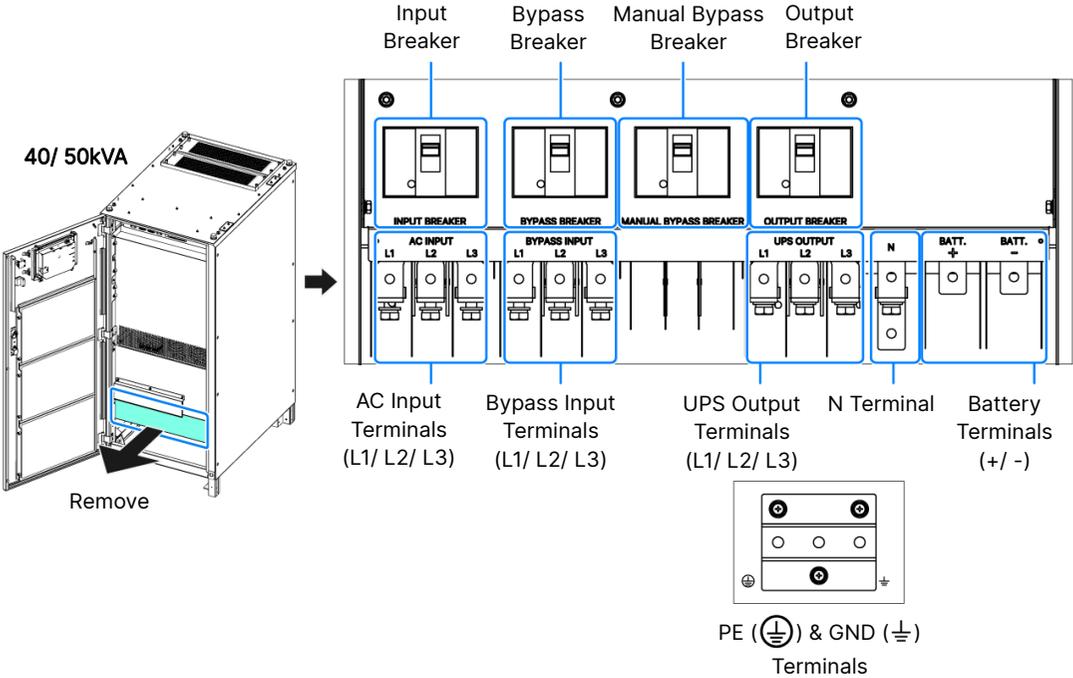


Figure 2-4: 40/ 50kVA UPS_ Wiring Terminals & Breakers

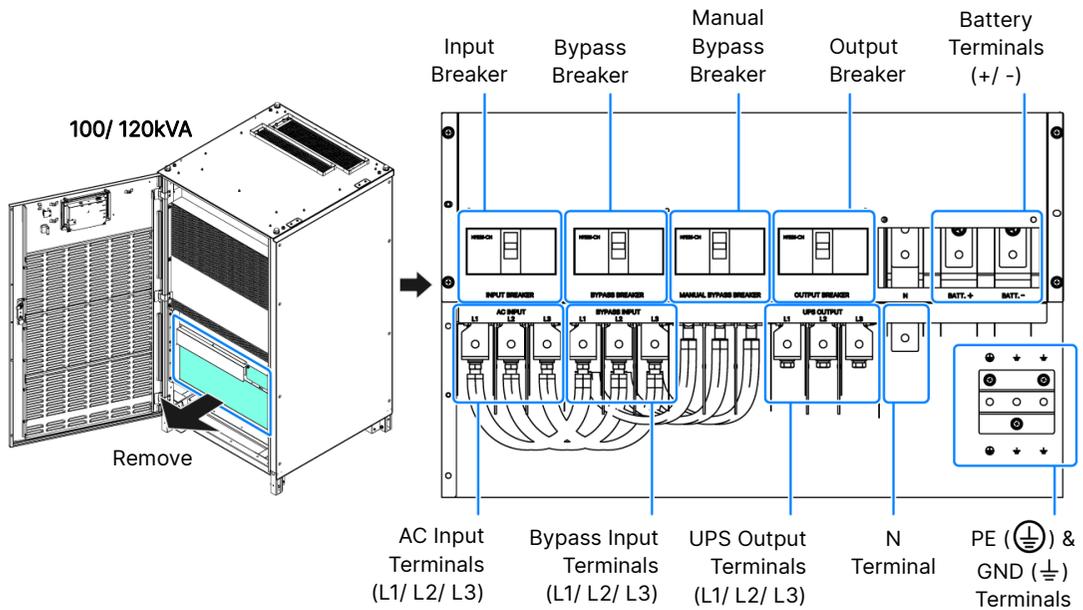


Figure 2-5: 100/ 120kVA UPS_ Wiring Terminals & Breakers

2.7 Tri-color LED Indicator & Buzzer



Figure 2-6: Tri-color LED Indicator Location



NOTE:

For information about the 10" color touch panel, please refer to *7. LCD Display & Settings*.

The buzzer is located at the rear of the UPS's front door. Please refer to the figure below.

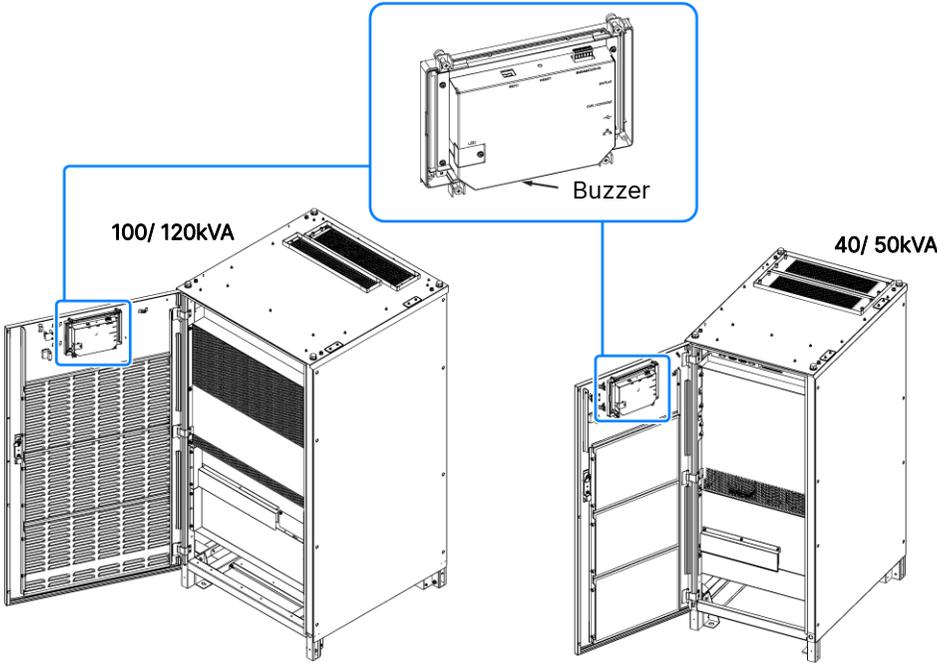


Figure 2-7: Buzzer Location

Table 2-1: Tri-color LED Indicator, UPS Operation Mode & Buzzer

Tri-color LED Indicator	Status	Meaning										
Green	ON	<ul style="list-style-type: none"> It indicates that the UPS is operating in one of the following modes. <table border="1"> <thead> <tr> <th>UPS Operation Mode</th> <th>Text on the LCD Screen (upper-right corner)</th> </tr> </thead> <tbody> <tr> <td>On-Line Mode</td> <td>'On-Line'</td> </tr> <tr> <td>ECO Mode</td> <td>'ECO'</td> </tr> <tr> <td>Frequency Conversion Mode</td> <td>'Frequency Conversion'</td> </tr> </tbody> </table>	UPS Operation Mode	Text on the LCD Screen (upper-right corner)	On-Line Mode	'On-Line'	ECO Mode	'ECO'	Frequency Conversion Mode	'Frequency Conversion'		
		UPS Operation Mode	Text on the LCD Screen (upper-right corner)									
		On-Line Mode	'On-Line'									
		ECO Mode	'ECO'									
Frequency Conversion Mode	'Frequency Conversion'											
Yellow	ON	<ul style="list-style-type: none"> It indicates that the UPS is operating in one of the following modes. <table border="1"> <thead> <tr> <th>UPS Operation Mode</th> <th>Text on the LCD Screen (upper-right corner)</th> </tr> </thead> <tbody> <tr> <td>Bypass Mode</td> <td>'Bypass'</td> </tr> <tr> <td>Battery Mode</td> <td>'Battery'</td> </tr> <tr> <td>Standby Mode</td> <td>'Standby'</td> </tr> <tr> <td>Softstart Mode</td> <td>'Softstart'</td> </tr> </tbody> </table>	UPS Operation Mode	Text on the LCD Screen (upper-right corner)	Bypass Mode	'Bypass'	Battery Mode	'Battery'	Standby Mode	'Standby'	Softstart Mode	'Softstart'
		UPS Operation Mode	Text on the LCD Screen (upper-right corner)									
		Bypass Mode	'Bypass'									
		Battery Mode	'Battery'									
		Standby Mode	'Standby'									
		Softstart Mode	'Softstart'									
Yellow	ON	<ul style="list-style-type: none"> It indicates a minor or medium warning message. <table border="1"> <thead> <tr> <th>Warning Level</th> <th>Buzzer Frequency</th> </tr> </thead> <tbody> <tr> <td>Minor</td> <td>It sounds 0.5 seconds every 3 seconds.</td> </tr> <tr> <td>Medium</td> <td>It sounds 0.5 seconds every second.</td> </tr> </tbody> </table>	Warning Level	Buzzer Frequency	Minor	It sounds 0.5 seconds every 3 seconds.	Medium	It sounds 0.5 seconds every second.				
		Warning Level	Buzzer Frequency									
		Minor	It sounds 0.5 seconds every 3 seconds.									
Medium	It sounds 0.5 seconds every second.											
Red	ON	<ul style="list-style-type: none"> It indicates a major warning message. <table border="1"> <thead> <tr> <th>Warning Level</th> <th>Buzzer Frequency</th> </tr> </thead> <tbody> <tr> <td>Major</td> <td>Long beep.</td> </tr> </tbody> </table>	Warning Level	Buzzer Frequency	Major	Long beep.						
		Warning Level	Buzzer Frequency									
Major	Long beep.											

Chapter 3 : Operation Modes

The UPS runs in six basic operation modes, which are **On-Line** mode, **Battery** mode, **Bypass** mode, **Manual Bypass** mode, **ECO** mode and **Frequency Conversion** mode.



NOTE:

1. In this user manual, the meaning of Q1, Q2, Q3, Q4 and Q5 is shown as follows.

Code	Meaning
Q1	Input Breaker
Q2	Bypass Breaker
Q3	Manual Bypass Breaker
Q4	Output Breaker
Q5	External Battery Cabinet's Breaker

2. To enable the following operation modes, please refer to **6. UPS Operation** & **7. LCD Display & Settings**.

3.1 On-Line Mode

In On-Line mode, the main AC source supplies AC power via the Input Breaker (Q1) to the rectifier, and the rectifier converts the AC power to DC power and supplies the DC power to the inverter. In the meantime, the rectifier provides charging power to the batteries. After receiving the DC power, the inverter converts it into clean and stable AC power to the connected critical loads via the Output Breaker (Q4). During On-Line mode, the UPS's tri-color LED illuminates green and the text 'On-Line' appears in the upper right corner of the LCD screen.

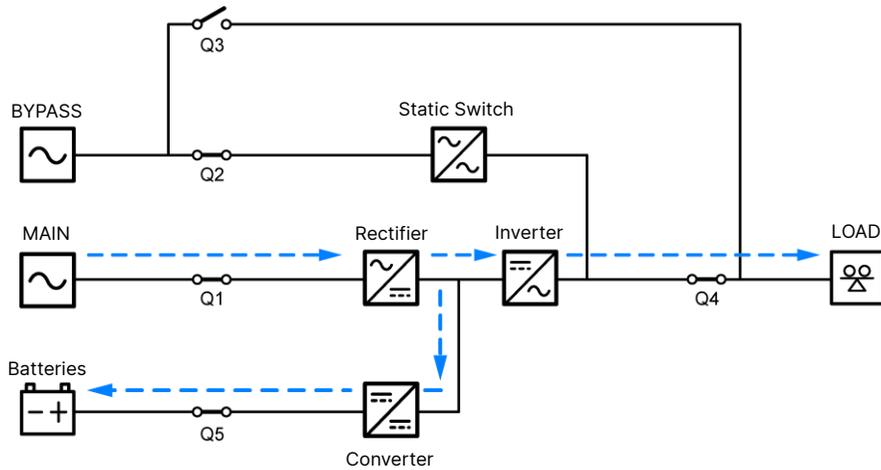


Figure 3-1: On-Line Mode Diagram

3.2 Battery Mode

The UPS transfers to Battery mode automatically if the main AC source is abnormal, for example, when unstable voltage or a power outage occurs. In Battery mode, the batteries provide DC power and the UPS converts it into AC power and supplies it to the connected critical loads via the Output Breaker (Q4). During the conversion process, output voltage remains the same. During Battery mode, the UPS's tri-color LED illuminates yellow and the text **Battery** appears in the upper right corner of the LCD screen.

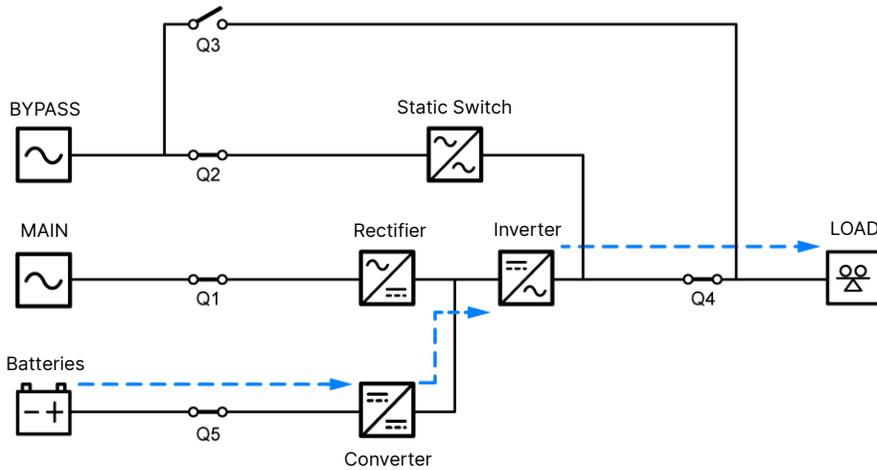


Figure 3-2: Battery Mode Diagram

3.3 Bypass Mode

When the inverter encounters abnormal situations such as over temperature, overload, short circuit, abnormal output voltage or low battery, it will automatically shut itself down. If the UPS detects the bypass input is normal, it will automatically switch to Bypass mode to protect the connected critical loads from power interruption. After the above-mentioned abnormalities are eliminated, the UPS will switch back to On-Line mode from Bypass mode. During Bypass mode, the UPS's tri-color LED illuminates yellow and the text 'Bypass' appears in the upper right corner of the LCD screen.

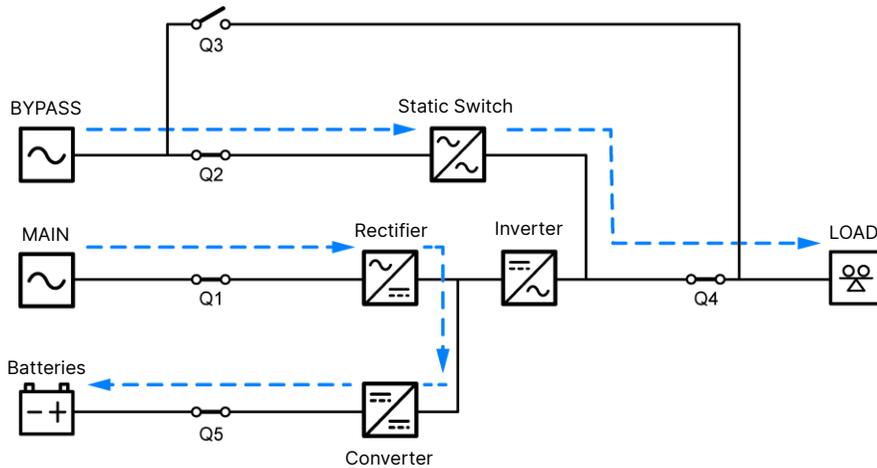


Figure 3-3: Bypass Mode Diagram

3.4 Manual Bypass Mode

When the UPS runs in Manual Bypass mode, the current only flows through the maintenance bypass so that the maintenance personnel can maintain the circuit inside the UPS. However, DO NOT touch any terminal and bus bar which may carry high-voltage electricity. During Manual Bypass mode, the UPS's input power is completely cut off, and the critical loads are not protected. At the moment, the UPS's tri-color LED and LCD screen are both off.

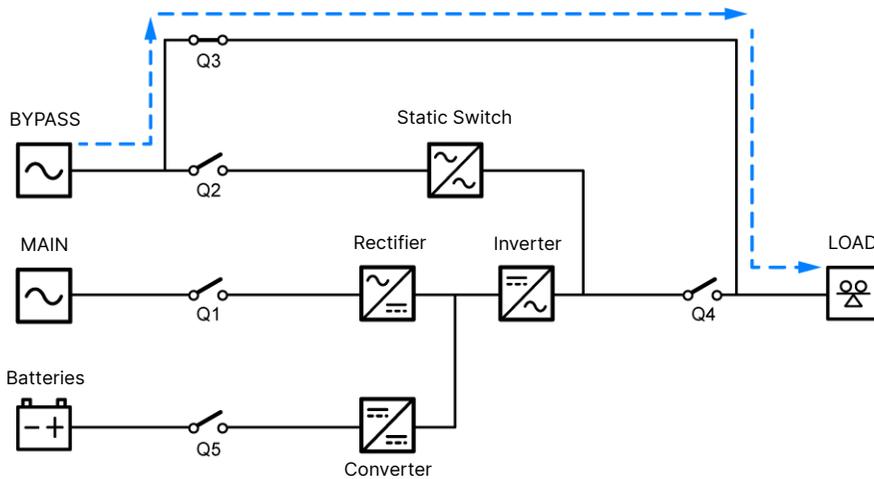


Figure 3-4: Manual Bypass Mode Diagram

3.5 ECO Mode

After the UPS is manually set as ECO mode via the LCD, the UPS will work in Bypass mode if bypass input voltage and frequency are within $\pm 10\%$ of the rated voltage and ± 3 Hz of the rated frequency respectively. Otherwise, the UPS will run in On-Line mode. During ECO mode, the UPS's tri-color LED illuminates green and the text 'ECO' appears in the upper right corner of the LCD screen.

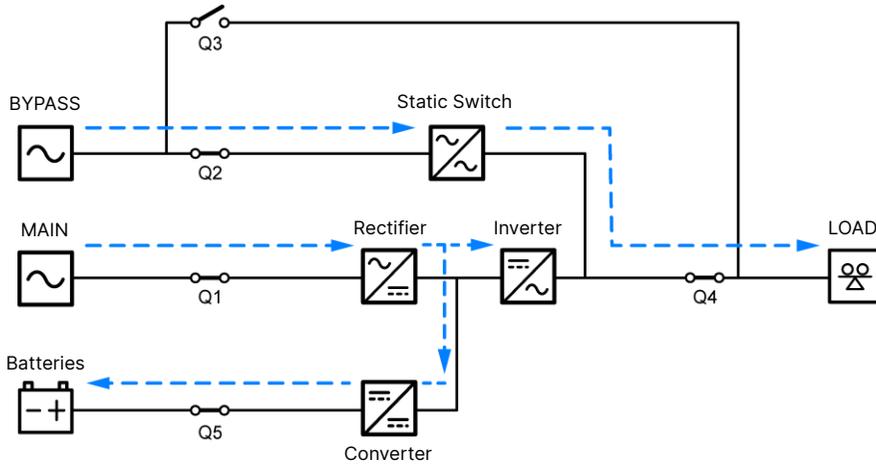


Figure 3-5: ECO Mode Diagram

3.6 Frequency Conversion Mode



NOTE:

Frequency Conversion mode is only applicable to single UPS but not to parallel UPSs

After the UPS is manually set as Frequency Conversion mode via the LCD, the inverter will automatically select 50Hz or 60Hz as the fixed output frequency. After the output frequency is determined, the system will automatically disable the bypass function. Please note that, once the inverter shuts down, there is no bypass output. During Frequency Conversion mode, the UPS's tri-color LED illuminates green and the text 'Frequency Conversion' appears in the upper right corner of the screen.

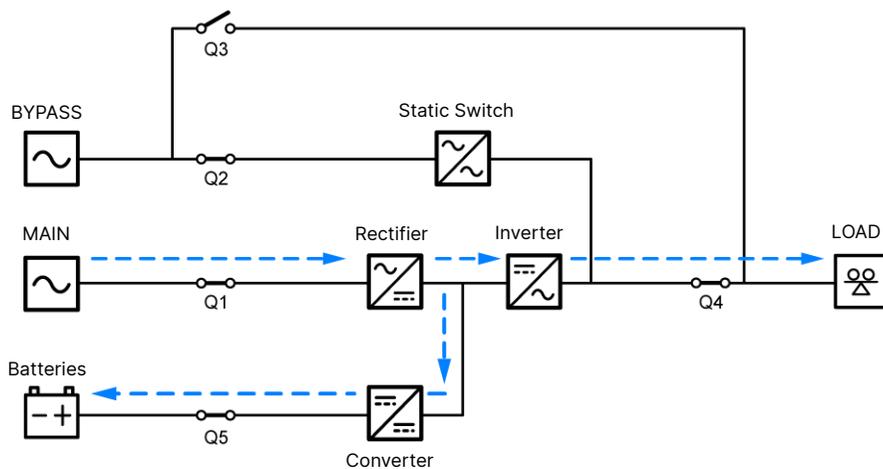


Figure 3-6: Frequency Conversion Mode

Chapter 4 : Communication Interfaces



NOTE:

It is suggested that the wire size of cable connected to any dry contact should be 0.519 mm² (20 AWG) or 0.325 mm² (22 AWG).

The communication interfaces are located at two different places. One is on the front of the UPS with its front door open and the other is at the rear of the touch panel.

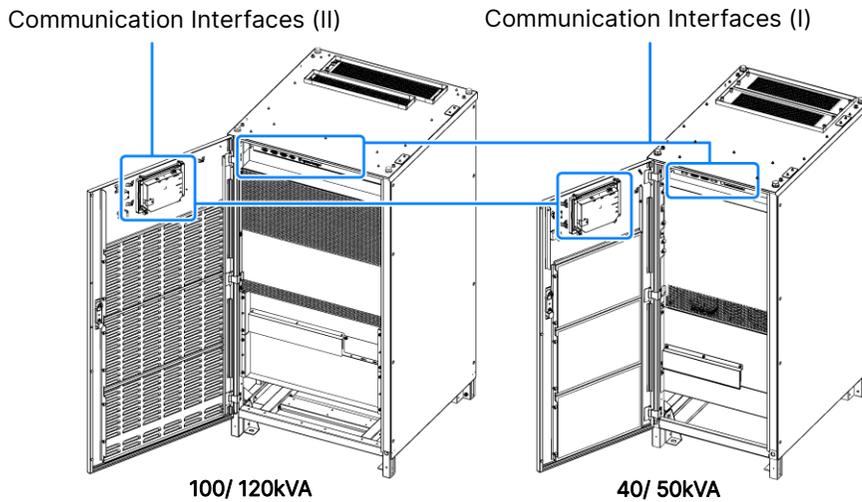


Figure 4-1: Location of the Communication Interfaces

4.1 Communication Interfaces (I): on the Front of the UPS with Its Front Door Open

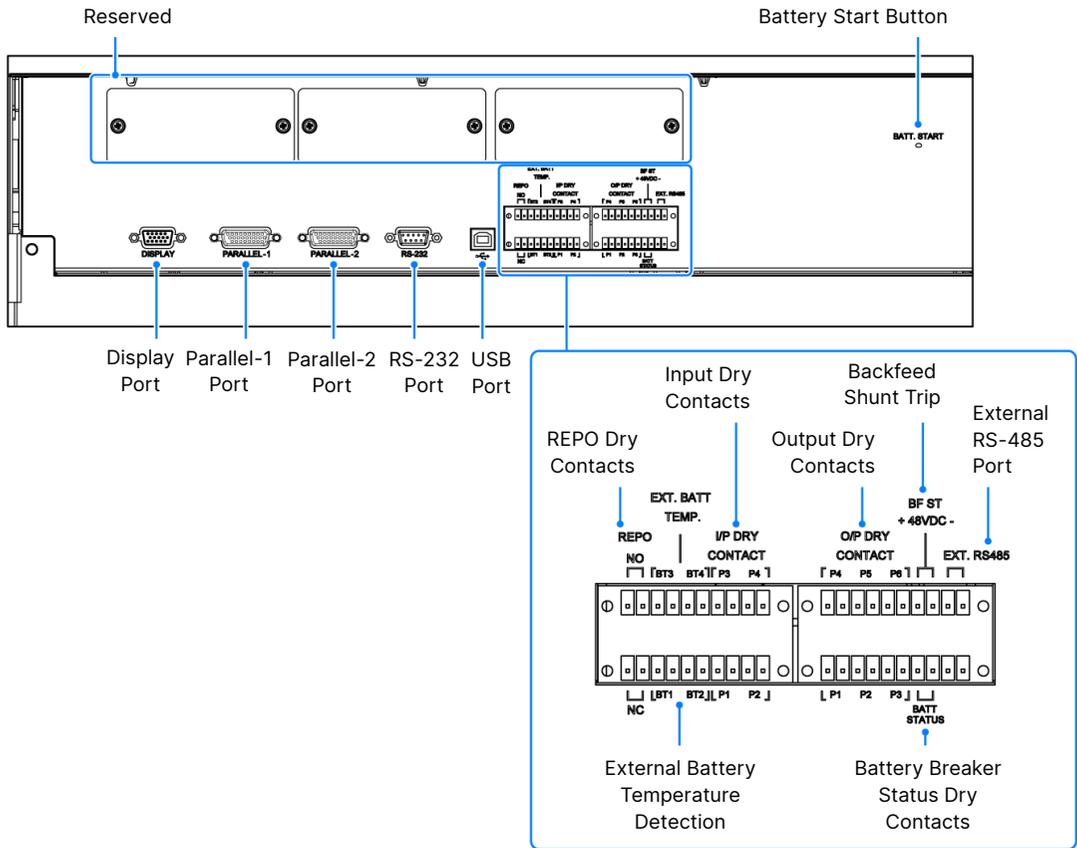


Figure 4-2: Communication Interfaces (I)

4.1.1 Display Port

Before shipment, the display port has been connected to the 10" touch panel with the designated cable in Delta factory.

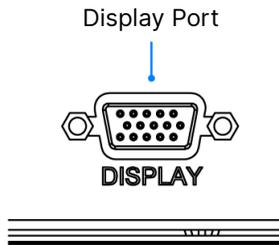


Figure 4-3: Display Port

4.1.2 Parallel Ports

The parallel ports are used to connect parallel UPSs to increase system capacity and redundancy.

Up to eight UPS units with the same capacity, voltage, frequency and version can be paralleled. Please daisy-chain the parallel UPSs with the provided parallel cables only.

Please refer to **5.4.4 Parallel Units Wiring** to route the parallel cables.



WARNING:

One parallel cable is provided in each UPS's accessory package. Using non-Delta parallel cables to parallel the UPSs may cause failure, malfunctions and accidents.

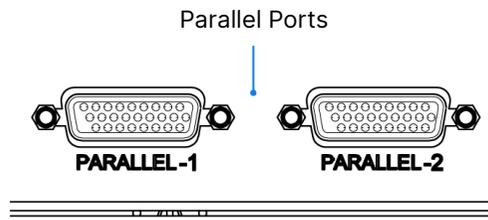


Figure 4-4: Parallel Ports

4.1.3 RS-232 Port & USB Port

The RS-232 port & USB port are available for authorized service personnel.

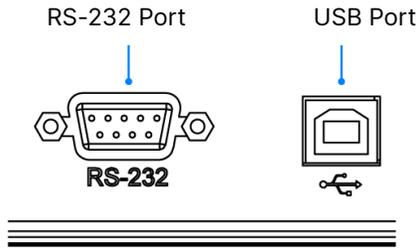


Figure 4-5: RS-232 Port & USB Port

4.1.4 REPO Dry Contacts

Connect the REPO dry contacts to a user-supplied switch so you can remotely shut down the UPS when an emergency occurs. Both of the normally open (NO) and normally closed (NC) dry contacts shown below must be connected.

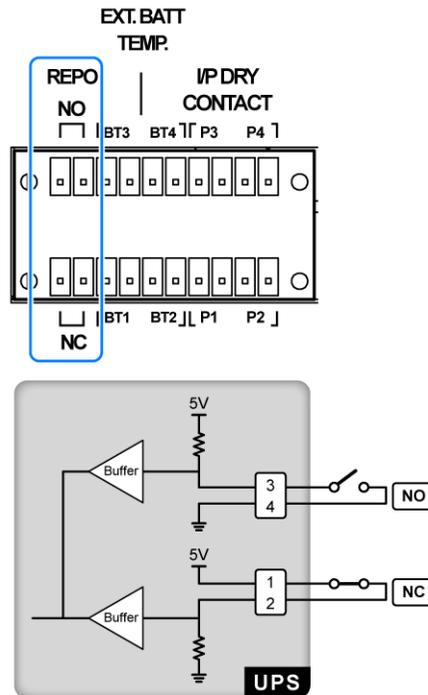


Figure 4-6: REPO Dry Contacts

4.1.5 External Battery Temperature Detection

You can use the external battery temperature detection (BT1, BT2, BT3 and BT4) to detect a maximum of four external battery cabinets' temperature. You need to purchase the battery cabinet temperature sensor cable (optional).

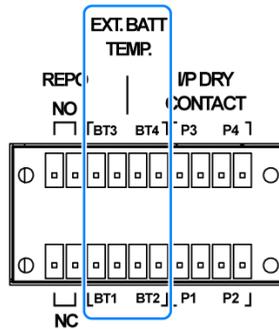


Figure 4-7: External Battery Temperature Detection

4.1.6 Input Dry Contacts

There are four sets of programmable input dry contacts (P1 ~P4). The input dry contacts allow the UPS to receive external signals from peripheral devices and let the UPS response accordingly. Please use the touch panel to set each dry contact as normally open (NO) or normally closed (NC). Each input dry contact can be assigned a specific event. Four out of thirteen events can be assigned according to your applications. Please refer to the table below and **7.6.6 Dry Contact Setting**.

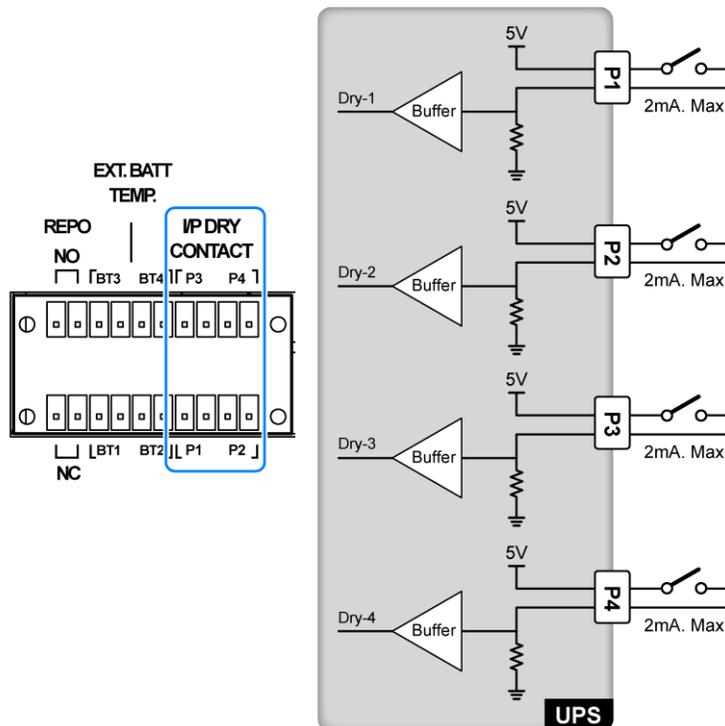


Figure 4-8: Input Dry Contacts & Schematic

No.	Event	Description
1	None	No set-up.
2	Generator Status	Generator status detection.
3	Battery Ground Fail	Battery leakage detection.
4	External Battery Breaker Detection	Status detection of the external battery cabinet's breaker.
5	Charger Off*1	Turn off the charger.
6	Active Standby	In Bypass mode: the UPS will remain to run in Bypass mode. In On-Line mode: the UPS will transfer to Bypass mode immediately. In ECO mode: the UPS will transfer to Bypass mode immediately. In Battery mode: the UPS will transfer to Standby mode immediately.
7	Battery Abnormal Shutdown	In On-Line mode: the UPS will issue battery abnormal warning. In Battery mode: the UPS will transfer to Bypass or Standby mode immediately.
8	Input Transformer OTW	Input transformer over temperature warning.
9	Output Transformer OTW	Output transformer over temperature warning.
10	Battery Fuse Open	The battery fuse is blown.
11	Input Current Limit Stage Setting	Limit the input current to a specific Ampere (adjustable in a certain range). Please refer to 7.6.3 Input & Output Setting .
12	Major Battery Abnormal Alarm	Alarm due to detection of major fault from the battery management system.
13	Minor Battery Abnormal Alarm	Alarm due to detection of minor fault from the battery management system.

**NOTE:**

*1 If you use non-Delta lithium-ion batteries, you must use the LCD to set up **Charger Off**; please refer to **7.6.6 Dry Contact Setting**. For settings relevant to the non-Delta lithium-ion batteries, please refer to **7.6.4 Battery & Charging Setting**. For more information, please contact Delta customer service.

4.1.7 Output Dry Contacts

There are six sets of programmable output dry contacts (P1 ~ P6). Please use the touch panel to set each dry contact as normally open (NO) or normally closed (NC). Each dry contact can be assigned a specific event. Six out of twenty-two events can be assigned according to your applications. Please refer to the table below and **7.6.6 Dry Contact Setting**.



NOTE:F

Since the output dry contacts belong to the secondary circuit, the voltage of each dry contact's connected device should not exceed 60 Vdc/ 42 Vac to avoid electric shock or insufficient insulation.

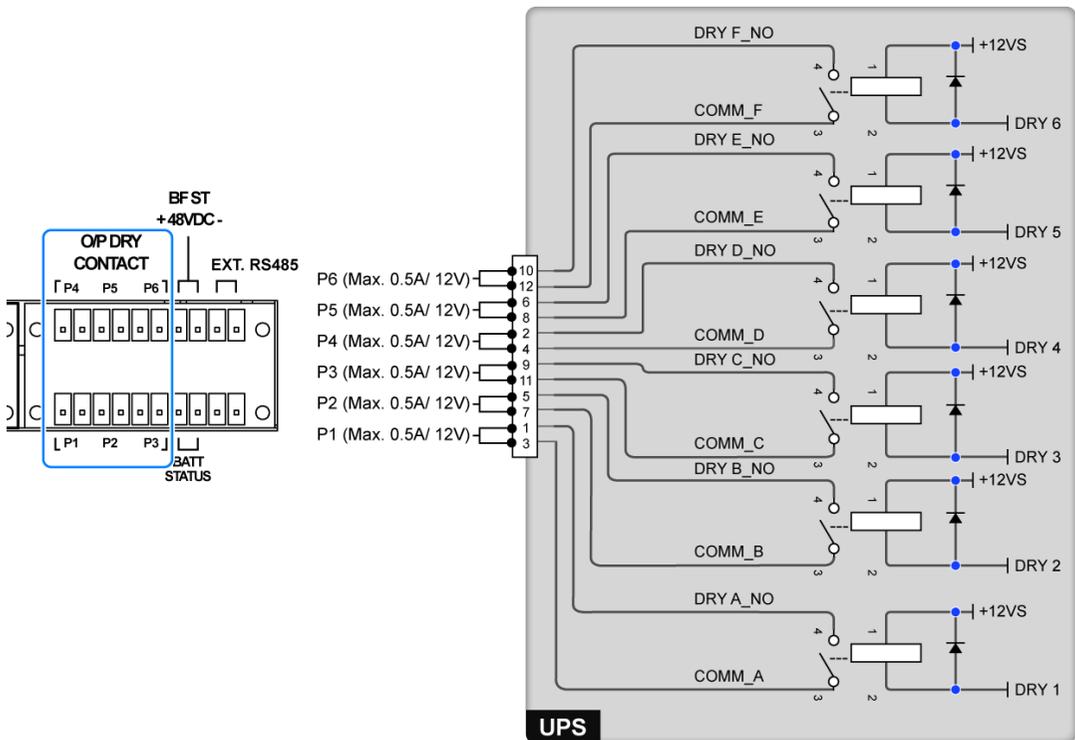


Figure 4-9: Output Dry Contacts & Schematic

No.	Event	Description
1	None	No set-up.
2	Load On Inverter	The UPS works in On-Line mode.
3	Load On Bypass	The UPS works in Bypass mode.
4	Load On Battery	When the main AC source fails, the batteries supply power to the critical loads.
5	Battery Low	When the UPS runs in Battery mode, the battery voltage is lower than the setup limit (default: 440 Vdc).
6	Bypass Input Abnormal	The bypass voltage, frequency or phase sequence is abnormal.
7	Battery Test Fail	During the battery test, the battery voltage is out of the setup limit.
8	Internal Comm. Fail	The #n power module's internal communication is abnormal.
9	External Parallel Comm. Fail (for parallel application only)	In parallel mode, parallel communication is abnormal.
10	Output Overload	The UPS is overloaded or the UPS shuts down to let the bypass supply power to the critical loads.
11	EPO Activated	The EPO button is pressed to urgently power off the UPS.
12	Load On Manual Bypass	The Manual Bypass Breaker (Q3) is turned on and the UPS transfers to Manual Bypass mode.
13	Battery Over Temperature	The external battery cabinet's temperature is too high.
14	Output Voltage Abnormal	The output voltage is abnormal.
15	Battery Need Replacement	The battery replacement date is due.
16	Bypass Over Temperature	The bypass static switch temperature is too high.

No.	Event	Description
17	Bypass Static Switch Fault	The bypass static switch has an open/ short issue.
18	UPS Over Temperature	The UPS temperature is too high.
19	Battery Breaker Shunt Trip Via EPO	When the EPO button is pressed, the UPS will send a signal to the connected external shunt trip device to cut off the battery power.
20	Backfeed Protection	When the UPS's bypass SCR has a short-circuit issue, the UPS will send a signal to the connected external shunt trip device to cut off the backfeed voltage.
21	General Alarm	When any UPS alarm occurs, the UPS will send a signal.
22	Load On ECO	The UPS works in ECO mode.

4.1.8 Backfeed Shunt Trip Function

When the UPS's bypass SCR has a short-circuit issue, the UPS will provide 48 Vdc isolated power to the connected external backfeed contactor to cut off the backfeed voltage.

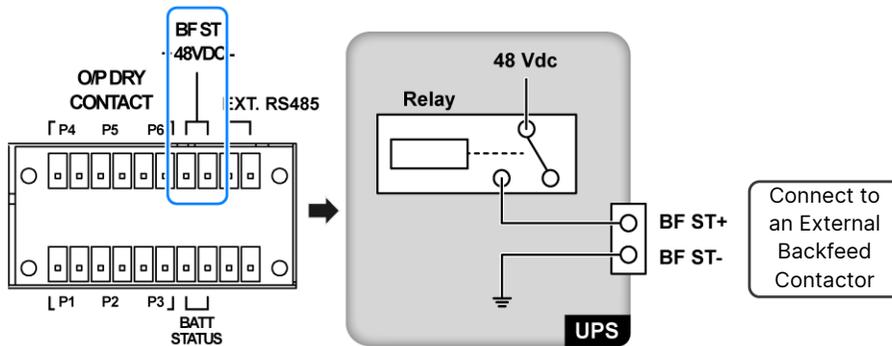


Figure 4-10: Backfeed Shunt Trip & Schematic

4.1.9 Battery Breaker Status Dry Contacts

The battery breaker status dry contacts are used to detect the status of the external battery cabinet's breaker (Q5). For detection, please connect user-supplied auxiliary switches to the dry contacts (see the figure below). If you don't execute the above-mentioned setup, the default setting of the external battery cabinet's breaker (Q5) shown on the LCD is ON.

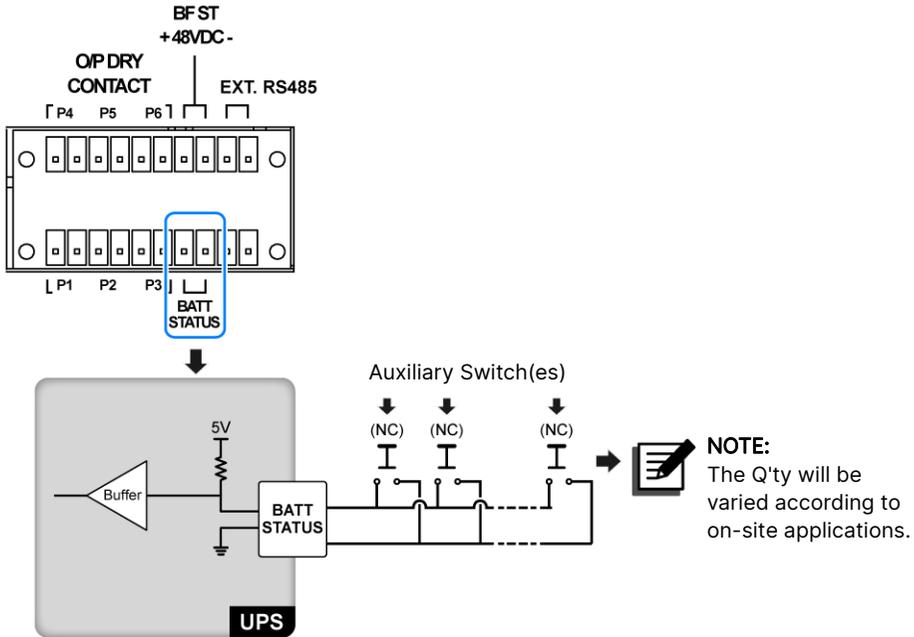


Figure 4-11: Battery Breaker Status Dry Contacts & Schematic

4.1.10 External RS-485 Port

The external RS-485 port is reserved.

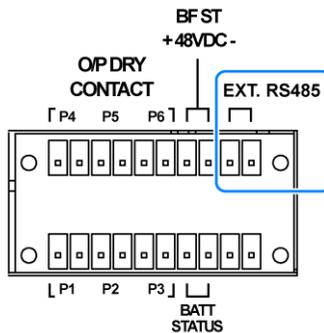


Figure 4-12: External RS-485 Port

4.1.11 Battery Start Button

To activate battery mode, you need to press the battery start button shown below. Please refer to **6.2.2 Battery Mode Start-up Procedures**.

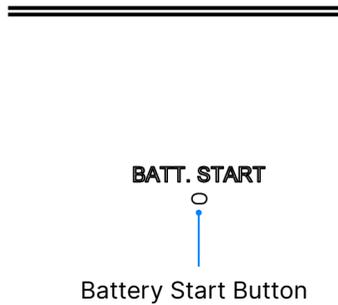


Figure 4-13: Battery Start Button

4.2 Communication Interfaces (II): at the Rear of the Touch Panel

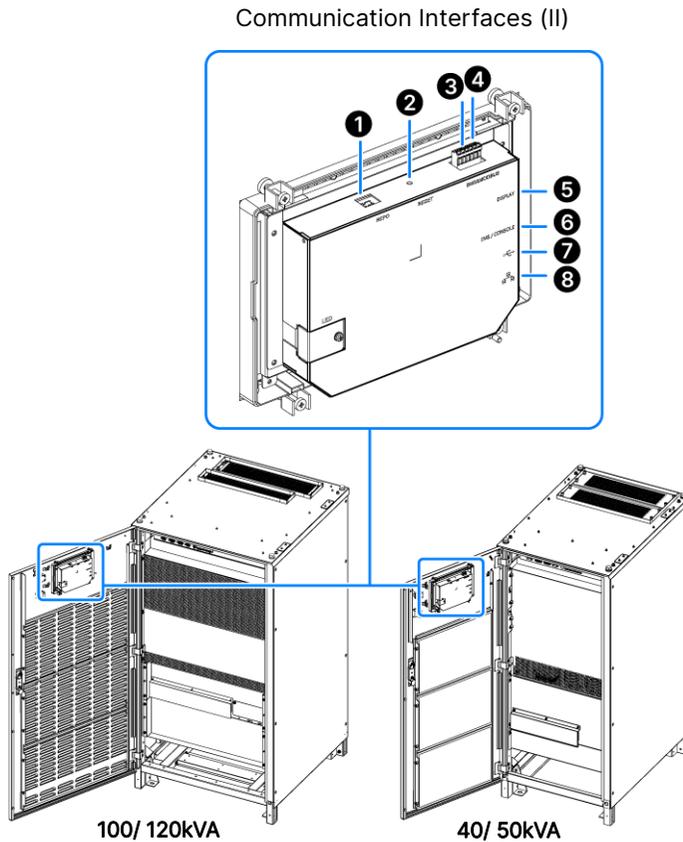


Figure 4-14: Communication Interfaces (II)

No.	Item	Description
①	REPO	Before shipment, the REPO port has been connected.
②	RESET	Press the RESET button to restart the LCD.
③	MODBUS (RS-485 Port)	<ol style="list-style-type: none"> 1. Provision of Modbus RTU communication service. 2. Connect the port to a user-supplied monitoring system.
④	BMS	Reserved.
⑤	DISPLAY	Before shipment, the DISPLAY port has been connected.
⑥	EMS/ CONSOLE	Connect the port to a user-supplied environmental monitoring system or Delta EnviroProbe 1000 (optional).
⑦	 (USB Port × 1)	Connect a user-supplied USB flash drive to the port to (1) upgrade the UPS and LCD's firmware and (2) download event logs.
⑧	 (Network Port)	<ol style="list-style-type: none"> 1. Provision of network communication service (including SNMP, Modbus TCP, HTTP, HTTPS, etc.). 2. Connect the port to a user-supplied monitoring system.

4.3 Cable Routing for the Communication Interfaces

The UPS **ONLY** allows bottom cable entry, please follow the steps below.

① Open the UPS's front door, ② remove the lateral rodent shield's wiring cover, ③ connect the cables to the communication interfaces and ④ route the cables through the lateral rodent shield.

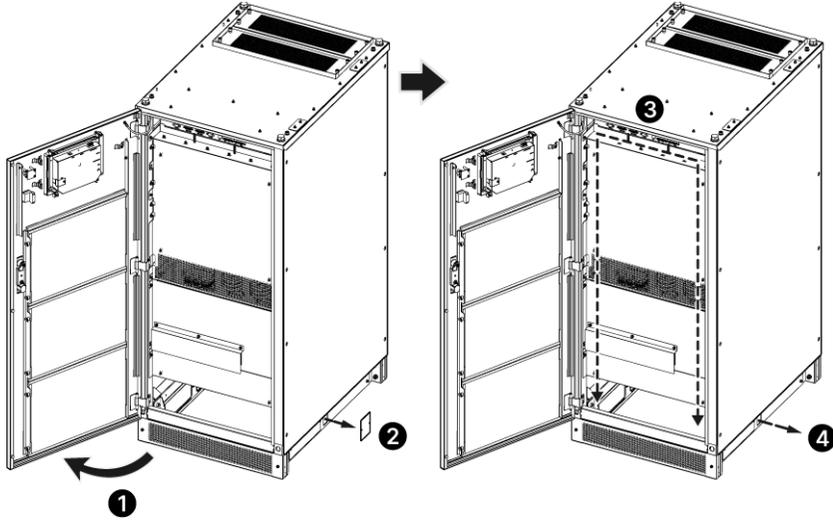


Figure 4-15: 40/ 50kVA UPS_ Bottom Cable Entry for the Communication Interfaces

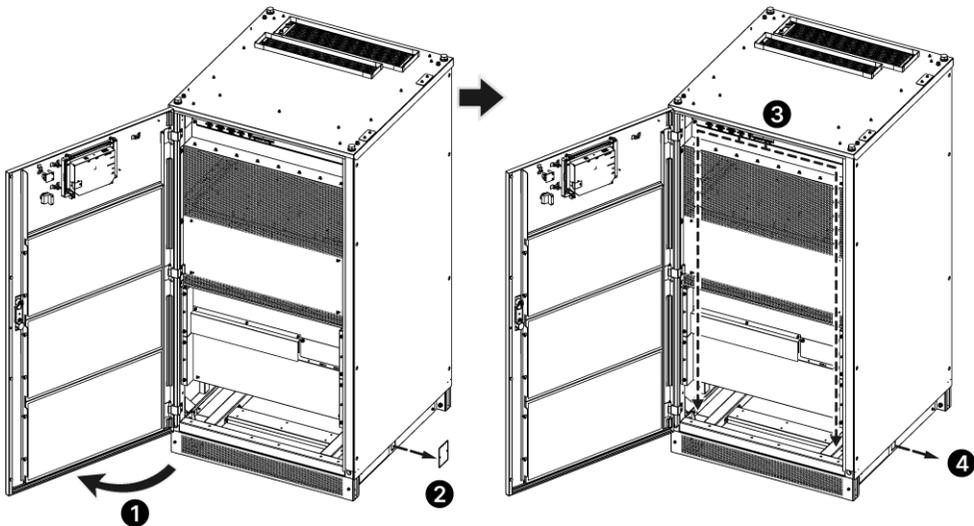


Figure 4-16: 100/ 120kVA UPS_ Bottom Cable Entry for the Communication Interfaces



NOTE:

1. Please follow local and national electrical codes to select cable sizes and install proper conduits and bushings for cable protection.
2. Only when ***5.3 UPS Installation*** is completed can you perform wiring.
3. Cable ties are user-supplied and the quantity depends on on-site requirements.

Chapter 5 : Installation and Wiring

5.1 Before Installation and Wiring

- Please read this user manual thoroughly before installation, wiring and operation. Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel. If you use a forklift or other equipment to move the UPS, please make sure its load bearing is sufficient. Please refer to **Table 5-1**.
- The UPS must be connected to at least one external battery cabinet (user-supplied, handled and configured by Delta service personnel). Please refer to **5.5 External Battery Cabinet Connection Warnings** for relevant information.

5.2 Installation Environment

- Install the UPS indoors. Do not place it outdoors.
- Make sure that transportation routes (e.g. corridors, door gates, elevators, etc.) and installation area can accommodate and bear the weight of the UPS, external battery cabinet(s) and handling equipment. Please refer to **Table 5-1** for the floor weight loading information.

Table 5-1: UPS Floor Weight Loading Table

UPS Capacity	40kVA/ 36kW 50kVA/ 45kW	100kVA/ 90kW 120kVA/ 108kW
UPS Net Weight	404 kg (890.7 lb)	593 kg (1307.3 lb)
Floor Weight Loading	811.2 kg/ m ² (166.2 lb/ ft ²)	893.1 kg/ m ² (183.4 lb/ ft ²)

- Ensure that the installation area is spacious enough for ventilation, wiring and maintenance. Install the external battery cabinet next to the UPS and for the UPS clearance, we suggest that you:
 1. Keep a minimum distance of 800 mm (31.5") from the front of the UPS for wiring, maintenance and ventilation.
 2. Keep a minimum distance of 1000 mm (39.4") from the top of the UPS for maintenance. If you install wind shields on the top of the UPS, please ensure that the openings of the wind shields are sufficient and try to minimize the length of the wind shields.

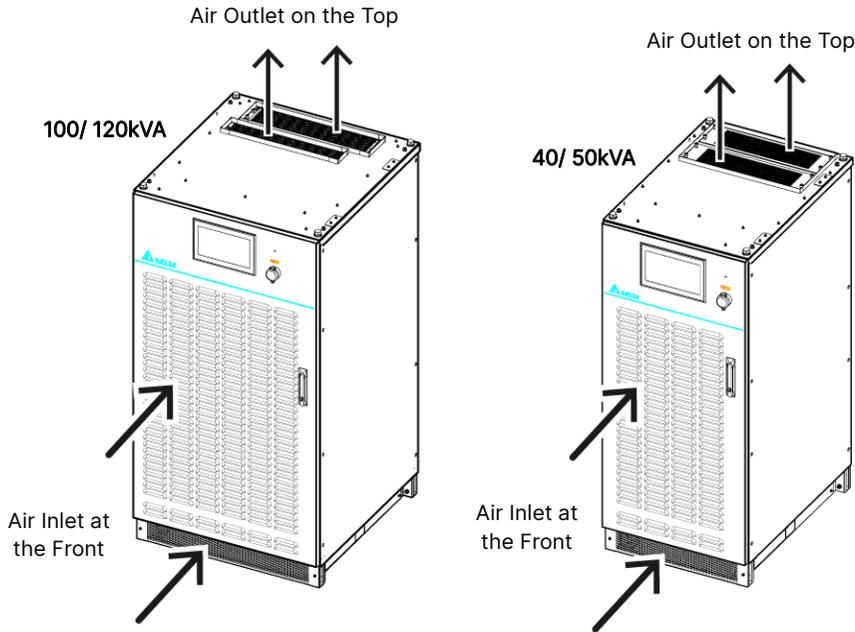


Figure 5-1: Air Inlet & Outlet Direction

**WARNING:**

1. Do not use air conditioners or similar equipment to blow into the top of the UPS.
 2. Do not hinder ventilation of the UPS.
- Keep the installation area clean. Please note that wiring routes must be hermetic to prevent possible damage from rodents.
 - Keep the installation area's temperature around 25°C (77°F) and humidity within 90%. The highest operating altitude is 1000 m (3280 ft) above sea level.
 - For safety concerns, we suggest that you:
 1. Equip surroundings of the installation area with CO₂ or dry powder fire extinguishers.
 2. Install the UPS in an environment where fireproof materials are used to construct the walls, floors and ceilings.
 3. Install the UPS on a floor that is made from noncombustible materials.
 - Do not allow unauthorized personnel entering the installation area and assign specified personnel to keep the UPS keys.

5.3 UPS Installation



NOTE:

1. Please use appropriate equipment (e.g. forklift) to move the UPS.
2. The installation steps and methods for 40/ 50 kVA UPS and 100/ 120 kVA UPS are the same. Below, the illustration of 100/120 kVA UPS will be used as an example

Please follow the steps below:

Step 1

Before installing the UPS in a designated installation area, please confirm whether the area has sufficient floor weight loading to bear the UPS, external battery cabinet(s) and handling equipment (e.g. forklift) to avoid accidents. Please refer to **Table 5-1**.

If you want to use a crane to lift the UPS, please follow the figures below to remove the M16 screws and washers and assemble the M16 lifting eye bolts (tightening torque : 250 ± 10 kg-cm (217 ± 8.7 lb-in)).



NOTE:

1. For 40/ 50kVA UPS, you need to install the M16 flat washers before installing the M16 lifting eye bolts.
2. The M16 flat washers (only for 40/ 50kVA) and M16 lifting eye bolts should be provided by users.

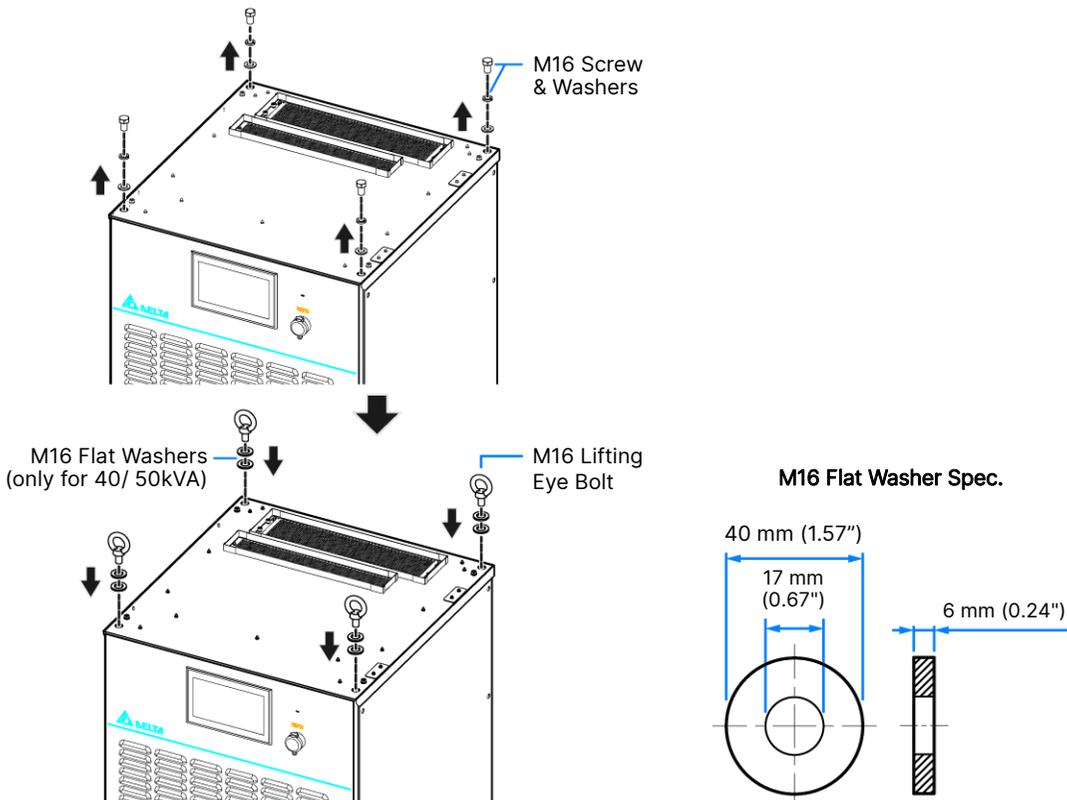


Figure 5-2: Installation of M16 Lifting Eye Bolts

Step 2

Move the UPS to the designated installation area. Please note that the UPS must stand on the floor stably and levelly without any tipping.

Step 3

Refer to the figures below for the information about cabinet floor fixing points.

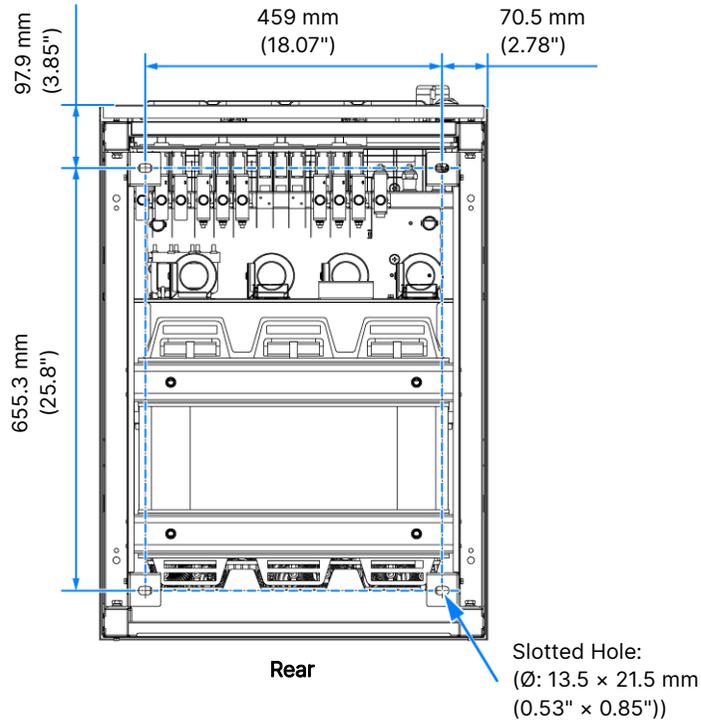


Figure 5-3: 40/ 50kVA UPS_ Cabinet Floor Fixing Points

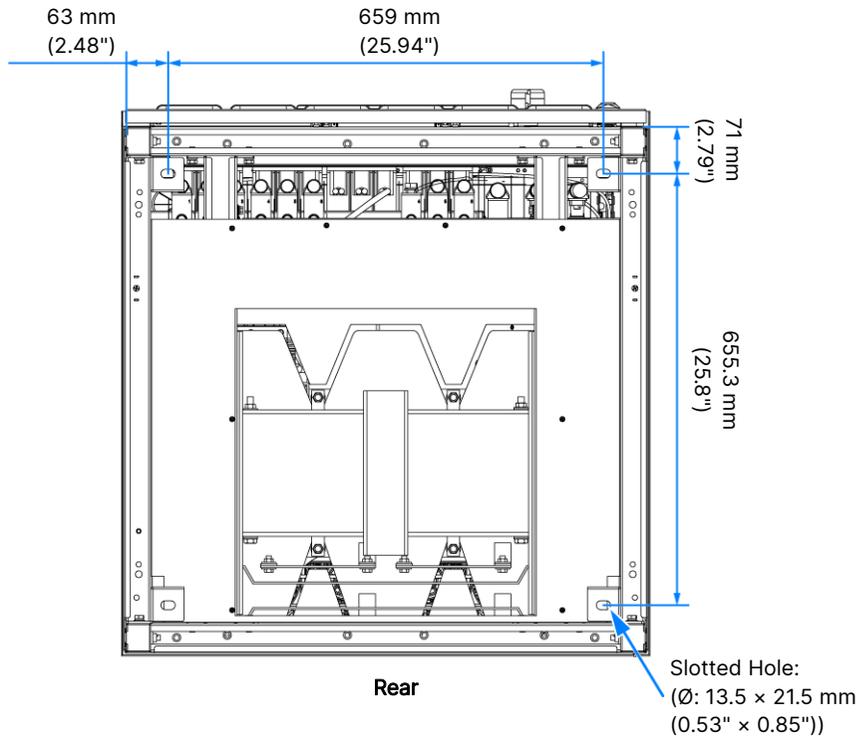


Figure 5-4: 100/ 120kVA UPS_ Cabinet Floor Fixing Points

Step 4

Move the UPS to the designated installation area. Please note that the UPS must stand on the floor stably and levelly without any tipping.

Step 5

- **For installation not against the wall:**

Use four M10 expansion bolts, four washers and four nuts (provided by service personnel) to fix the UPS's four balance brackets (two at the front and two at the rear) on the ground.

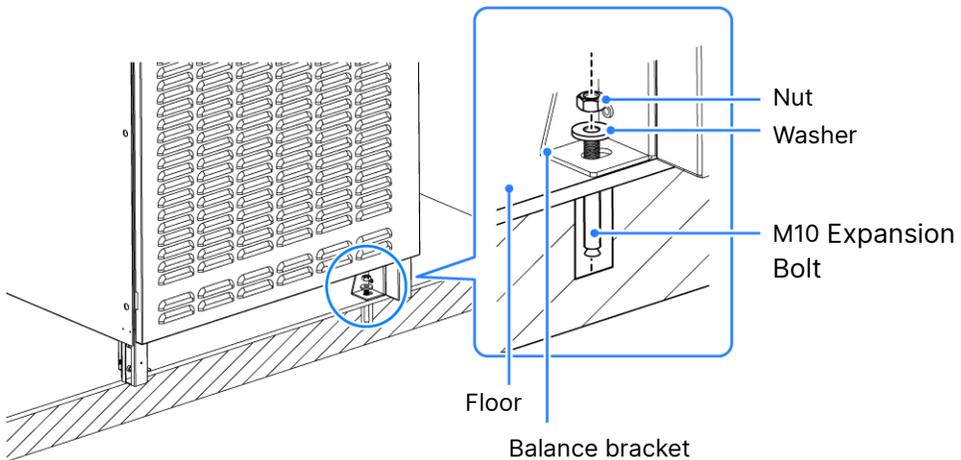


Figure 5-5: 100/ 120kVA UPS_ Fix the Balance Bracket on the Ground

- **For installation against the wall:**

(1) Use two M10 expansion bolts, two washers and two nuts (provided by service personnel) to fix the UPS's two front balance brackets on the ground. Please refer to **Figure 5-5**. Please note that there is no need to install the balance brackets at the rear of the cabinet.

(2) Unscrew the two M8 screws (already fixed on the top of the cabinet), take out the two wall brackets from the package bag and use the removed two M8 screws to install the two wall brackets on the top left and top right of the cabinet. The tightening torque of M8 screw should be 150 ± 5 kgf-cm (130 ± 4.3 lb-in).

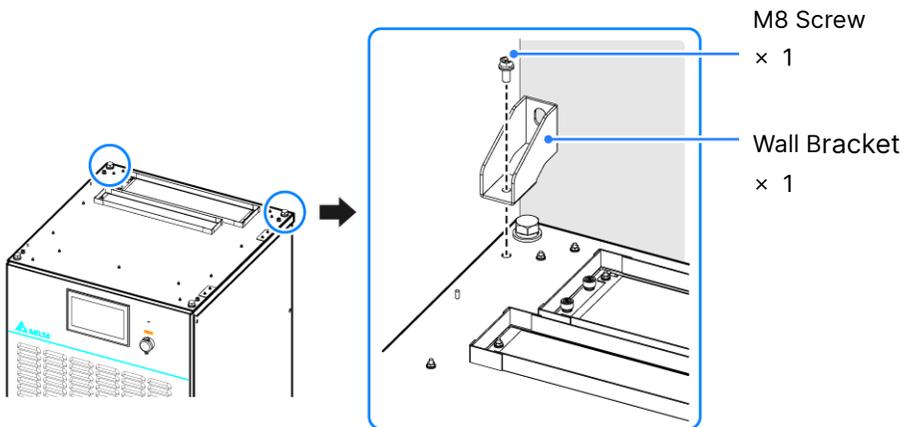


Figure 5-6: 100/ 120kVA UPS_ Install the Wall Bracket on the Top of the Cabinet

(3) Use two M10 expansion bolts, two plain washers, two spring washers and two nuts (provided by service personnel) to fix the two wall brackets against the wall.

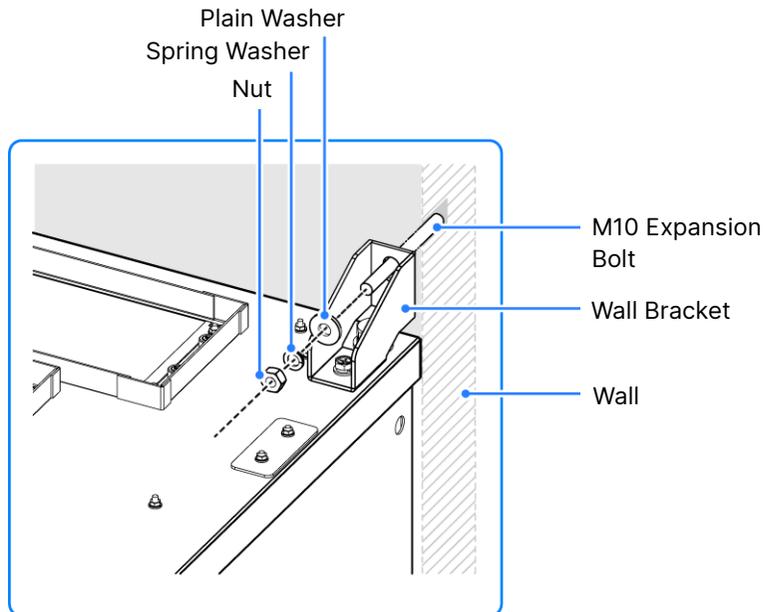


Figure 5-7: 100/ 120kVA UPS_ Install the Wall Bracket against the Wall



WARNING:

If you don't fix the UPS's balance brackets on the ground, the UPS might topple over. For safety concerns, please fix the UPS's balance brackets on the ground firmly.

Step 6

Follow **5.6 Installation of Rodent Shields** to install the rodent shields.

Step 7

After completing the above steps, follow the instructions in **5.4 Wiring** to perform wiring. When connecting the external battery cabinet(s), please refer to **5.5 External Battery Cabinet Connection Warnings** to perform external battery cabinet wiring. After routing the cables and verifying cable connections, seal or cover the gaps between the cables and the cabinets to avoid foreign materials falling into the UPS. After that, reinstall the removed panels and close the front door if necessary.

**NOTE:**

For parallel application, the installation procedures are as follows.

Step 1

Follow the above-mentioned step 1 ~ step 5.

Step 2

Follow the figures below to remove the two upper parallel plates (including four M4 nuts) and use them to join the top of the UPSs that need to be paralleled.

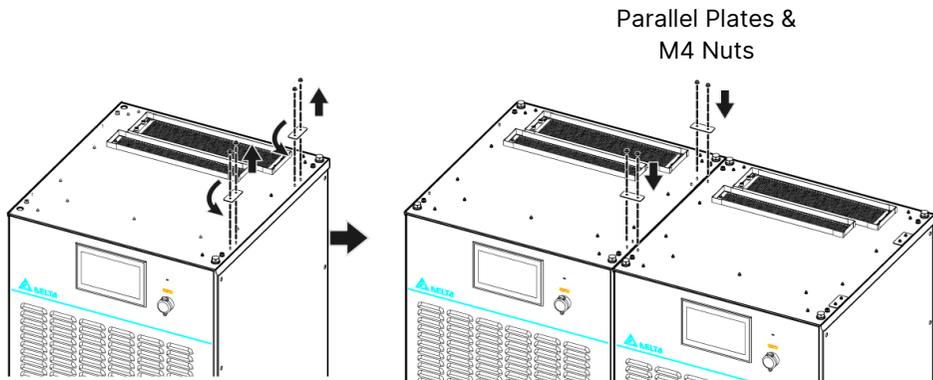


Figure 5-8: Join the Top of the UPSs that Need to be Paralleled

Step 3

Remove the front and rear rodent shields.

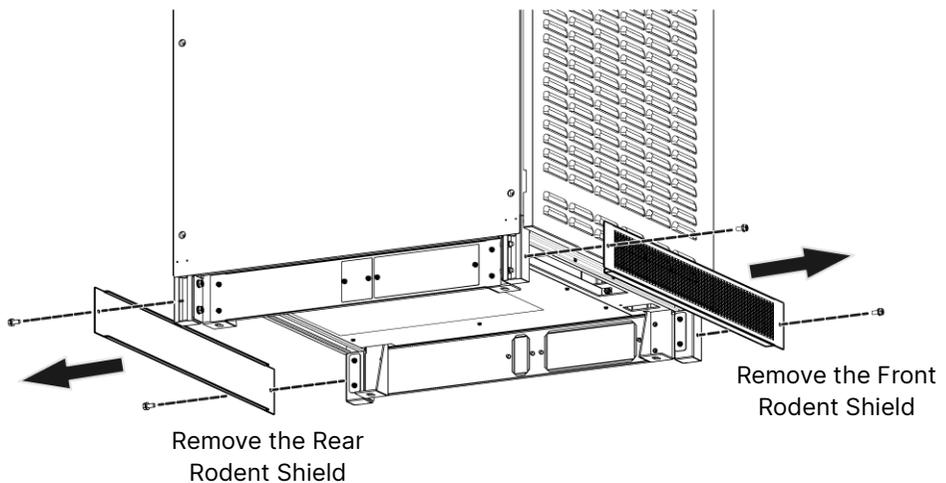


Figure 5-9: Remove the Front and Rear Rodent Shields

Step 4

Remove the two lower parallel plates from the cabinet's two right feet.

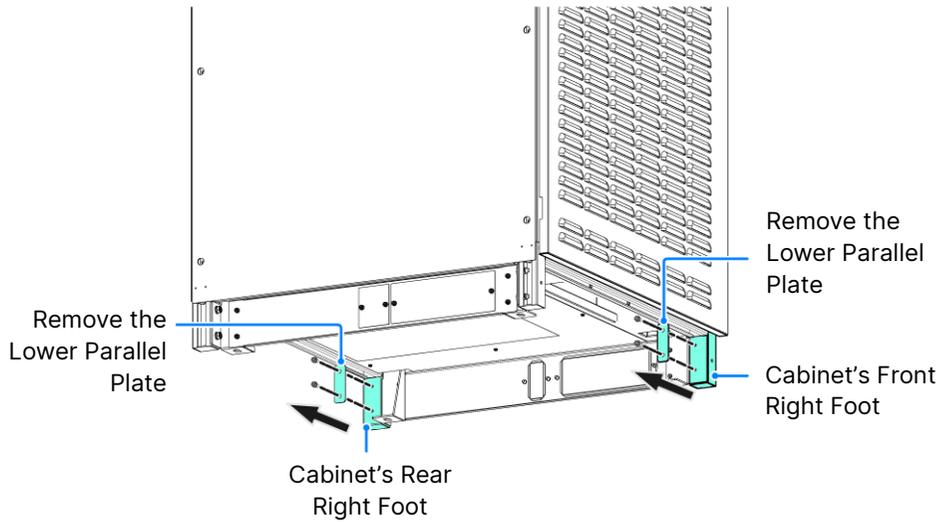


Figure 5-10: Remove the Two Lower Parallel Plates from the Cabinet's Two Right Feet

Step 5

Re-install the front and rear rodent shields. After that, install the two lower parallel plates on the front and rear rodent shields.

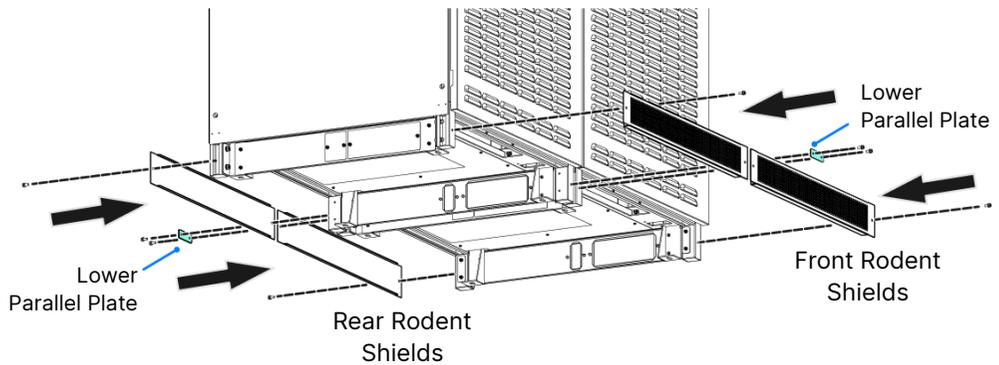


Figure 5-11: Install the Two Lower Parallel Plates on Front and Rear Rodent Shields

5.4 Wiring

5.4.1 Pre-wiring Warnings



NOTE:

1. Before wiring, please ensure that you have followed **5.3 UPS Installation** to fix the UPS in the designated installation area firmly.
 2. Before wiring, please read **5.4 Wiring** thoroughly.
 3. Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel.
 4. During wiring procedures, please protect the UPS from foreign materials falling into the cabinets.
- Before wiring or making any electrical connection, make sure that the power supplied to the input and output of the UPS is cut off completely.
 - Check if the size, diameter, phase and polarity are correct for each cable connected to the UPS and external battery cabinet(s). Please refer to **Table 5-2**.



NOTE:

Table 5-2 is based on (1) default input/ output voltage: 380V, (2) default battery Q'ty: 40 PCS and (3) maximum charge current. For other conditions different from **Table 5-2**, please contact Delta service personnel for relevant values.

Table 5-2: Specifications of Input/ Output/ Battery Cables (Copper) and Breakers

UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Input	Nominal Current at 380V	71A	87A	171A	200A
	Maximum Input Current*1	76A	94A	184A	218A
	Recommended cable size	(L1/ L2/ L3) 25 mm ² × 1 PC (49.3 kcmil × 1 PC)	35 mm ² × 1 PC (69 kcmil × 1 PC)	95 mm ² × 1 PC (187.5 kcmil × 1 PC)	120 mm ² × 1 PC (236.8 kcmil × 1 PC)

UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW	
Input (continued)	Maximum cable lug width	13 mm (0.51")		35 mm (1.37")		
	Screw size/ Cable lug inner diameter	M8/ 8.4 mm (0.33")		M10/ 10.5 mm (0.41")		
	Terminal type*2	SQNBS38-8 38 mm ² (75 kcmil)		SQNBS100-10 100 mm ² (197.4 kcmil)	SQNBS125-10 125 mm ² (246.7 kcmil)	
Bypass	Rated current at 380V	67 A	79 A	155 A	186 A	
	Recommended cable size	(L1/ L2/ L3/ N)	25 mm ² × 1 PC (49.3 kcmil × 1 PC)	70 mm ² × 1 PC (138.1 kcmil × 1 PC)	95 mm ² × 1 PC (187.5 kcmil × 1 PC)	
	Maximum cable lug width	13 mm (0.51")		35 mm (1.37")		
	Screw size/ Cable lug inner diameter	M8/ 8.4 mm (0.33")		M10/ 10.5 mm (0.41")		
	Terminal type*2	SQNBS38-8 38 mm ² (75 kcmil)		SQNBS80-10 80 mm ² (158 kcmil)	SQNBS100-10 100 mm ² (197.4 kcmil)	
	Rated current at 380V	61 A	76 A	152 A	182 A	
Output	Recommended cable size	(L1/ L2/ L3/ N)	16 mm ² × 1 PC (31.6 kcmil × 1 PC)	25 mm ² × 1 PC (49.3 kcmil × 1 PC)	70 mm ² × 1 PC (138.1 kcmil × 1 PC)	95 mm ² × 1 PC (187.5 kcmil × 1 PC)
	Maximum cable lug width	13 mm (0.51")		35 mm (1.37")		

UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW	
Output (Continued)	Screw size/ Cable lug inner diameter	M8/ 8.4 mm (0.33")		M10/ 10.5 mm (0.41")		
	Terminal type*2	SQNBS22-8 22 mm ² (43.4 kcmil)	SQNBS38-8 38 mm ² (75 kcmil)	SQNBS80-10 80 mm ² (157.9 kcmil)	SQNBS100-10 100 mm ² (197.4 kcmil)	
Battery	Nominal discharge current (condition: 2V per cell)	88 A	110 A	202 A	242 A	
Battery (continued)	Maximum discharge current (condition: 1.75V per cell)	91 A	113 A	231 A	277 A	
	Recommended cable size	(+/ -)	35 mm ² × 1 PC (69.1 kcmil × 1 PC)	50 mm ² × 1 PC (98.7 kcmil × 1 PC)	120 mm ² × 1 PC (236.8 kcmil × 1 PC)	185 mm ² × 1 PC (365.1 kcmil × 1 PC)
	Maximum cable lug width	13 mm (0.51")		35 mm (1.37")		
	Screw size/ Cable lug inner diameter	M8/ 8.4mm (0.33")		M10/ 10.5 mm (0.41")		
	Terminal type*2	SQNBS38-8 38 mm ² (75 kcmil)	SQNBS60-8 60 mm ² (118.4 kcmil)	SQNBS125-10 125 mm ² (246.7 kcmil)	SQNBS200-10 200 mm ² (395 kcmil)	
Cable Q'ty	2 PCS per conduit					
Tightening Torque	M8 = 150 ± 5 kgf-cm (130 ± 4.3 lb-in)			M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)		
Input Breaker (Q1)*3	600V/ 100A			600V/ 225A		
Bypass Breaker (Q2)*3	600V/ 100A			600V/ 225A		

UPS Capacity	40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Manual Bypass Breaker (Q3)*3	600V/ 100A		600V/ 225A	
Output Breaker (Q4)*3	600V/ 100A		600V/ 225A	



NOTE:

1. Please follow local regulations to install proper conduits and bushings for cable protection.
 2. Please refer to national and local electrical codes for acceptable protective devices and cable sizes.
 3. *1 At nominal input voltage and full charge.
 4. *2 The suggested manufacturer is K.S. TERMINAL INC. You may use equivalent terminals provided by other manufacturers.
 5. *3 The current is based on using 100% rated breakers.
 6. According to the **Table B.52.2** listed in the IEC 60364-5-52 standard, the cables sizes listed in **Table 5-2** mentioned in this user manual meet the following minimum requirements:
 - Use of 70°C (158°F) copper wires.
 - The selection of cable sizes is based on the ambient temperature of 30°C (86°F). If the ambient temperature exceeds 30°C (86°F), please refer to the IEC standard to correct coefficient to select cable sizes with higher specifications.
- If there is a floating voltage between the input power's neutral (N) and the PE (protective earth) (⊕), and you require that the VNG of the UPS should be zero, we suggest that you install an isolation transformer in front of the input side of the UPS, and connect the isolation transformer's secondary neutral (N) to the PE (protective earth) (⊕) at the proximal end of the isolation transformer.
 - The (main/ bypass) AC source must be a three-phase system and meets the specifications specified on the UPS rating label.
 - Check the battery polarity when connecting the external battery cabinet(s) to the UPS. Do not connect the battery polarity in reverse. For relevant information, please refer to **5.5 External Battery Cabinet Connection Warnings**.
 - The UPS's PE terminal (⊕) must be grounded. Please use ring-type terminals when wiring.

**WARNING:**

1. Wrong wiring will cause damage to the UPS and electric shock.
2. If the UPS is not grounded, the power boards and components might be damaged after the UPS is powered on.

5.4.2 Single Input to Dual Input Modification

**NOTE:**

Only authorized Delta engineers or service personnel can modify single input to dual input setup.

The UPS default setting is single input. If you want to modify it into dual input, please follow the steps below.

Step 1

Open the UPS's front door and remove the breaker cover and wiring terminals' cover as shown in the figures below.

Step 2

Remove the six screws and three cables connected between the AC Input terminals (L1/ L2/ L3) and the Bypass Input terminals (L1/ L2/ L3) (see figures below. After that, the dual input setup is completed.

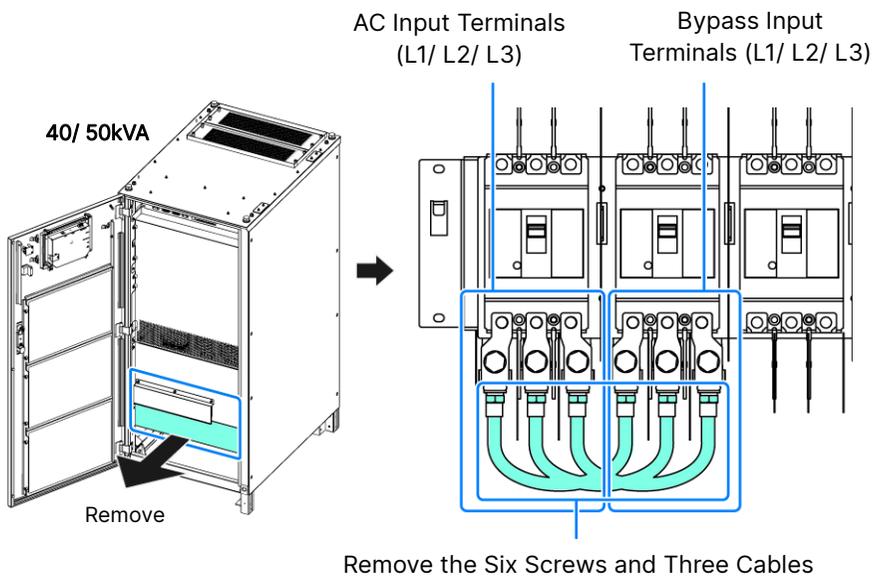


Figure 5-12: 40/ 50kVA UPS_ Remove the Six Screws and Three Cables Connected between the AC Input Terminals and Bypass Input Terminals

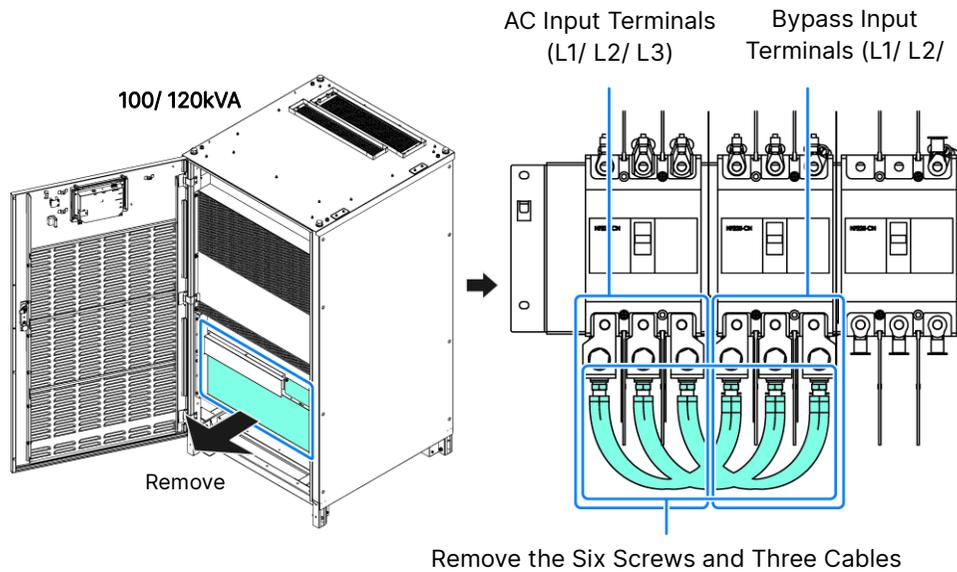


Figure 5-13: 100/ 120kVA UPS_ Remove the Six Screws and Three Cables Connected between the AC Input Terminals and Bypass Input Terminals



NOTE:

Please keep the removed screws and cables properly for future use. If you want to modify the UPS from dual input into single input, please use the removed six screws and three cables to connect the AC Input terminals (L1/ L2/ L3) and Bypass Input terminals (L1/ L2/ L3).

5.4.3 Single Unit Wiring



NOTE:

Before wiring, please read **5.4 Wiring** thoroughly and make sure that relevant conditions have been met.

Refer to **Table 5-3** for information about the wiring terminals and wiring arrangement.

Table 5-3: UPS's Wiring Terminals & Wiring Information

No.	Item*1	Function
1	AC Input Terminals (L1/ L2/ L3)	<ul style="list-style-type: none"> Single Input: Connect the terminals to the main AC source. Dual Input: Connect the terminals to the main AC source.

No.	Item*1	Function
2	Bypass Input Terminals (L1/ L2/ L3)	<ul style="list-style-type: none"> • Single Input: Connect the terminals to the main AC source. • Dual Input: Connect the terminals to the bypass AC source.
3	UPS Output Terminals (L1/ L2/ L3)	Connect the terminals to the critical loads.
4	Battery Input Terminals (+/ -)	Connect the terminals to the external battery cabinet(s). Please contact Delta service personnel for battery configurations.
5	N Terminal	<p>Only for 3P4W application.</p> <ul style="list-style-type: none"> • Single Input: Connect the terminal to the main AC source's N and critical loads' N. • Dual Input: Connect the terminal to the bypass AC source's N and critical loads' N.
6	 PE (protective earth) Terminal	Protective earthing for protection against electrical shock in case of fault*2. The terminal must be connected to the main earth.
7	 GND (ground) Terminals	The terminals are used to ground the devices, which are associated with UPS operation.

**NOTE:**

1. *1 Please refer to *Figure 2-4* and *Figure 2-5* for the terminals listed in the above 'Item' column.
2. *2 The PE (protective earth) connection ensures that all exposed conductive surfaces are at the same electric potential as the Earth to avoid the risk of electrical shock due to leakage current or an insulation fault.

5.4.3.1 Single Input (Single Unit)

When there is only one AC power source, single unit wiring procedures are as follows.

Step 1

Make sure that the Input Breaker (Q1), Bypass Breaker (Q2), Manual Bypass Breaker (Q3) and the Output Breaker (Q4) are in the **OFF** position.

Step 2

Make sure that the external battery cabinet's breaker (Q5) is in the **OFF** position.

Step 3

Follow *5.6 Installation of Rodent Shields* to install the rodent shields.

Step 4

Follow **Table 5-2** to select proper input, output, and battery cables.

Step 5

The UPS **ONLY** allows cable routing from the bottom. Please leave adequate space below the UPS. **1** Open the UPS's front door, **2** remove the wiring terminals' cover, **3** remove the lateral rodent shield's wiring cover, **4** connect the cables to the wiring terminals and **5** route the cables through the lateral rodent shield.

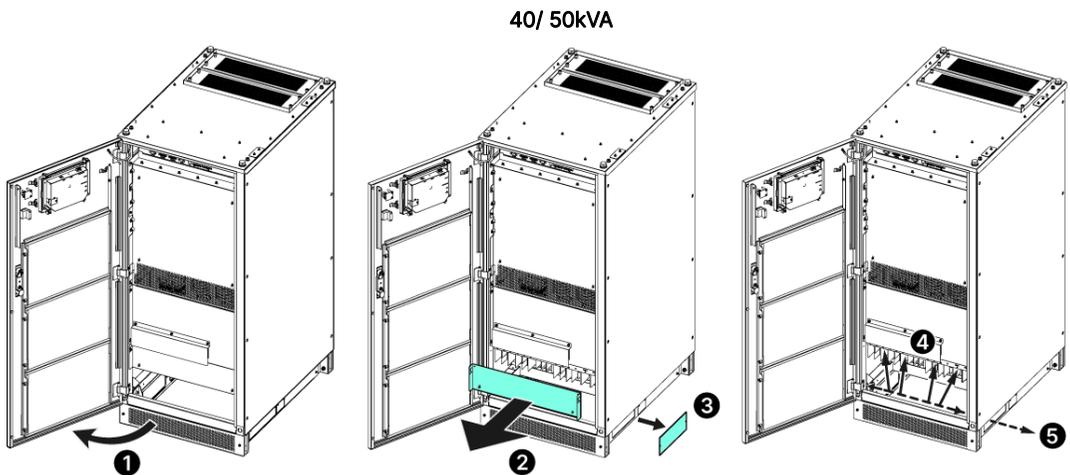


Figure 5-14: 40/ 50kVA UPS_ Bottom Cable Entry for the Wiring Terminals

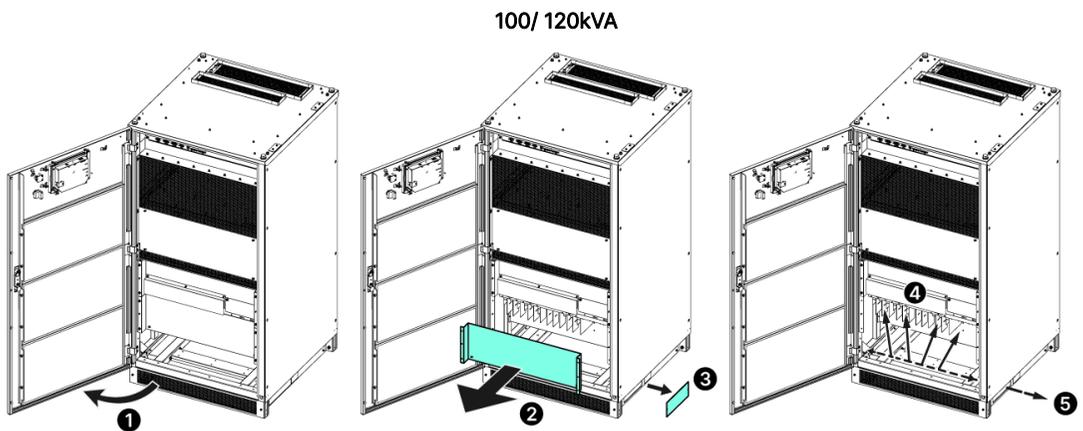


Figure 5-15: 100/ 120kVA UPS_ Bottom Cable Entry for the Wiring Terminals

Step 6

Connect the cables of the main AC source, output and external battery cabinet(s) to the UPS. Please refer to **Table 5-3, 5.5 External Battery Cabinet Connection Warnings** and the following diagram to perform wiring.

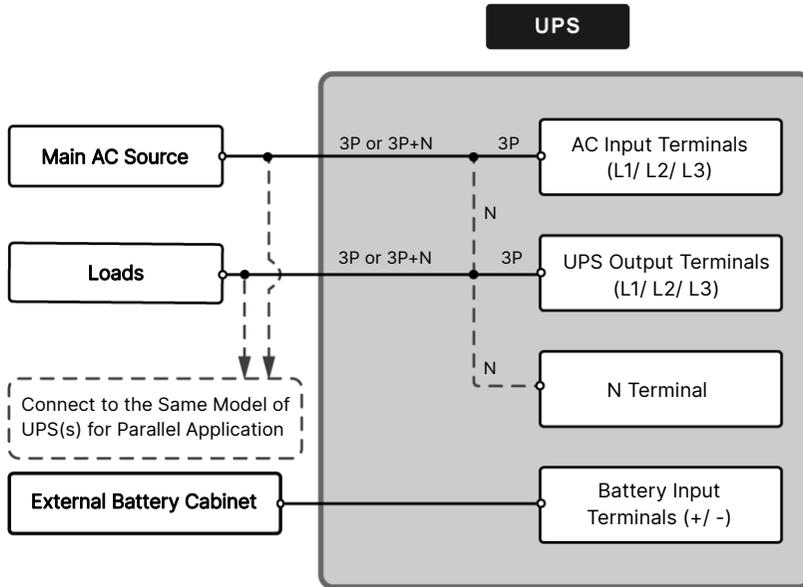


Figure 5-16: Single Unit Single Input Wiring Diagram

Step 7

Follow the table below to select proper Protective Earth (PE) copper cables to ground the UPS, external battery cabinet(s) and connected critical loads. The table is in accordance with IEC 62477-1 Table 7. The grounding diagram below is for reference.

UPS Capacity		40kVA/ 36kW 50kVA/ 45kW	100kVA/ 90kW 120kVA/ 108kW
Suggested PE Copper Cable Size	Input	16 mm ² × 1 PC (31.6 kcmil × 1 PC)	70 mm ² × 1 PC (138.1 kcmil × 1 PC)
	Bypass	16 mm ² × 1 PC (31.6 kcmil × 1 PC)	50 mm ² × 1 PC (98.7 kcmil × 1 PC)
	Output	16 mm ² × 1 PC (31.6 kcmil × 1 PC)	50 mm ² × 1 PC (98.7 kcmil × 1 PC)
	Battery	25 mm ² × 1 PC (49.3 kcmil × 1 PC)	95 mm ² × 1 PC (187.5 kcmil × 1 PC)
Maximum Cable Lug Width		13 mm (0.51")	

UPS Capacity	40kVA/ 36kW 50kVA/ 45kW	100kVA/ 90kW 120kVA/ 108kW
Screw Size/ Cable Lug Inner Diameter	M8/ 8.4 mm (0.33")	
Tightening Torque	M8 = 150 ± 5 kgf-cm (130 ± 4.3 lb-in)	
Terminal Type* ¹	SQNBS22-8: 22 mm ² (43.4 kcmil) SQNBS38-8: 38 mm ² (75 kcmil) SQNBS60-8: 60 mm ² (118.4 kcmil) SQNBS100-8: 100 mm ² (197.4 kcmil)	



NOTE:

*¹ The suggested manufacturer is K.S. TERMINAL INC. You may use equivalent terminals provided by other manufacturers.

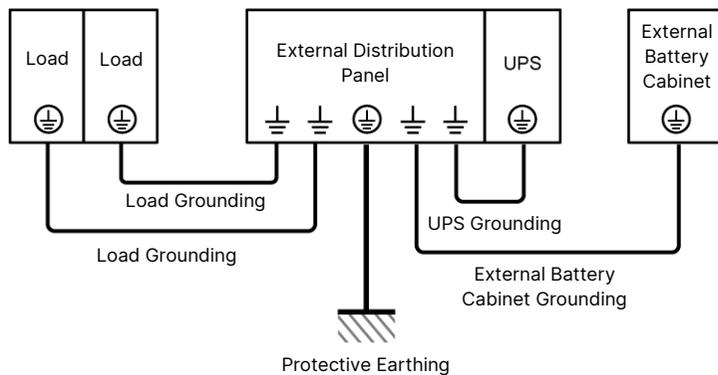


Figure 5-17: Grounding Diagram_ Single Unit

5.4.3.2 Dual Input (Single Unit)

When there are two AC power sources, single unit wiring procedures are as follows.

Step 1

Follow *5.4.2 Single Input to Dual Input Modification* to modify the UPS from single input to dual input.

Step 2

Follow **Step 1 ~ Step 5** mentioned in *5.4.3.1 Single Input (Single Unit)*.

Step 3

Connect the cables of the main AC source, bypass source, output and external battery cabinet(s) to the UPS. Please refer to *Table 5-3, 5.5 External Battery Cabinet Connection Warnings* and the following diagrams to perform wiring.

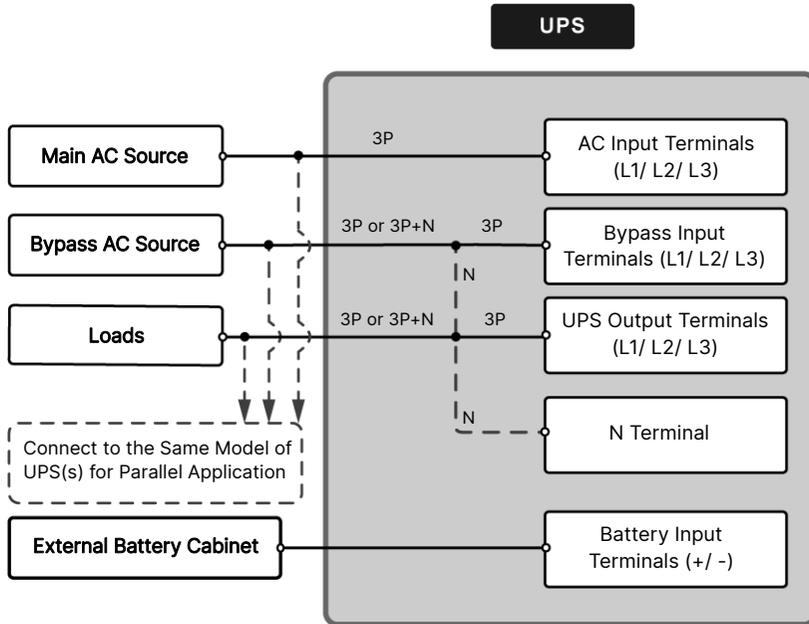


Figure 5-18: Single Unit Dual Input Wiring Diagram

Step 4

Follow **Step 7** mentioned in *5.4.3.1 Single Input (Single Unit)* and refer to *Figure 5-17* to ground the UPS, external battery cabinet(s) and connected critical loads.


5.4.4 Parallel Units Wiring



NOTE:

1. You can parallel a maximum of eight UPS units for redundancy and capacity expansion.
2. Only UPSs with the same capacity, voltage, frequency and version can be paralleled. Please only use the provided parallel cable to parallel UPS units. Otherwise, the parallel function will fail.
3. When the UPSs are paralleled, the length of each unit's bypass input cables and output cables must be the same. This ensures that the parallel UPSs can equally share the critical loads under Bypass mode.

Input Distribution Panel

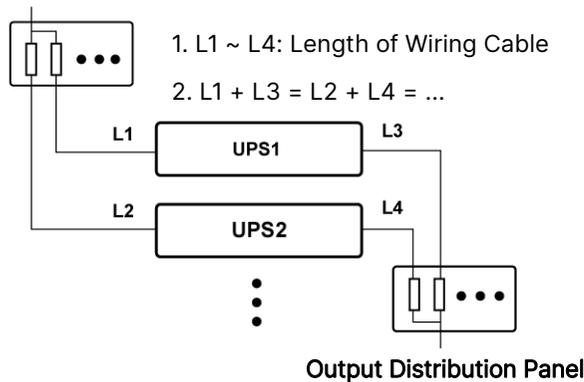

- 4 Before wiring, please read **5.4 Wiring** thoroughly and make sure that relevant conditions have been met.

Step 1

For single input, follow **Step 1 ~ Step 7** mentioned in **5.4.3.1 Single Input (Single Unit)**. As for the grounding diagram, please refer to **Figure 5-20** rather than **Figure 5-17**.

For dual input, follow **Step 1 ~ Step 4** mentioned in **5.4.3.2 Dual Input (Single Unit)**. As for the grounding diagram, please refer to **Figure 5-20** rather than **Figure 5-17**.

Step 2

Use the provided parallel cables*¹ to connect the parallel ports of the parallel units. Please adopt the Daisy Chain method shown in the figure below. For the parallel port location, refer to **Figure 4-2**. For top or bottom cable entry, refer to **4.3 Cable Routing for the Communication Interfaces**.



NOTE:

- *¹ One parallel cable is provided in each UPS's accessory package.

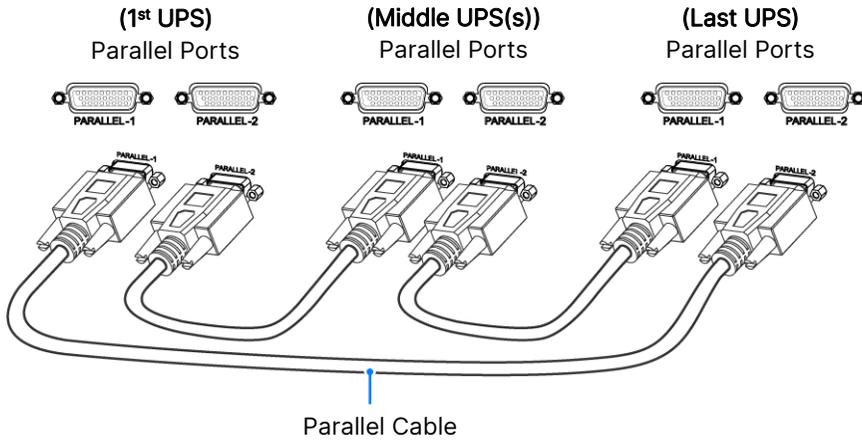


Figure 5-19: Parallel Port Connection_ Daisy Chain Method

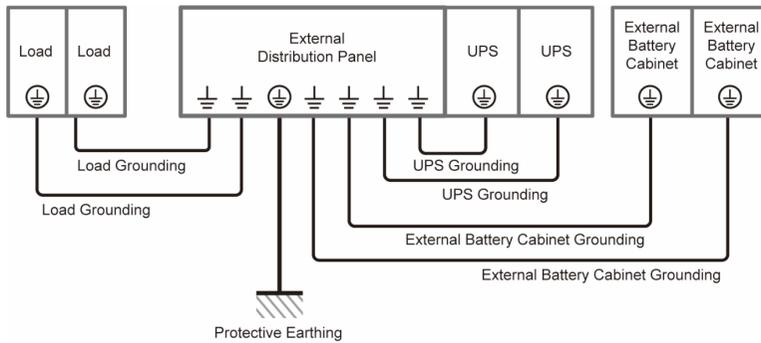


Figure 5-20: Grounding Diagram_ Parallel Units



WARNING:

Before start-up of the parallel units, qualified service personnel must set each UPS's '**Parallel Group ID**' (1 or 2) and '**Parallel ID**' (1 ~ 8) through the LCD. Otherwise, the parallel UPSs cannot be started. Please refer to **7.6.5 Parallel Setting**.

5.5 External Battery Cabinet Connection Warnings



NOTE:

1. The information of the battery parameters in this chapter may not be applicable to the lithium-ion batteries. For relevant information, please refer to the manual of the lithium-ion batteries.
2. Whether you use lead-acid batteries or lithium-ion batteries, please contact Delta service personnel for any battery/ battery cabinet's setup and configurations.



WARNING:

1. Before performing battery/ battery cabinet installation, wiring and replacement, please turn off each external battery cabinet's breaker (Q5) to completely disconnect the battery power from the UPS.
2. A battery can present a risk of electric shock and high short-circuit current. Servicing of batteries and battery cabinets must be performed or supervised by qualified service personnel knowledgeable in batteries, battery cabinets and the required precautions. Keep unauthorized personnel away from batteries and battery cabinets.

You should connect the UPS with at least one external battery cabinet to ensure that the connected critical loads are protected when a power failure occurs. You can connect up to ten units of external battery cabinets to the UPS.

- To ensure that the batteries are fully charged, please charge the batteries for at least 8 hours before the initial use of UPS. The charging procedures are as follows.
 1. (A) Connect the UPS to the external battery cabinet(s), and (B) connect the main AC source and bypass AC source (for dual input application only) to the UPS. Please refer to **5.4 Wiring**.
 2. Follow **6. UPS Operation** to turn on the UPS and the external battery cabinet(s). After that, the batteries will be charged automatically.



WARNING:

You can connect the critical loads to UPS only after the batteries are fully charged. This guarantees that the UPS can provide sufficient backup power to the critical loads connected when a power failure occurs.

- To connect the external battery cabinet(s) to the UPS, please refer to **5.4 Wiring** and **Figure 5-21**.
- For the external battery cabinet's grounding information, please refer to **Figure 5-17** and **Figure 5-20**.

- **Battery Parameters:**

No.	Item		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
1	Charge Voltage		Float voltage: 544 Vdc (default)			
			Boost voltage: 560 Vdc (default)			
2	Charge Current	Maximum	15 A	17 A	38 A	45 A
		Default	10 A	11 A	25 A	30 A
3	Low Battery Shutdown Voltage		378 ~ 462 Vdc (default: 420 Vdc)			
4	Battery Quantity		12V × 40 PCS (default)			

**NOTE:**

1. If you need to modify the charge current default setting and low battery shutdown default setting, please contact your local dealer or service personnel.
 2. Follow on-site requirements to choose 12V × 36 ~ 44 PCS of batteries. Changing the battery quantity will influence specifications to be applied. For battery selection, installation and replacement, please contact your local dealer or customer service.
 3. You must set up the '**Battery Rating Voltage**', '**Battery Strings**' and '**Capacity**' on the LCD according to on-site conditions; otherwise, batteries will be over-charged, not fully charged or even seriously damaged.
- Only use the same type of batteries from the same supplier. Never use old, new and different Ah batteries at the same time.
 - The number of batteries must meet the UPS requirements.
 - Do not connect the batteries in reverse.
 - Use a voltage meter to measure whether the total voltage is around 12.5Vdc × the total number of batteries after the batteries are connected in series.
 - The default battery quantity is 40 PCS of 12V batteries connected in series. You should use battery cables to connect the external battery cabinet(s) with the '+' and '-' terminals marked on the UPS.

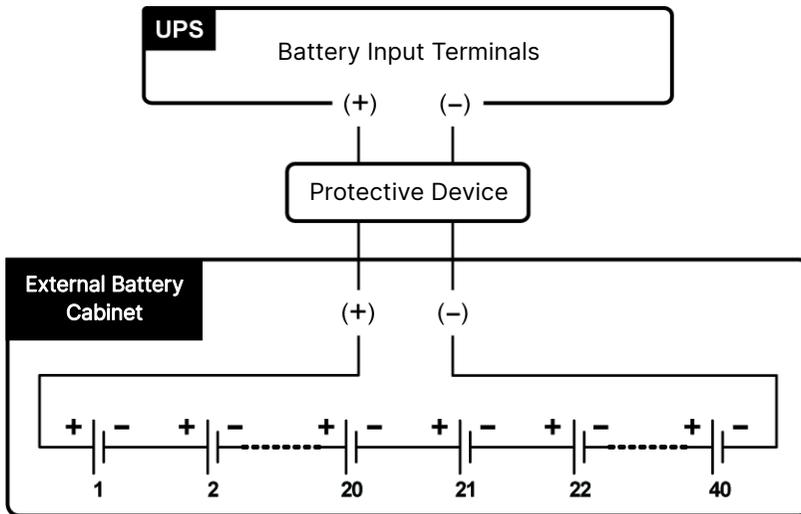


Figure 5-21: External Battery Cabinet Connection



WARNING:

The electrolyte leakage of the batteries can lead to serious accidents. For safety concerns, you must insulate the batteries properly (using insulated trays or boxes) from the metal cabinets and racks.

- **Installation of the External Battery Cabinet's Protective Device**

Please follow your UPS rating to install an appropriate protective device for each external battery cabinet. Please refer to *Table 5-4* and *Figure 5-22 ~ Figure 5-27*.

Table 5-4: External Battery Cabinet's Protective Device (Default Battery Q'ty: 12 Vdc × 40 PCS)

UPS Capacity	DC Circuit Breaker or DC Isolated Switch (Final Positive and Negative Poles' Voltage ≥ 600 Vdc)	DC Fuse (Voltage ≥ 600 Vdc)
40 kVA/ 36 kW	100 A	100A × 2 PCS
50 kVA/ 45 kW	125 A	125A × 2 PCS
100 kVA/ 90 kW	250 A	250A × 2 PCS
120 kVA/ 108 kW	300 A	300A × 2 PCS

**NOTE:**

1. **Table 5-4** is for 12Vdc × 40 PCS of batteries (default). If you install a different number of batteries, please contact Delta service personnel for the protective device's current and voltage values.
 2. If you need to parallel multiple units of external battery cabinets, please contact Delta service personnel for relevant information.
 3. To extend the backup time, you can parallel up to ten units of external battery cabinets to the UPS. Please note that (1) the number of batteries in each paralleled external battery cabinet shall be the same and that (2) the cable length of each battery string shall be the same.
- When choosing the external battery cabinet's protective device, please take the following factors into consideration: (1) overcurrent between the UPS and battery circuit, (2) short circuit current of the batteries, (3) wire/ cable materials, and (4) local electrical regulations. If you have any questions about the external battery cabinet's protective device, please contact Delta service personnel.
 - The protective device is optional, and its type must be fast-acting DC circuit breaker and/ or fast-acting DC fuse. If you want to buy any of them, please contact Delta service personnel. When choosing the protective device, follow the instructions below.
 - (1) The protective device's rated current must comply with the current values shown in **Table 5-4**.
 - (2) The specifications of the protective device's short-circuit protection (i.e. the tripping current of the fast-acting DC circuit breaker and/ or the melting current of the fast-acting DC fuse) must be 4 ~ 6 times the values shown in **Table 5-4**. Besides, the response time of the protective device must be less than 20ms.
 - (3) For the choice of the fast-acting DC fuse mentioned above, the A50QS series from the supplier **Ferraz Shawmut** is suggested. Please contact Delta customer service for relevant information.
 - (4) The maximum tripping current of the fast-acting DC circuit breaker and/ or the maximum melting current of the fast-acting DC fuse mentioned above are 6 times as much as the values shown in **Table 5-4**. These maximum values are suggested for general applications only. For the actual maximum values, the maximum short-circuit capacity of the on-site batteries must be taken into consideration. Please contact Delta customer service for relevant information.
 - (5) The maximum allowable fault current is 20kA. Please confirm that the interrupting rating of your chosen protective device is sufficient.

External Battery Cabinet's Protective Device (Option 1)

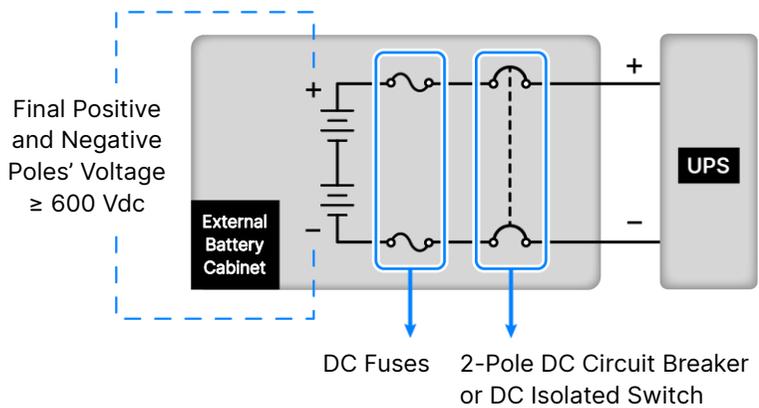


Figure 5-22: Installation of a 2-pole DC Circuit Breaker or DC Isolated Switch Connected in Series with Two DC Fuses

External Battery Cabinet's Protective Device (Option 2)

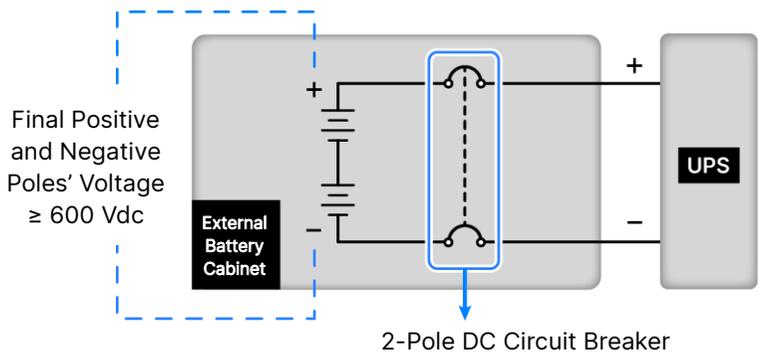


Figure 5-23: Installation of a 2-pole DC Circuit Breaker

External Battery Cabinet's Protective Device (Option 3)

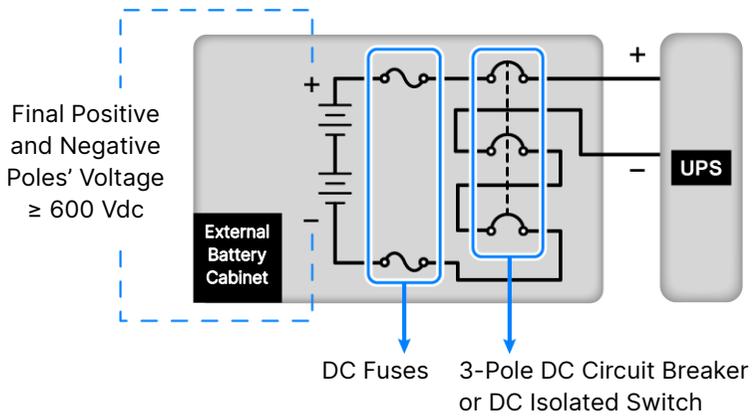


Figure 5-24: Installation of a 3-pole DC Circuit Breaker or DC Isolated Switch Connected in Series with Two DC Fuses

External Battery Cabinet's Protective Device (Option 4)

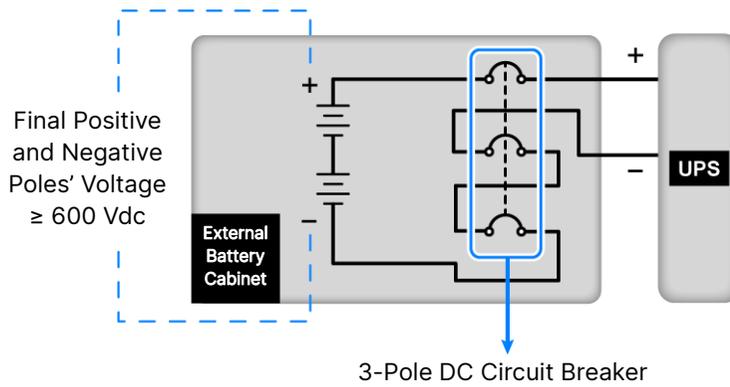


Figure 5-25: Installation of a 3-pole DC Circuit Breaker

External Battery Cabinet's Protective Device (Option 5)

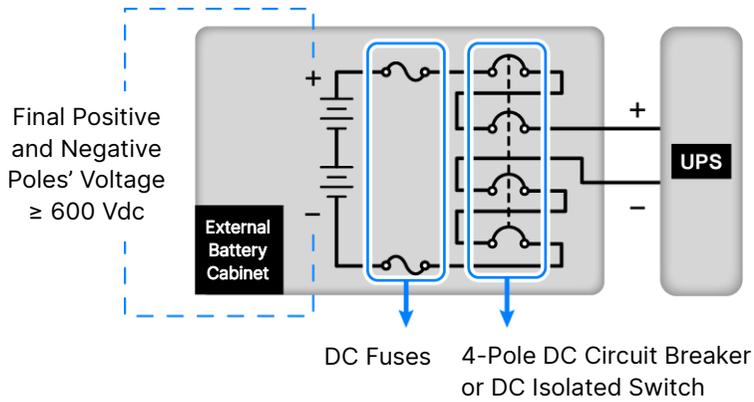


Figure 5-26: Installation of a 4-pole DC Circuit Breaker or DC Isolated Switch Connected in Series with Two DC Fuses

External Battery Cabinet's Protective Device (Option 6)

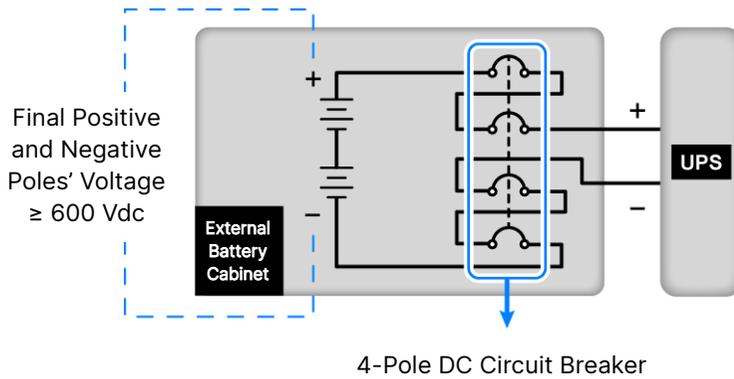


Figure 5-27: Installation of a 4-pole DC Circuit Breaker

- **Common Battery (Only for Parallel UPSs Sharing the Same External Battery Cabinet(s))**

To save on your cost and installation space, the parallel UPSs can share the connected external battery cabinet(s). See *Figure 5-28* for two parallel UPSs sharing one external battery cabinet as an example.



NOTE:

The following 'common battery' information is not applicable to the UPS using lithium-ion batteries. For relevant information, please refer to the user manual of the lithium-ion batteries. Whether you use the lead-acid batteries or the lithium-ion batteries, please contact Delta service personnel for any battery/ battery cabinet's setup and configurations.

For common battery application, please install a protective device between each parallel UPS and its connected external battery cabinet(s). You have to use the LCD to set each UPS's '**Float Charge Voltage**' (default: 544V) the same, '**Equalized Charge Voltage**' (default: 560V) the same, '**Battery Strings**' even and '**Charge Current (Max)**' even. Please refer to the examples below and *7. LCD Display & Settings*.

Example I

When (1) two UPSs are paralleled and share one external battery cabinet, (2) lead-acid batteries are used, (3) the battery capacity is 200AH, (4) there are a total of 4 battery strings, and (5) the charge current is 80A, please use the LCD to set each UPS's '**Battery Type**' as '**VRLA**', '**Capacity**' as 200AH, '**Battery Strings**' as 2, and '**Charge Current (Max)**' as 40A.

Example II

When (1) three UPSs are paralleled and share one external battery cabinet, (2) lead-acid batteries are used, (3) the battery capacity is 300AH, (4) there are a total of 3 battery strings, and (5) the charge current is 90A, please use the LCD to set each UPS's '**Battery Type**' as '**VRLA**', '**Capacity**' as 300AH, '**Battery Strings**' as 1, and '**Charge Current (Max)**' as 30A.

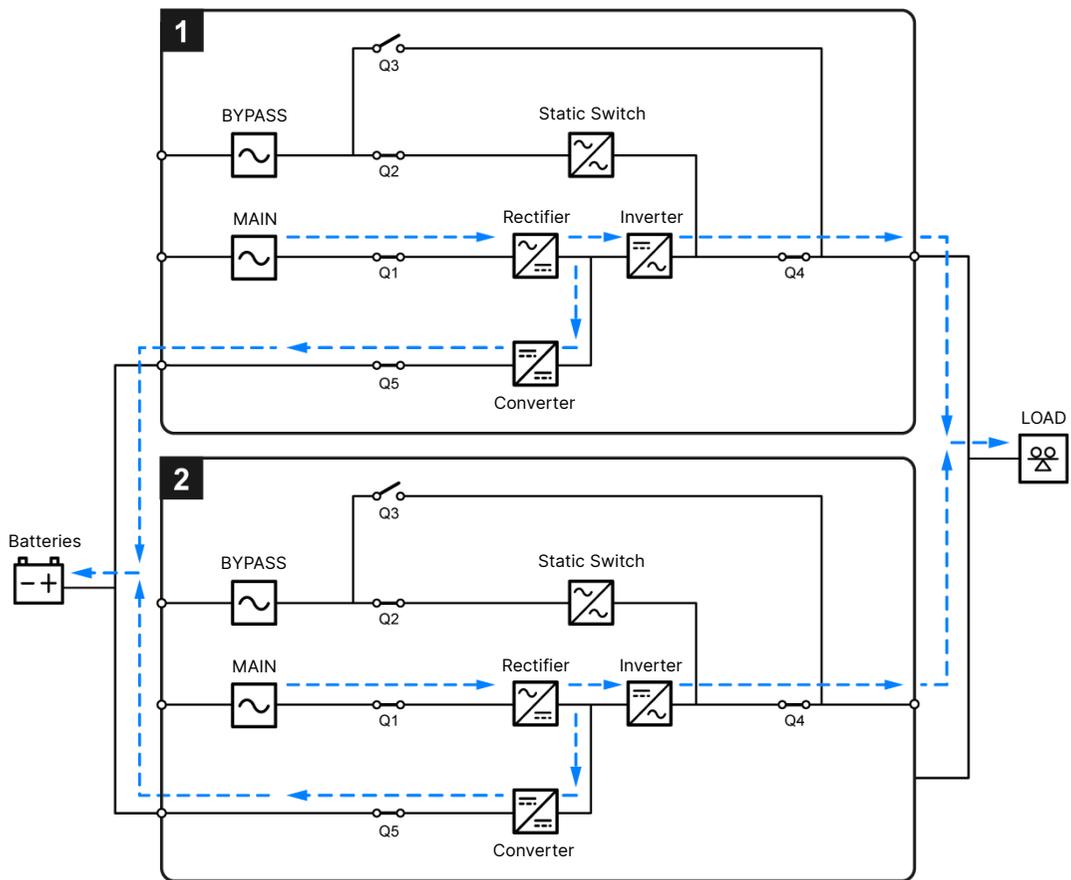


Figure 5-28: Common Battery Diagram

- **External Battery Cabinet Alarm**

When any external battery cabinet connected to the UPS has the following problems, the UPS system will sound an alarm. Please see the table below.

No.	External Battery Cabinet Status	Alarm
1	Battery Abnormal - Reversed	It sounds 0.5 seconds every second.
2	Battery Ground Fault	It sounds 0.5 seconds every second.
3	Battery Over Temperature	It sounds 0.5 seconds every second.
4	Battery Under Temperature	It sounds 0.5 seconds every second.
5	Battery Breaker Off	It sounds 0.5 seconds every 3 seconds.
6	Battery Disconnected (Missing)	It sounds 0.5 seconds every second.

No.	External Battery Cabinet Status	Alarm
7	Battery Over Charged	Long beep.
8	Battery Test Fail	It sounds 0.5 seconds every second.
9	Battery End of Discharge Imminent	It sounds 0.5 seconds every second.
10	Battery End of Discharge	Long beep.
11	Battery Life Time Expired	It sounds 0.5 seconds every 3 seconds.

5.6 Installation of Rodent Shields

To prevent possible damage from rodents, please install the rodent shields (provided) at the bottom of the UPS.

Table 5-5: 40/ 50kVA UPS_ Quantity of the Rodent Shield and M5 Screw

Rodent Shield Type	Front	Lateral	Rear
Rodent Shield Quantity	1 PC	2 PCS	1 PC
M5 Screw Quantity	2 PCS	8 PCS	2 PCS

Table 5-6: 100/ 120kVA UPS_ Quantity of the Rodent Shield and M5 Screw

Rodent Shield Type	Front	Lateral	Rear
Rodent Shield Quantity	1 PC	2 PCS	1 PC
M5 Screw Quantity	2 PCS	8 PCS	2 PCS



NOTE:

The rodent shield installation methods for 40/ 50 kVA UPS and 100/ 120 kVA UPS are the same. Below, the illustration of 40/ 50 kVA UPS will be used as an example.

Step 1

Install the front rodent shield at the front bottom of the UPS.

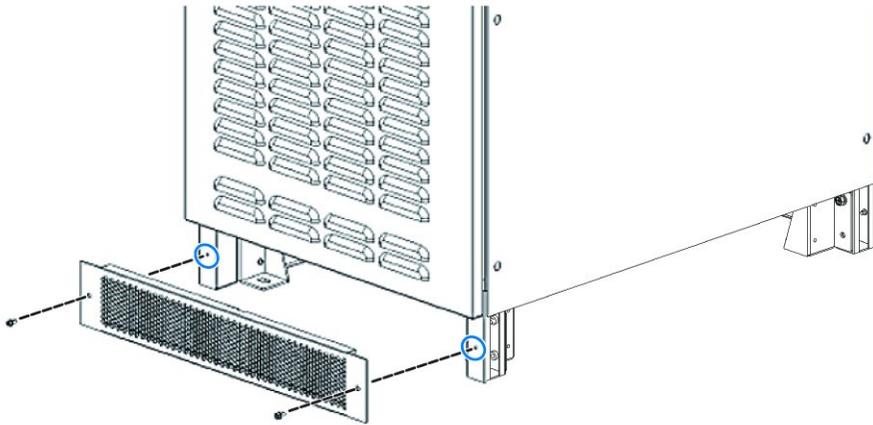
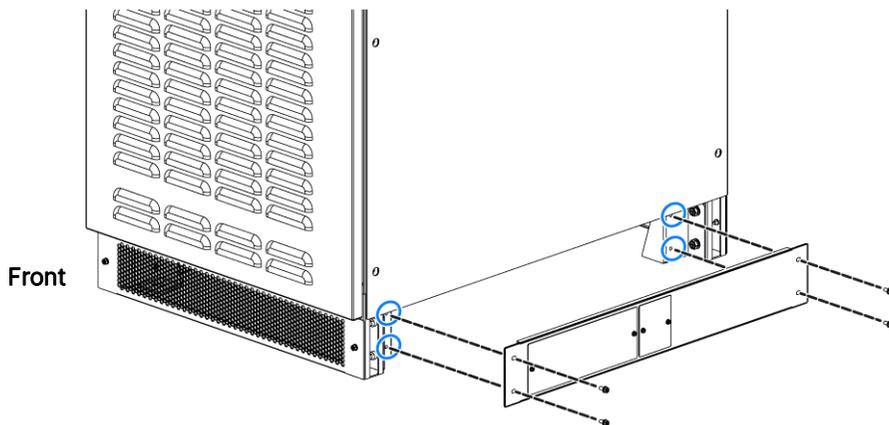


Figure 5-29: 40/ 50kVA UPS _ Install the Front Rodent Shield at the Front Bottom

Step 2

Install the lateral rodent shields at the bottom of two sides.



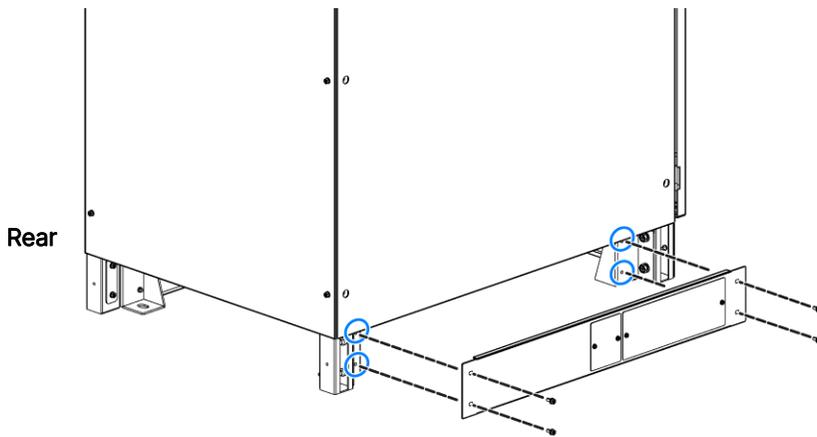


Figure 5-30: 40/ 50kVA UPS _ Install the Lateral Rodent Shields at the Bottom of Two Sides

Step 3

Install the rear rodent shield at the rear bottom of the UPS.

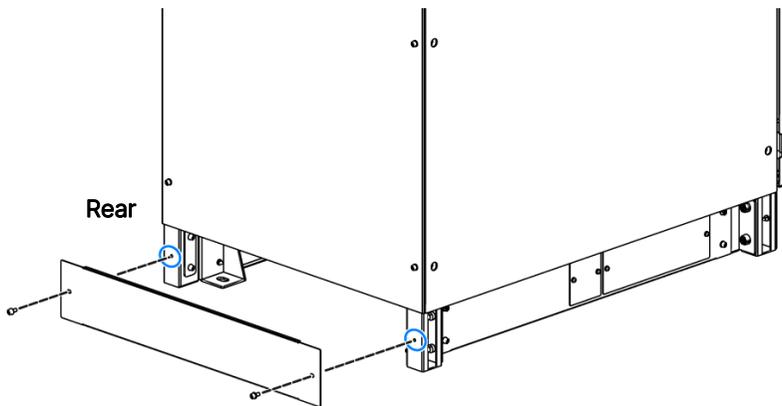


Figure 5-31: 40/ 50kVA UPS _ Install the Rear Rodent Shield at the Rear Bottom


Chapter 6 : UPS Operation

6.1 Pre Start-up & Pre Turn-off Warnings



NOTE:

1. All LCD diagrams in the user manual are for reference only. The display is subject to the actual status of the UPS.
2. For information about the LCD touch panel and tri-color LED indicator, please refer to **2.7 Tri-color LED Indicator & Buzzer** and **7. LCD Display & Settings**.
3. If the **ON/ OFF Button** (⏻) does not appear on the screen, please log in as **Administrator** first, and then go to  → **General Setting** → **User** → **On/ Off Button Access** to change the setting.

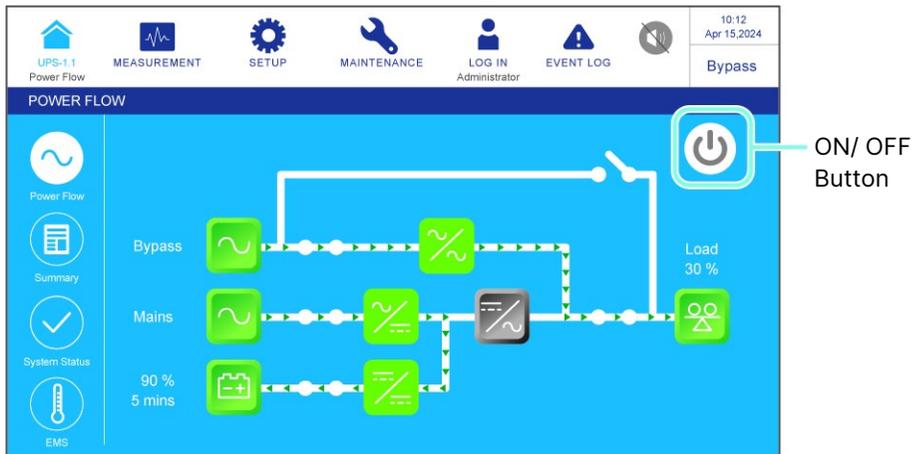

4. The external battery cabinet's breaker (Q5) shown on the LCD is always **ON** by default. To enable the detection of the Q5 status via the LCD, please contact Delta customer service for additional configurations.

• Pre Start-up Warnings

1. Before UPS operation, ensure that installation and wiring have been completely done according to **5. Installation and Wiring**, and relevant precautions and instructions have been followed. Make sure that the AC power's voltage, frequency, phase sequence and battery type meet the UPS's requirements.
2. Make sure that all switches and breakers, including every external battery cabinet's breaker (Q5), are in the **OFF** position.
3. Make sure that the UPS's voltage difference between the Neutral (N) and PE (⊕) is below 3V.

- **Pre Turn-off Warnings**

Before you perform the turn-off procedures, please make sure the critical loads connected to the UPS have already been safely shut down.

6.2 Start-up Procedures

6.2.1 On-Line Mode Start-up Procedures



WARNING:

Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Ensure that the Manual Bypass Breaker (Q3) is in the **OFF** position.

Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

Step 3

Switch **ON** the Input Breaker (Q1) and Bypass Breaker (Q2).

Step 4


Tap the **ON/ OFF Button** () on the LCD screen.

Step 5

Switch **ON** the Output Breaker (Q4).

Step 6

After the inverter turns on, the UPS will run in On-Line mode, the LCD screen will show as below and the tri-color LED indicator will illuminate green.

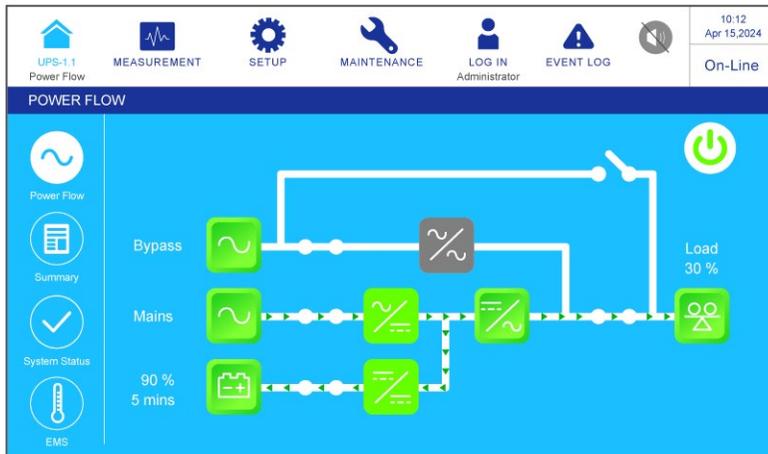

6.2.2 Battery Mode Start-up Procedures



WARNING:

Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Ensure that the Manual Bypass Breaker (Q3) is in the **OFF** position.

Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

Step 3

Press the **BATT. START** button on the **Communication Interfaces (I)** for one second.

Step 4


Tap the **ON/ OFF Button** (⏻) on the LCD screen.

Step 5

Switch **ON** the Output Breaker (Q4).

Step 6

After the inverter turns on, the UPS will run in Battery mode, the LCD screen will show as below and the tri-color LED indicator will illuminate yellow.

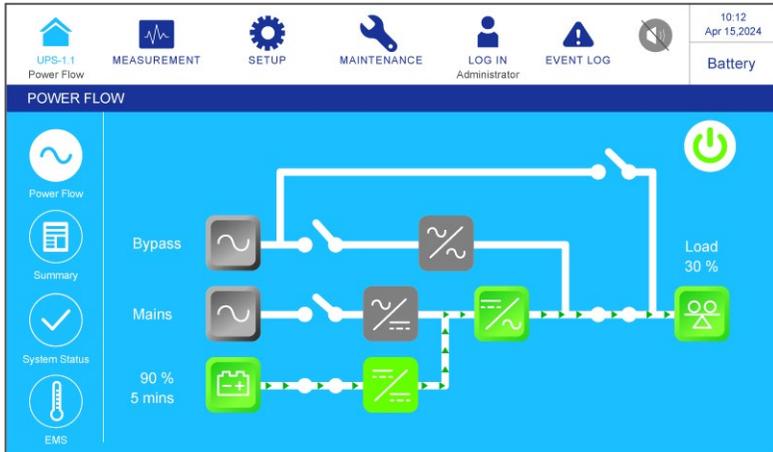

6.2.3 Bypass Mode Start-up Procedures



WARNING:

Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1


Ensure that the Manual Bypass Breaker (Q3) is in the **OFF** position.

Step 2

Switch **ON** the Bypass Breaker (Q2) and Output Breaker (Q4).

Step 3

Now, the UPS runs in Bypass mode, the LCD screen shows as below and the tri-color LED indicator illuminates yellow.

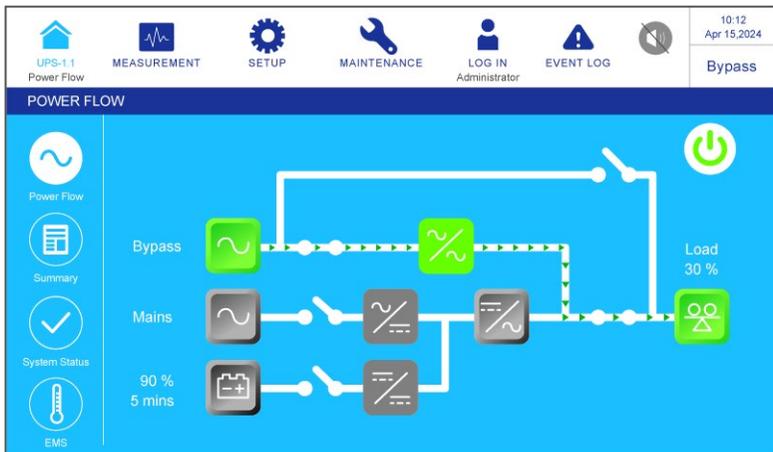

6.2.4 Manual Bypass Mode Start-up Procedures



WARNING:

1. Before turning on/ off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.
2. In Manual Bypass Mode, make sure that all the switches and breakers (except for the Manual Bypass Breaker (Q3)) are in the **OFF** position before working on the UPS's internal circuits to prevent electric shock. **DO NOT** touch any terminal and bus bar which may carry high-voltage electricity.

- **From On-Line Mode to Manual Bypass Mode**

Step 1

Tap the **ON/ OFF Button** () on the LCD screen to shut down the inverter.

Step 2


Ensure that the UPS runs in Bypass mode. After confirmation, turn **ON** the Manual Bypass Breaker (Q3).

Step 3

Switch **OFF** the Output Breaker (Q4).

Step 4

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, the LCD screen shows as follows.

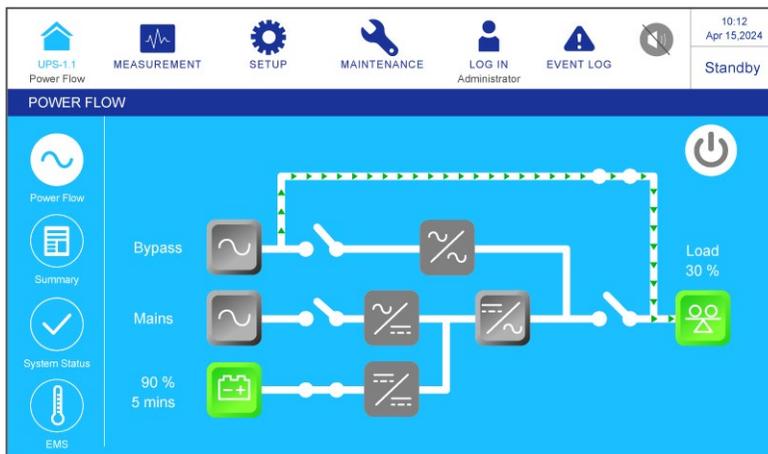

Step 5

Wait for the UPS to complete DC BUS discharging. After discharging, switch **OFF** every external battery cabinet's breaker (Q5). Then, the LCD and tri-color LED indicator will be off.

- **From Manual Bypass Mode to On-Line Mode**

Step 1

Switch **ON** every external battery cabinet's breaker (Q5).

Step 2

Switch **ON** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, ensure that the bypass SCR is active.

Step 3

Switch **ON** the Output Breaker (Q4).

Step 4


After the UPS runs in Bypass mode, switch **OFF** the Manual Bypass Breaker (Q3).

Step 5

Tap the **ON/ OFF Button** (🔌) on the LCD screen.

Step 6

After the inverter turns on, the UPS will run in On-Line mode, the LCD screen will show as below and the tri-color LED indicator will illuminate green.

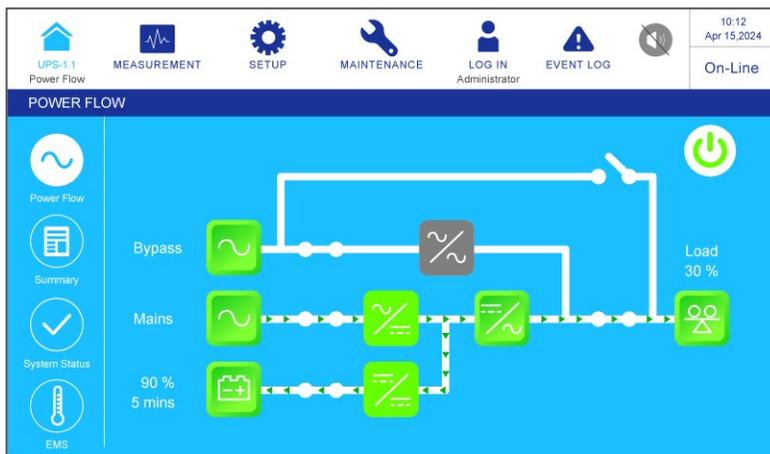

6.2.5 ECO Mode Start-up Procedures



WARNING:

Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Ensure that the Manual Bypass Breaker (Q3) is in the **OFF** position.

Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

Step 3

Switch **ON** the Bypass Breaker (Q2), wait for the LCD initial screen and switch **ON** the Input Breaker (Q1).


If the bypass input is within the normal range, the UPS will run in Bypass mode.

Step 4

Switch **ON** the Output Breaker (Q4).


Step 5

Log in as **Administrator**. For the **Administrator** password, please contact service personnel.

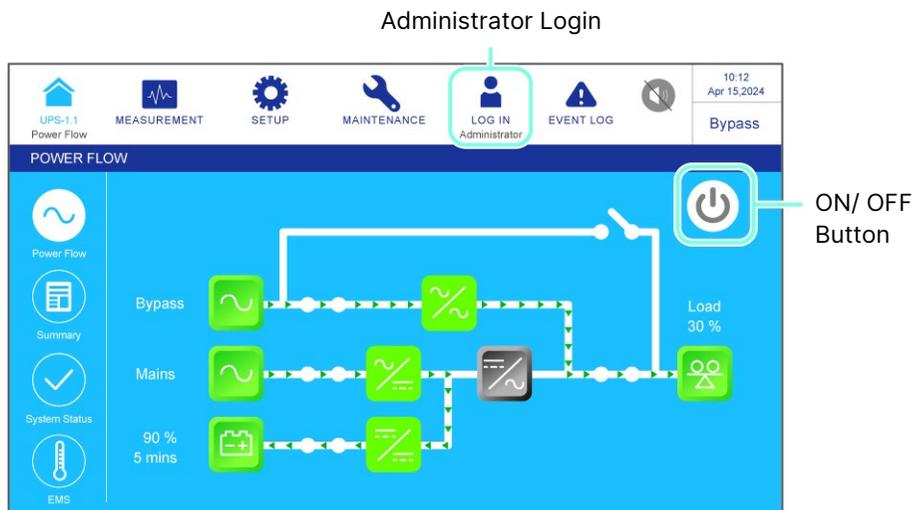

Step 6


Go to **SETUP** → **Mode Setting** → Select **ECO**.

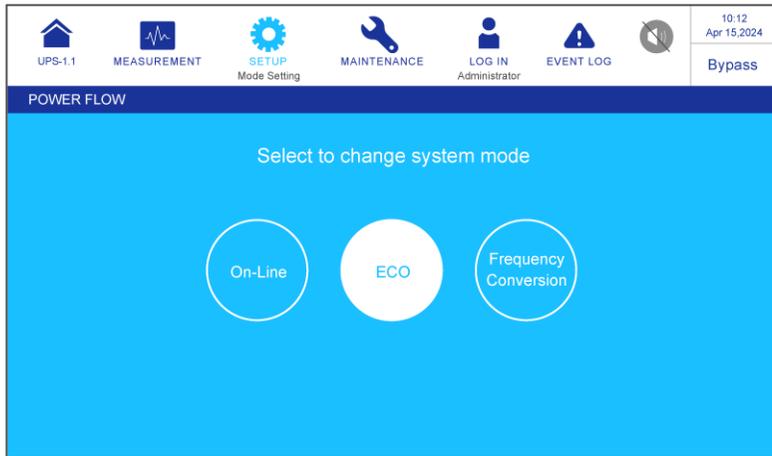**Step 7**

Tap the icon () to go back to the **Main Screen** and tap the **ON/ OFF Button** ().

Step 8

After the inverter turns on and the system confirms that the bypass voltage is normal, the UPS will automatically transfer to ECO mode to let the bypass supply power, the LCD screen will show as below and the tri-color LED indicator will illuminate green.

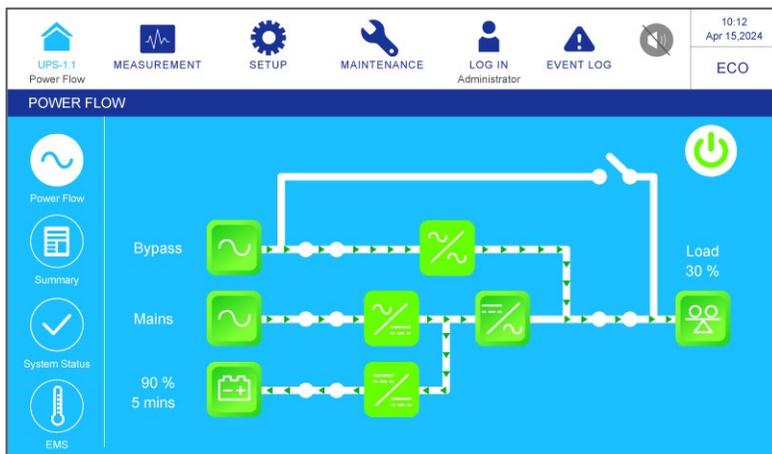

6.2.6 Frequency Conversion Start-up Procedures



WARNING:

1. Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.
2. Frequency Conversion mode is only applicable to single UPS but not to parallel UPSs.
3. When the UPS runs in Frequency Conversion mode, once the inverter becomes off, there is no bypass power supplying to the loads.

Step 1

Ensure that the Manual Bypass Breaker (Q3) is in the **OFF** position.

Step 2

Turn **OFF** the connected loads to prevent wrong frequency from damaging the loads.

Step 3

Switch **ON** every external battery cabinet's breaker (Q5).

Step 4


Switch **ON** the Bypass Breaker (Q2), wait for the LCD initial screen and switch **ON** the Input Breaker (Q1).

If the bypass input is within the normal range, the UPS will run in Bypass mode.

Step 5

Log in as **Administrator**. For the **Administrator** password, please contact service personnel.

Administrator Login

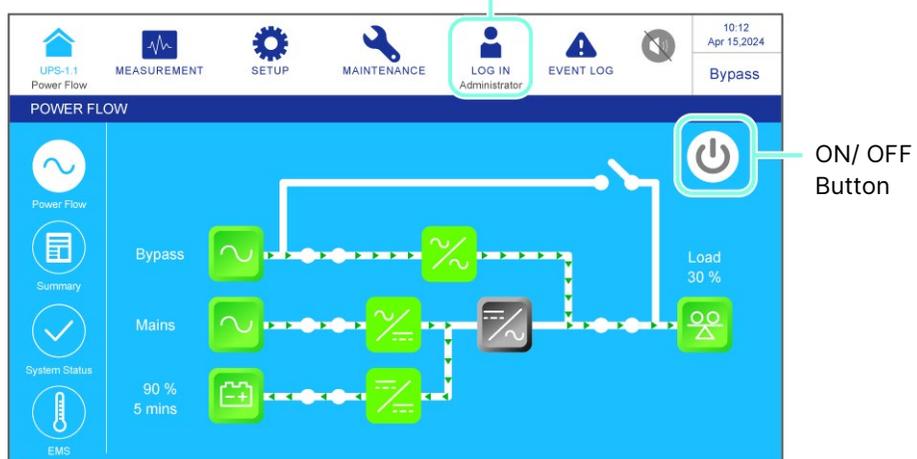


Step 6

Go to **SETUP** → **Mode Setting** → Select **Frequency Conversion**.

**WARNING:**

Once you select '**Frequency Conversion**', the UPS will run in Standby mode and the output will be terminated.

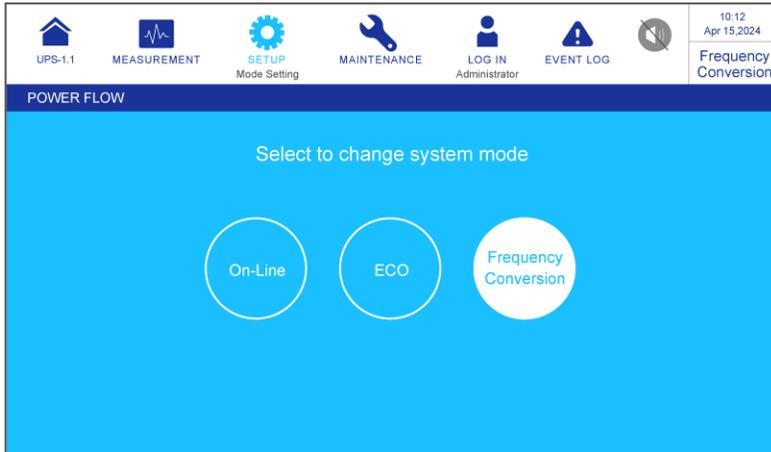**Step 7**

Go to **SETUP** → **Input & Output Setting** → **Output** → Set up **Frequency**

Step 8


Switch **ON** the Output Breaker (Q4).

Step 9

Tap the icon () to go back to the **Main Screen** and tap the **ON/ OFF Button** (.

Step 10

After the inverter turns on, the UPS will run in Frequency Conversion mode, the output frequency will be the same as the setup value, the LCD screen will show as below and the tri-color LED indicator will illuminate green.

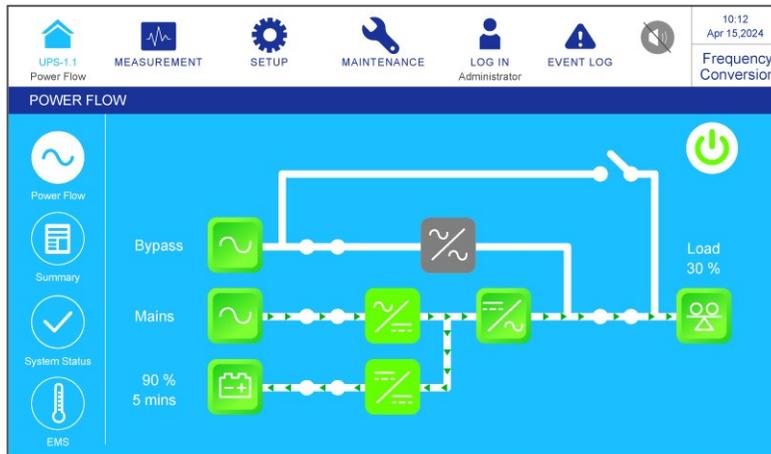

6.3 Turn-off Procedures

6.3.1 On-Line Mode Turn-off Procedures



WARNING:

Before turning off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Tap the **ON/ OFF Button** (🔌) to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

Step 2

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, the UPS will transfer to Standby mode.

Step 3

Wait for the UPS to complete the DC BUS discharging and switch **OFF** each external battery cabinet's breaker (Q5). Now, the LCD screen and tri-color LED indicator will be off.

Step 4

Switch **OFF** the Output Breaker (Q4).

6.3.2 Battery Mode Turn-off Procedures



WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Please make sure that the critical loads connected to the UPS have already been safely shut down. After confirmation, tap the **ON/ OFF Button** () to shut down the UPS's inverter. Note that once you turn off the inverter, all the output power will be completely cut off and the UPS will transfer to Standby mode.

Step 2

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2).

Step 3

Wait for the UPS to complete the DC BUS discharging and switch **OFF** each external battery cabinet's breaker (Q5). Now, the LCD and tri-color LED indicator will be off.

Step 4

Switch **OFF** the Output Breaker (Q4).

6.3.3 Bypass Mode Turn-off Procedures



WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, the UPS will transfer to Standby mode.

Step 2

Wait for the UPS to complete the DC BUS discharging and switch **OFF** each external battery cabinet's breaker (Q5). Now, the LCD and tri-color LED indicator will be off.

Step 3

Switch **OFF** the Output Breaker (Q4).

6.3.4 Manual Bypass Mode Turn-off Procedures



WARNING:

1. Ensure that the LCD, all LED indicators and fans are **OFF**.
2. Check that all the switches, breakers and power are **OFF**.

In Manual Bypass mode, the LCD and tri-color LED indicator are both **OFF**. To completely shut down the UPS, switch **OFF** the Manual Bypass Breaker (Q3).

6.3.5 ECO Mode Turn-off Procedures



WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Tap the **ON/ OFF Button** () to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

Step 2

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, the UPS will transfer to Standby mode.

Step 3

Wait for the UPS to complete the DC BUS discharging and switch **OFF** each external battery cabinet's breaker (Q5). Now, the LCD and tri-color LED indicator will be off.

Step 4

Switch **OFF** the Output Breaker (Q4).

6.3.6 Frequency Conversion Mode Turn-off Procedures



WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

Step 1

Please make sure that the critical loads connected to the UPS have already been safely shut down. After confirmation, tap the **ON/ OFF Button** () to shut down the UPS's inverter. Note that once you turn off the inverter, all the output power will be completely cut off and the UPS will transfer to Standby mode. Now, the power module keep charging the batteries.

Step 2

Switch **OFF** the Input Breaker (Q1) and Bypass Breaker (Q2). After that, the UPS will transfer to Standby mode.

Step 3

Wait for the UPS to complete the DC BUS discharging and switch **OFF** each external battery cabinet's breaker (Q5). Now, the LCD and tri-color LED indicator will be off.

Step 4

Switch **OFF** the Output Breaker (Q4).

6.4 Start-up & Turn off Procedures for Parallel Units

**WARNING:**

1. Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.
2. Ensure that every operation procedure is synchronized to all parallel UPSs. If you just want to operate a specific UPS but not all the parallel ones, please contact service personnel.

- **Start-up Procedures (Parallel Units)**

Step 1

Ensure that each parallel cable (provided) is connected well.

Step 2

Perform the first few steps following your chosen mode's section in *6.2 Start-up Procedures* until there is power supplying to the UPS (after switching **ON** Q1/ Q2 or pressing the **BATT. START** button)*1.



NOTE:

*1 For common battery configurations, you must switch **ON** each parallel UPS's Input Breaker (Q1), Bypass Breaker (Q2) or Input Breaker (Q1) and Bypass Breaker (Q2) or execute battery start-up to start up the UPS first. After that, you can follow **6.2 Start-up Procedures** according to your chosen mode to perform parallel units' start-up procedures.

At this moment, please perform the following parallel settings on the LCD.


- a. Assign a different **Parallel ID No.** to each parallel UPS. For all the parallel UPSs, please set the same **Parallel Group ID No.** and the same parameters for the input, output and battery settings.
- b. Tap the icon () to check if the **Parallel Group ID No.** and **Parallel ID No.** are set correctly. The UPS with the smallest **Parallel ID No.** is the master UPS.

Parallel Group

ID No.

UPS-1.1

Parallel ID No.

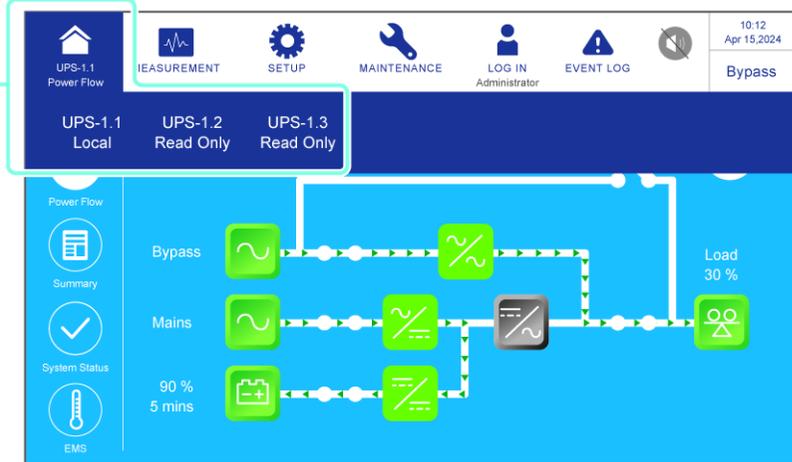

Step 3

Complete the rest of the steps in **6.2 Start-up Procedures** according to your chosen mode.

Step 4

Ensure that the output voltage difference between each parallel UPS is below 3V. Only authorized Delta engineers or service personnel can check the output voltage difference, or it must be done under the supervision of authorized Delta engineers or service personnel.

Step 5

Now, the UPSs are ready to operate in parallel.

- **Turn-off Procedures (Parallel Units)**



WARNING:


To turn off one of the parallel UPSs, please check whether the remaining parallel units' total capacity exceeds the total critical loads. Otherwise, all parallel units will shut down due to overload. Before doing this, please contact service personnel.


Perform the steps following your chosen mode's section in **6.3 Turn-off Procedures**. Make sure to synchronize each step to all the parallel UPSs.


Chapter 7 : LCD Display & Settings

7.1 LCD Display Hierarchy

Please refer to *Figure 7-1* for an overview of all the LCD items. For some of the items marked with an asterisk, they will show up only under certain conditions. Please refer to the note below for details.

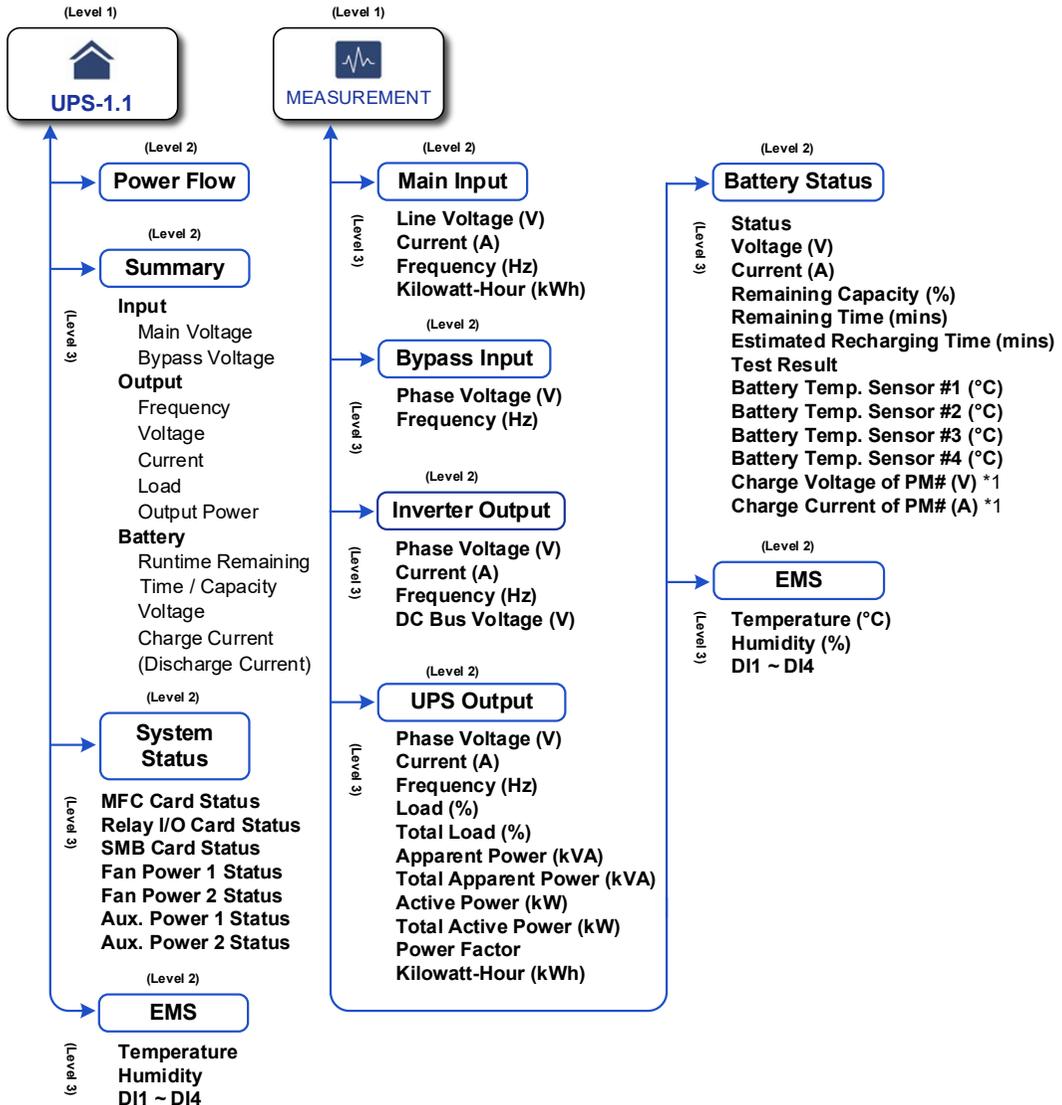

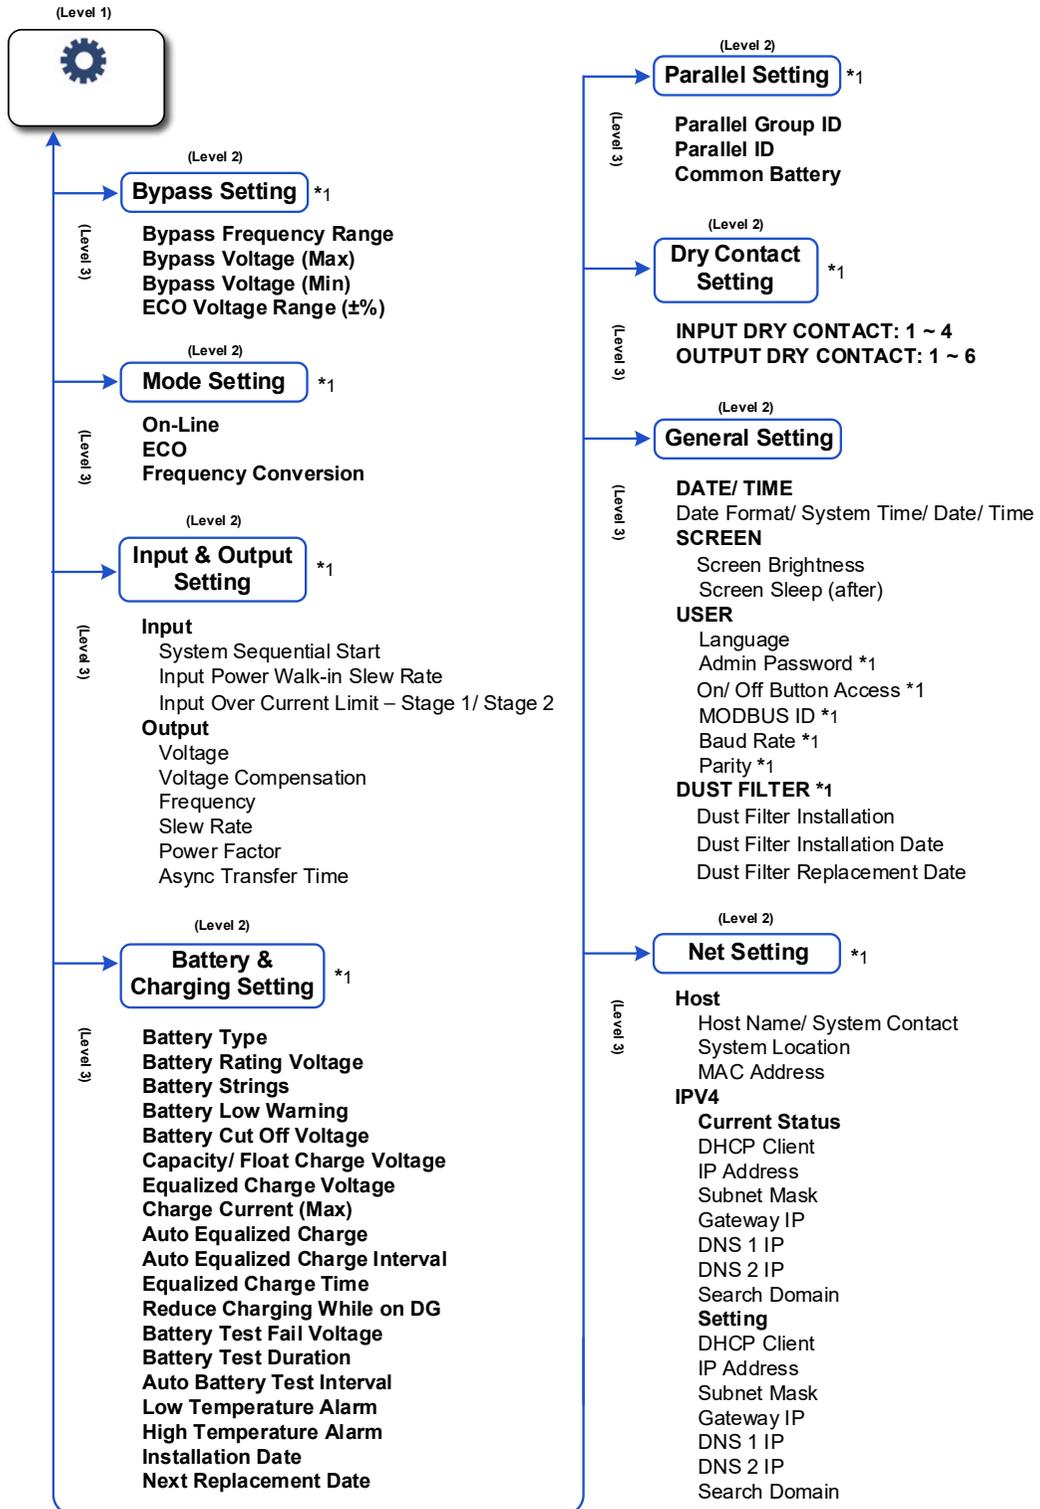

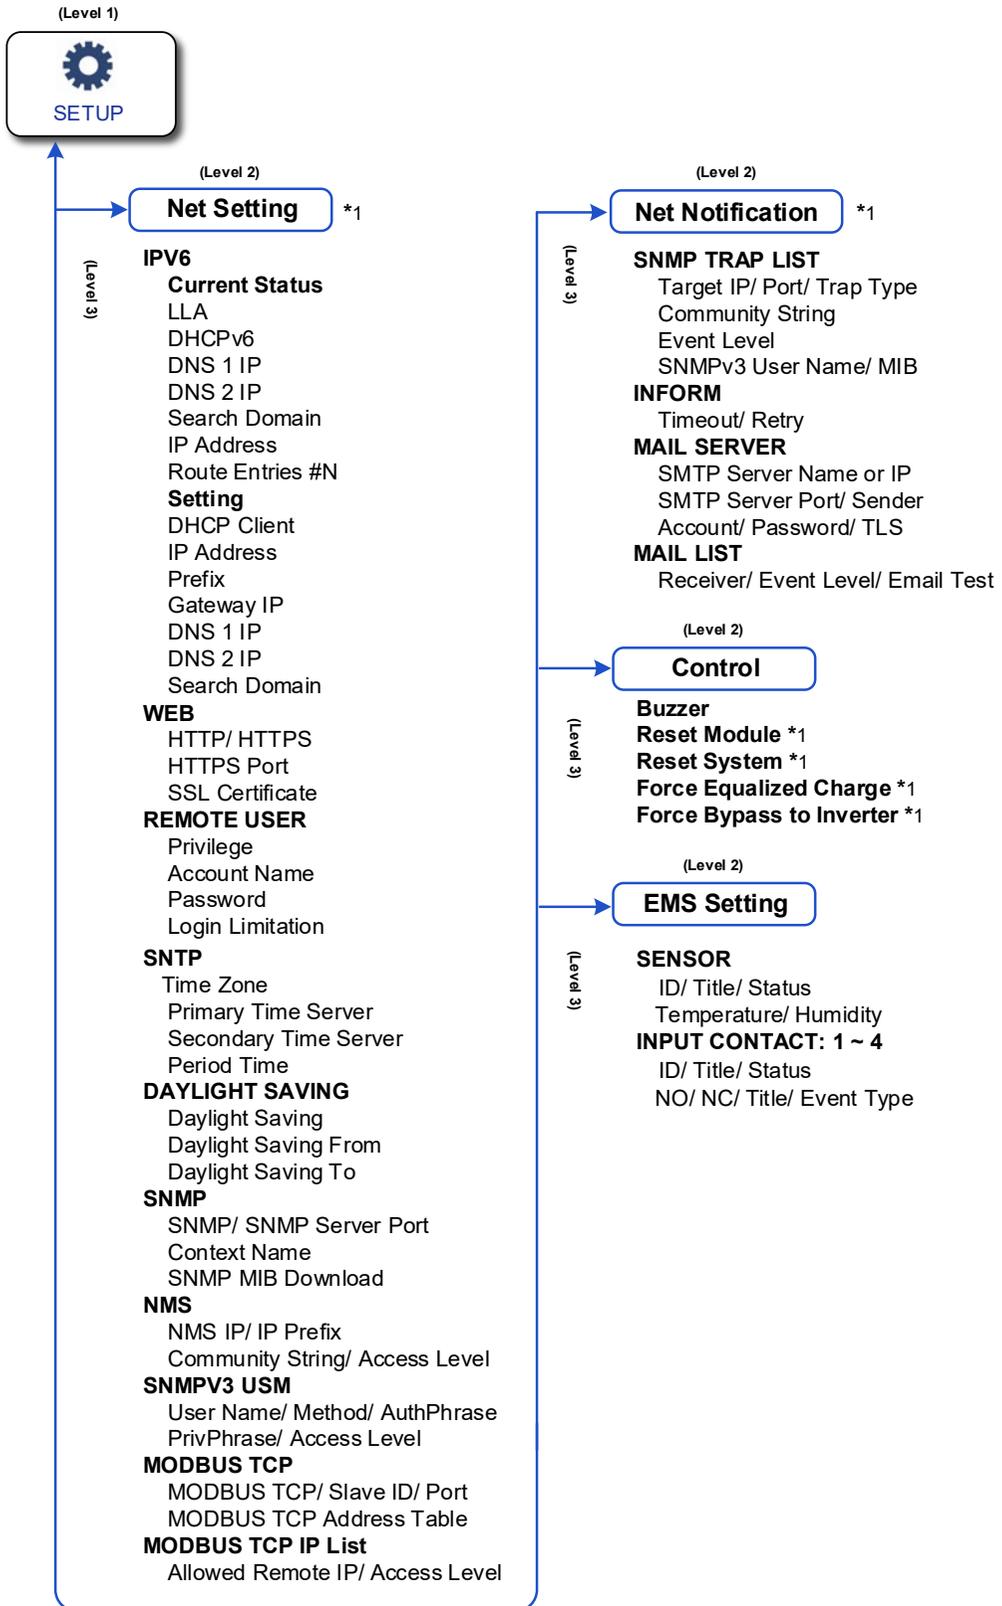

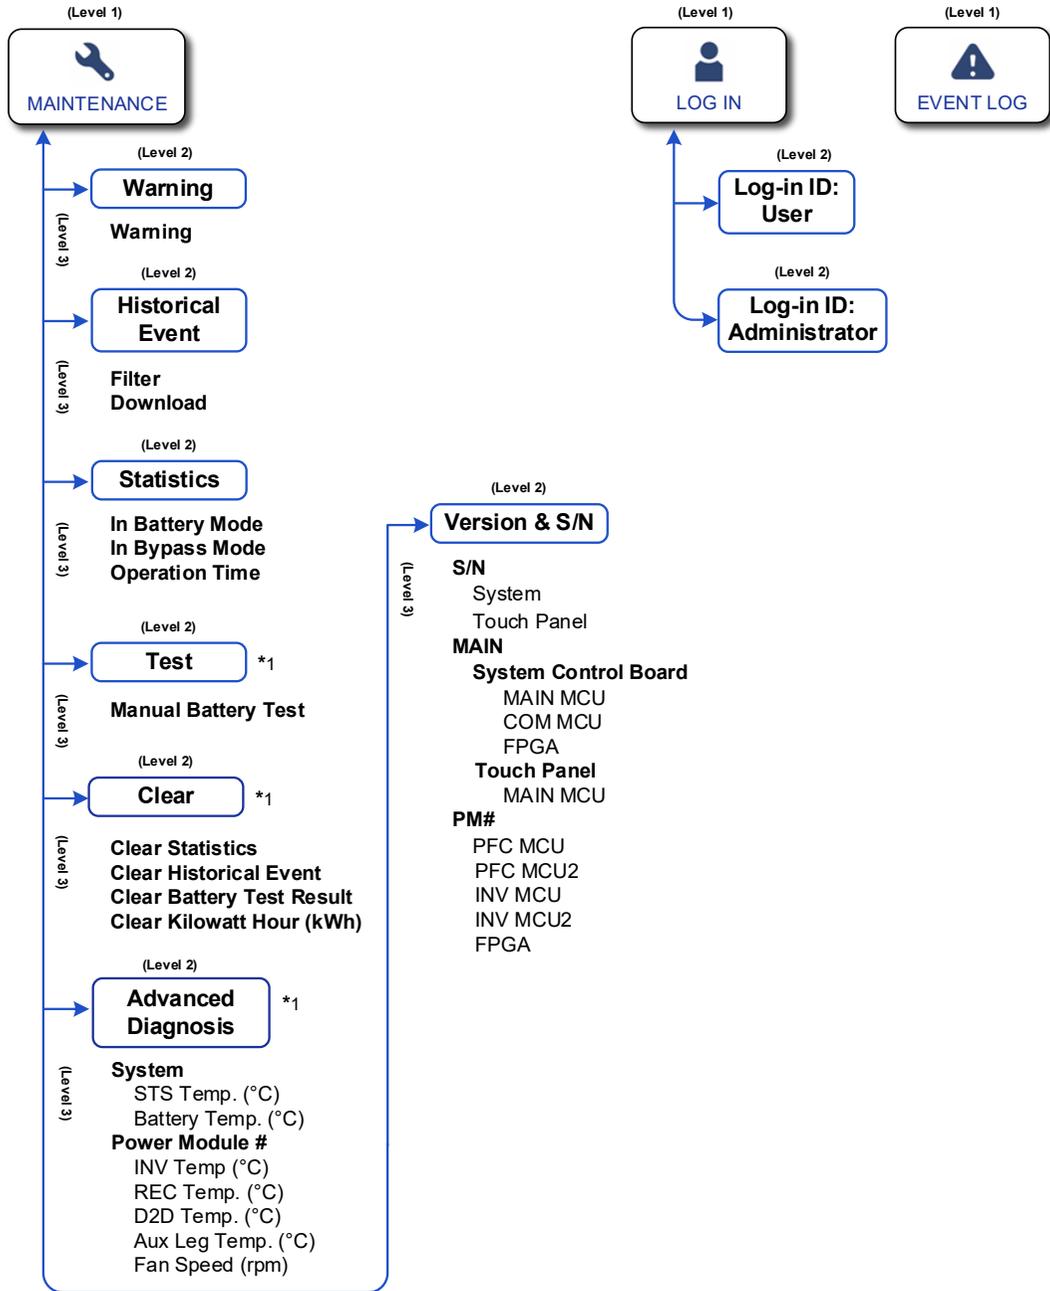


Figure 7-1: LCD Display Hierarchy



NOTE:

1. For **EMS/ EMS Setting**, the functions will be activated only after proper installation and settings of the optional accessories have been completed. For details, refer to **8. Optional Accessories**.
2. *1 To display the item(s), you have to log in as **Administrator**. Please refer to **7.4 Password Entry**.
3. The LCD screen diagrams in the user manual are for reference only. The actual display depends on the operation situation.

7.2 How to Turn on the LCD

Step 1


Perform one of the options (a ~ c) below; after that, the LCD will be on.

- a. Turn on the Input Breaker (Q1); or
- b. Turn on the Bypass Breaker (Q2); or
- c. Turn on any external battery cabinet's breaker (Q5) and press the battery start button (see **Figure 4-2**) for 1 second.


Step 2

A short while later, the **Main Screen** will appear with **User Login** status.

If the **ON/ OFF Button** (🔌) does not appear on the screen, please log in as **Administrator** first, and then go to  → **General Setting** → **User** → **On/ Off Button Access** to change the setting.

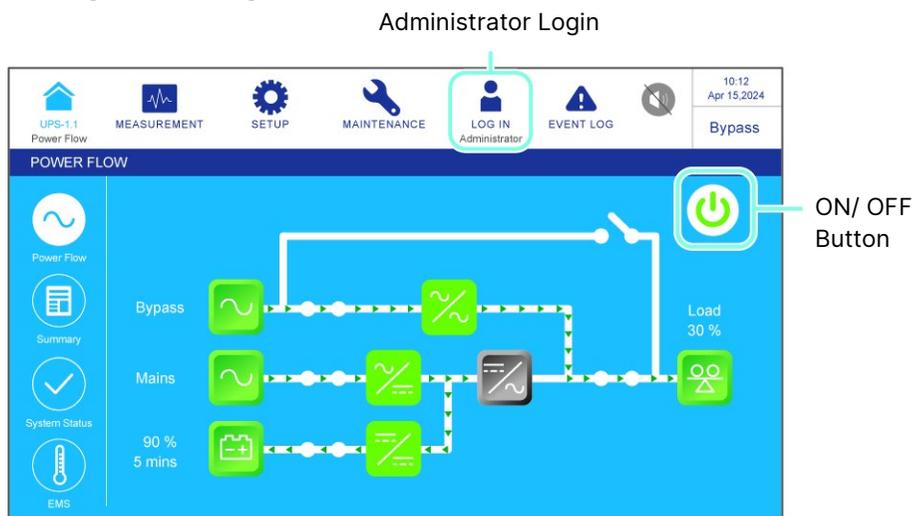

7.3 Introduction of Touch Panel and Function Keys

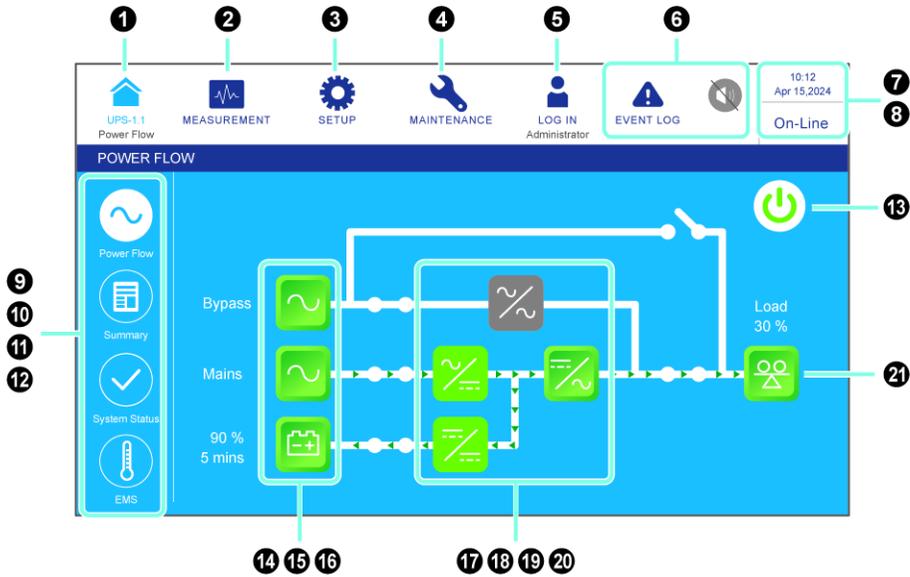

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
1		✓	✓		<p>Tap the button to go back to the Main Screen. The figure (UPS-1.1) below the icon (🏠) indicates the parallel group ID no. (former) and the parallel ID no. (latter).</p> <p>NOTE:</p> <p>On the master UPS's screen, you can check its status and readings as well as the slave UPSs' partial statuses and readings.</p> <p>On a salve UPS's screen, you can only check its own status and readings.</p>

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
2		✓			Tap the button to open the measurement menu. For the menu items, refer to Figure 7-1 .
3		✓			Tap the button to open the setup menu. For the menu items, refer to Figure 7-1 . For details, refer to 7.6 UPS Settings .
4		✓			Tap the button to open the maintenance menu. For the menu items, refer to Figure 7-1 . For details, refer to 7.7 System Maintenance .
5		✓		✓	Indicates User login status. Tap the icon to change the login permission. Please refer to 7.4 Password Entry .
		✓		✓	Indicates Administrator login status. Tap the icon to change the login permission. Please refer to 7.4 Password Entry .
6		✓		✓	<ol style="list-style-type: none"> Historical event screen shortcut button (). When the icon is blue (), it means there is no warning event.
		✓	✓	✓	<ol style="list-style-type: none"> Warning screen shortcut button () & buzzer icon (). When the icon is red (), it indicates that there is a warning event. At this time, the buzzer will sound and the buzzer icon will appear in red (). The numerical value at the upper right of the icon () indicates the total number of the warning events.

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
6	 WARNING  WARNING (continued)	✓	✓	✓	To mute the buzzer, tap the icon () , and the icon will become gray () . If there is any new warning event happening afterwards, the buzzer will sound and the icon () will appear and light up again.
7	10:12 Apr 15, 2024		✓		Indicates the time and date.
8	On-Line Bypass Battery ECO Frequency Conversion		✓		Indicates the UPS's current operation mode.
9		✓			Tap the button to check the power flow diagram and the operation status of the UPS.
10		✓			Tap the button to check the Input , Output , and Battery summary status of the UPS.
11		✓			Tap the button to check the system status, including auxiliary power card status, system control card status and parallel communication card status.
12		✓			Tap the button to check the EMS status. To enable the function, you have to connect an optional EMS 1000 (EnviroProbe) to the UPS and complete relevant settings. For details, refer to 8. Optional Accessories .
13		✓		✓	ON/ OFF Button. The gray icon () indicates that the inverter is OFF. The green icon () indicates that the power-on process is completed and the inverter is ON.

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
14		✓		✓	<ol style="list-style-type: none"> 1. Indicates bypass input status (Green: Normal/ Red: Abnormal or OFF). 2. Bypass input screen shortcut button.
15		✓		✓	<ol style="list-style-type: none"> 1. Indicates main input status (Green: Normal/ Red: Abnormal or OFF). 2. Main input screen shortcut button.
16		✓	✓	✓	<ol style="list-style-type: none"> 1. Indicates battery status (Green: Normal/ Flashing Green & Gray: Battery Mode/ Flashing Red & Gray: Battery Not Connected). 2. Shows battery remaining capacity (%) and battery remaining time (minutes). 3. Battery status screen shortcut button.
17				✓	Indicates bypass static switch status (Green: ON/ Gray: Abnormal or OFF).
18				✓	Indicates rectifier status (Green: Normal/ Gray: Waiting or OFF).
19		✓		✓	<ol style="list-style-type: none"> 1. Indicates inverter status (Green: Normal/ Gray: Waiting or OFF). 2. Inverter output screen shortcut button.
20				✓	DC converter status (Green: Normal; Red: Abnormal; Gray: Waiting or OFF).
21		✓	✓	✓	<ol style="list-style-type: none"> 1. Indicates output status (Green: Normal/ Gray: No Output). 2. Shows load capacity (%). 3. UPS output screen shortcut button.

Other icons on the touch panel are shown in the table below.

No.	Icon	Function
1		Goes to the top page.
2		Goes to the last page.
3		Moves up.
		
4		Moves down.
		
5		Goes to the previous page.
		
6		Goes to the next page.
		
7		Increase
8		Decrease
9		1. Indicates the page no. 2. Choose to go to a specific page no.
10		Delete
		
11		Capital
12		Space



NOTE:

1. After the backlight is turned off, you can tap the LCD to return to the **Main Screen**.
2. The sleep time for the backlight can be adjusted. Please go to  → **General Setting** → **Screen** → **Screen Sleep (after)**.
3. If you are logged in as **Administrator**, you will be logged out when the backlight is off. Tap to wake up the LCD screen, and it will go back to the **Main Screen** in the **User** login status. Even if you set up the backlight in '**Never Sleep**' mode, you will still be logged out after the screen is idle for 5 minutes.
4. The default language is English, which differs according to countries. To change the display language, please go to  → **General Setting** → **User** → **Language**.

7.4 Password Entry


1. **Administrator** login requires a password while **User** login does not.
2. Tap  → enter the **Administrator** password (contact service personnel for the default password) → the icon  appears, indicating the **Administrator** login is successful.
3. To change the **Administrator** password, please go to  → **General Setting** → **User** → **Admin Password** (4 digits).

7.5 Check Kilowatt-Hour

Path:  → Main Input → kWh icon ()

Path:  → UPS Output → kWh icon ()

Tap the kWh icon (), and you can check the kWh statistics of the Main Input or UPS output. Please refer to the following screens.

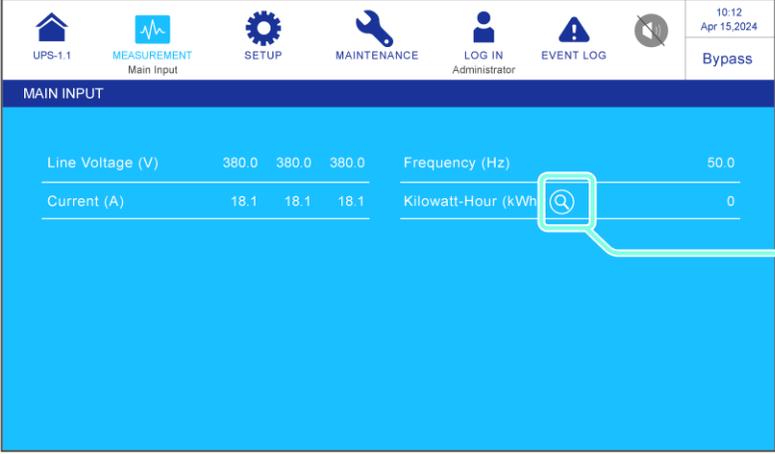

MAIN INPUT						
Line Voltage (V)	380.0	380.0	380.0	Frequency (Hz)	50.0	
Current (A)	18.1	18.1	18.1	Kilowatt-Hour (kWh)	0	

kWh Icon



UPS OUTPUT							
Phase Voltage (V)	380.0	380.0	380.0	Apparent Power (kVA)	31.6	31.6	31.6
Current (A)	18.0	18.0	18.0	Total Apparent Power (kVA)	129.5		
Frequency (Hz)	50			Active Power (kW)	31.6	31.6	31.6
Load (%)	30	30	30	TotalActive Power (kW)	128.7		
Total Load (%)	30			Power Factor	0.95	0.95	0.95
				Kilowatt-Hour (kWh)	721993		

kWh Icon



No.	Item	Description
1	Sheet Tabs (Day/ Week/ Month/ Year/ Since Reset)	Tap the sheet tabs to view the kWh statistics and column charts of different time scales.
2	Column Chart	<ol style="list-style-type: none"> Shows the UPS's input or output kWh statistics, with time on X-axis and kWh on Y-axis. Tap the column on the chart, and the corresponding piece of data will appear below the chart.
3	Search Tick Setup Icon	Tap (🔍), and you can set the date and time for the 'Search Tick' to view the corresponding column chart.
4	Save	Click the icon to download data to your USB drive.
5	Search Tick	Shows the date and time that has been set via (🔍).
6	Present/ Peak/ Low/ Sum (kWh/d)	Regardless of different kWh statistics sheets, these four items indicate today's statistics: the present value/ the highest value (so far)/ the lowest value (so far)/ the sum (so far).
7	Last Reset Date	The last date when 'Clear Kilowatt Hour' was executed.

7.6 UPS Settings

This chapter lists all the UPS setting items for your reference (not including the setting items for the optional accessories). Some items will show up only under certain conditions. Please refer to *7.1 LCD Display Hierarchy* for details.

7.6.1 Bypass Setting

Path:  → Bypass Setting

Item	Description
Bypass Frequency Range	Set up the bypass output's frequency range.
Bypass Voltage (Max.)	Set up the bypass output's maximum voltage.
Bypass Voltage (Min.)	Set up the bypass output's minimum voltage.
ECO Voltage Range	Set up the bypass output's voltage range in ECO mode.


7.6.2 Mode Setting

Path:  → Mode Setting

Item	Description
On-Line Mode	Set up the UPS in On-Line mode. In On-Line mode, it is the inverter to supply power to the connected loads.
ECO Mode	Set up the UPS in ECO mode. In ECO mode, it is the bypass to supply power to the connected loads. It is suggested that you set the UPS in ECO mode only when there is stable main AC power. Otherwise, power supply quality will be compromised.
Frequency Conversion Mode	<p>Set up the UPS in Frequency Conversion mode. In Frequency Conversion mode, it is the inverter to supply power to the connected loads with a fixed output frequency. Please note that the output will be terminated once the inverter is turned off.</p> <p> NOTE: Frequency Conversion mode is only applicable to single UPS but not to parallel UPSs.</p>

7.6.3 Input & Output Setting

Path:  → Input & Output Setting

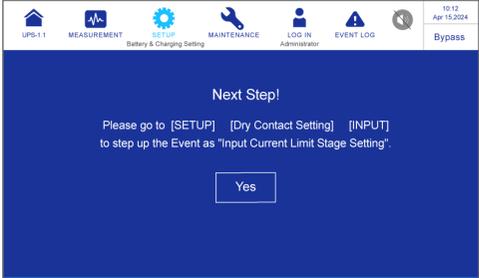Item	Sub Item	Description
Input	System Sequential Start	Set up the time interval for the system to be transferred from Battery mode to On-Line mode. The setup will help the generator to handle the whole loads in a sequential manner to avoid generator shutdown due to sudden inrush current.
	Input Power Walk-in Slew Rate	Set up the power supply of the loads being steadily transferred from the battery power to main AC power with a fixed slew rate.
	Input Over Current Limit- Stage 1/ Stage 2	<p>Set up which stage's current should be applied to the input over current limit.</p> <p>There are two selections, Default and Switch By Dry Contact. If you choose Default, the stage 1's current will be applied. If you choose Switch By Dry Contact, the following window will pop up to ask you to set up an input dry contact's event as 'Input Current Limit Stage Setting'.</p>  <p>After setup, the system will follow the dry contact's status (normally-open or normally-closed) to decide whether stage 1 or stage 2's current should be applied.</p> <p>Please note that the input dry contacts must be connected first (please refer to 4.1.10 Input Dry Contacts) before you set up stage 1 and stage 2's current, and only when you choose Switch By Dry Contact can the stage 2' current be set up. The current value should be set from 1823 Ampere to 2188 Ampere.</p>

Item	Sub Item	Description
Output	Voltage	Set up the output voltage.
	Voltage Compensation	When the UPS is distant from the loads and there is a voltage drop in the output, you can adjust the INV output voltage amplitude for voltage compensation.
	Frequency	Set up the output frequency as 50Hz (default) or 60Hz. The system will automatically select the output frequency in accordance with the bypass power.
	Slew Rate	Set up the maximum permissible speed for the system output frequency to catch up with the bypass frequency variation.
	Power Factor	Set up the inverter's output power factor.
	Async Transfer Time	When (1) the inverter is not synchronized with the bypass and (2) the loads need to be transferred to the bypass source, there will be an interrupted transfer time according to this setup value.

7.6.4 Battery & Charging Setting

Path:  → Battery & Charging Setting

Item	Description
Battery Type	<p>Set up the battery type as VRLA/ LiB (Dry Contact)*1.</p> <p> NOTE: *1 If you use non-Delta lithium-ion batteries, please set up the battery type as 'LiB (Dry Contact)'. Please refer to 4.1.6 Input Dry Contacts and 7.6.6 Dry Contact Setting. For more information about configurations of the lithium-ion batteries, please contact Delta customer service.</p>
Battery Rating Voltage	Set up the battery voltage rating.
Battery Strings	Set up how many battery strings that are used on site.
Battery Low Warning	Set up the battery low warning voltage.

Item	Description
Battery Cut Off Voltage	Set up the battery low voltage. In Battery mode, when the battery low voltage is reached, the battery power will be cut off, and the inverter of the UPS will shut down. The loads will then be transferred to bypass if the bypass is available; otherwise, the UPS will shut down.
Capacity	Set up the battery capacity.
Float Charge Voltage	Set up the float charge voltage.
Equalized Charge Voltage	Set up the equalized charge voltage.  NOTE: The item will only show up if the Battery Type is set as 'VRLA'.
Charge Current (Max)	Set up the maximum charge current.
Auto Equalized Charge	Enable or disable the auto-equalized charge.
Auto Equalized Charge Interval	Set up the auto equalized charge interval.
Equalized Charge Time	Set up the equalized charge time.
Reduce Charging While on DG	Set up the charging current limit. The charging current will be limited on this value when the generator is turned on.  NOTE: This setup item will only appear after you select  → Dry Contact Setting → Input → Event → Generator Status .
Battery Test Fail Voltage	Set up the battery test fail voltage. When the battery voltage is under the test fail voltage, it means battery fail.
Battery Test Duration	Set up how long the battery test should last.
Auto Battery Test Interval	Set up the battery test interval.
Low Temperature Alarm	Enable or disable the low temperature alarm. If enabled, set up the temperature.

Item	Description
High Temperature Alarm	Enable or disable the high temperature alarm. If enabled, set up the temperature.
Installation Date	Record the battery installation date.
Next Replacement Date	Set up the battery replacement date.

7.6.5 Parallel Setting

Path:  → Parallel Setting

Item	Description
Parallel Group ID	The UPSs in parallel connection must be assigned the same parallel group ID no. in order to let the outputs of the parallel UPSs be put in parallel connection and let the loads be evenly distributed among the parallel units. If the parallel UPSs have different parallel group ID no., their output signals might be synchronized but their outputs cannot be connected in parallel.
Parallel ID	The UPSs that need to be paralleled must be assigned the same parallel group ID no. and different parallel ID no. in order to let the parallel function work.
Common Battery	If the parallel UPSs that have the same parallel group ID no. need to share common batteries, please select ' Enable ' for the ' Common Battery ' setup item. Otherwise, the function of battery abnormality detection will fail. For more information about common battery, please refer to 5.5 External Battery Cabinet Connection Warnings .

7.6.6 Dry Contact Setting

Path:  → Dry Contact Setting

Input Dry Contact No.	Event Selection	Type
<p>Input Dry Contact 1 Input Dry Contact 2 Input Dry Contact 3 Input Dry Contact 4</p>	<ol style="list-style-type: none"> 1. None 2. Generator Status 3. Battery Ground Fail 4. External Battery Breaker Detection 5. Charge Off 6. Active Standby 7. Battery Abnormal Shutdown 8. Input Transformer OTW 9. Output Transformer OTW 10. Battery Fuse Open 11. Input Current Limit Stage Setting 12. Major Battery Abnormal Alarm 13. Minor Battery Abnormal Alarm 	<p>Set up NO (normally open) or NC (normally closed) for each input dry contact.</p>

Output Dry Contact No.	Event Selection	Type
<p>Output Dry Contact 1 Output Dry Contact 2 Output Dry Contact 3 Output Dry Contact 4 Output Dry Contact 5 Output Dry Contact 6</p>	<ol style="list-style-type: none"> 1. None 2. Load On Inverter 3. Load On Bypass 4. Load On Battery 5. Battery Low 6. Battery Input Abnormal 7. Battery Test Fail 8. Internal Comm. Fail 9. External Parallel Comm. Fail (only applicable to parallel application) 10. Output Overload 11. EPO Activated 	<p>Set up NO (normally open) or NC (normally closed) for each output dry contact.</p>

Output Dry Contact No.	Event Selection	Type
Output Dry Contact 1 Output Dry Contact 2 Output Dry Contact 3 Output Dry Contact 4 Output Dry Contact 5 Output Dry Contact 6 (continued)	12. Load On Manual Bypass 13. Battery Over Temperature 14. Output Voltage Abnormal 15. Battery Need Replacement 16. Bypass Over Temperature 17. Bypass Static Switch Fault 18. UPS Over Temperature 19. Battery Breaker Shunt Trip Via EPO 20. Backfeed Protection 21. General Alarm 22. Load On ECO	Set up NO (normally open) or NC (normally closed) for each output dry contact.

7.6.7 General Setting

Path:  → General Setting

Item	Sub Item	Description
DATE/ TIME	Date Format	Select the date format.
	System Time	Set up the system time manually or automatically. Manual: Manually set the time and date by users. SNTP: Automatically synchronize with SNTP servers.
	Date	Set up the date.
	Time	Set up the time.
SCREEN	Screen Brightness	Adjust the LCD display brightness (default: 80).
	Screen Sleep (after)	Set up the LCD backlight sleep time (default: 1 minute).

Item	Sub Item	Description
USER	Language	Set up the display language (default: English).
	Admin Password	Set up the administrator password (4 digits).
	On/ Off Button Access	Set up the access for the ON/ OFF Button () as ' Any User ' or ' Administrator Only '.
	MODBUS ID	Set up the MODBUS ID for the MODBUS port located at the rear of the touch panel.
	Baud Rate	Set up the baud rate for the MODBUS port located at the rear of the touch panel.
	Parity	Set up the parity for the MODBUS port located at the rear of the touch panel.
DUST FILTER	Dust Filter Installation	If you have installed any dust filter, please select ' Enable '; if not, please select ' Disable '.
	Dust Filter Installation Date	Set up the dust filter installation date.  NOTE: Only when you select ' Enable ' for ' Dust Filter Installation ' can you set up the item.
	Dust Filter Replacement Date	Set up the dust filter replacement date. When the date is due, the red warning icon () will automatically appear in the upper right corner of the LCD, and the alarm message ' Replace Dust Filter ' will be displayed.  NOTE: Only when you select ' Enable ' for ' Dust Filter Installation ' can you set up the item.

7.6.8 Net Setting

Path:  → Net Setting

Item	Sub Item	Description	
HOST	Host Name	Set up the host name. Length: 16 characters max.	
	System Contact	Set up the contact person. Length: 32 characters max.	
	System Location	Set up the equipment location. Length: 32 characters max.	
	MAC Address	Set up the MAC address of the network interface. It is displayed as six groups of two hexadecimal digits and separated by hyphens.	
IPv4	Current Status	DHCP Client	Current DHCP State.
		IP Address	Current IPv4 address.
		Subnet Mask	Current subnet mask address.
		Gateway IP	Current gateway IP address.
		DNS 1 IP	Current DNS server 1's IP address, which can be updated by DHCP.
		DNS 2 IP	Current DNS server 2's IP address, which can be updated by DHCP.
		Search Domain	Current domain. Length: 32 characters max.
	Setting	DHCP Client	Enable or disable DHCP client to obtain the IPv4 address.
		IP Address	Set up the static IPv4 address.
		Subnet Mask	Set up the static IPv4 subnet mask.
		Gateway IP	Set up the IPv4 gateway IP address.
		DNS 1 IP	Set up the DNS server 1's IP address.
		DNS 2 IP	Set up the DNS server 2's IP address.
		Search Domain	Set up the search domain. Length: 32 characters max.

Item		Sub Item	Description
IPV6	Current Status	LLA	Current link local address.
		DHCPv6	Current DHCPv6 state.
		DNS 1 IP	Current DNS server 1's IP address, which can be updated by DHCP.
		DNS 2 IP	Current DNS server 2's IP address, which can be updated by DHCP.
		Search Domain	Current IPv6 domain address. Length: 32 characters max.
		IP Address	Current IPv6 address.
		Route Entries #	Current route's destination and gateway.
	Setting	DHCP Client	Enable or disable DHCP client to obtain the IPv6 address.
		IP Address	Set up the static IPv6 address.
		Prefix	Set up the static IPv6 prefix length. Length: 1 ~ 128 bits.
		Gateway IP	Set up the IPv6 gateway IP address.
		DNS 1 IP	Set up the DNS server 1's IP address.
		DNS 2 IP	Set up the DNS server 2's IP address.
WEB	Search Domain	Set up the search domain. Length: 32 characters max.	
	HTTP	Enable or disable HTTP.	
	HTTPS	Enable or disable HTTPS.	
	HTTPS Port	Set up the HTTPS port No.	
REMOTE USER	SSL Certificate	Upload the SSL certification.	
	Privilege	There are three levels, Administrator, Device Manager and User.	
	Account Name	Set up the Administrator, Device Manager or User's account name.	

Item	Sub Item	Description
REMOTE USER (continued)	Password	Set up the Administrator, Device Manager or User's password.
	Login Limitation	Set up the Administrator, Device Manager or User's login limitation.
SNTP	Time Zone	Select the time zone.
	Primary Time Server	Set up the primary NTP server.
	Secondary Time Server	Set up the secondary NTP server.
	Period Time	Set up how long the system will automatically synchronize the time with servers.
DAYLIGHT SAVING	Daylight Saving	Enable or disable the daylight saving function.
	Daylight Saving From	Set up the daylight saving beginning time.
	Daylight Saving To	Set up the daylight saving ending time.
SNMP	SNMP	Enable or disable the SNMP function.
	SNMP Server Port	Set up the SNMP server port No.
	Context Name	Define the context name.
	SNMP MIB Download	Download MIB files.
NMS	NMS IP	Set up the NMS IP address that allows connection.
	IP Prefix	Set up the NMS IP mask address that allows connection.
	Community String	Set up the community string.
	Access Level	Set up the access level for each source IP.

Item	Sub Item	Description
SNMPv3 USM	User Name	Set up the SNMPv3 user name.
	Method	Select the encryption method.
	AuthPhrase	Set up the authentication password.
	PrivPhrase	Set up the privacy password.
	Access Level	Set up the access level for each SNMPv3 user.
MODBUS TCP	MODBUS TCP	Enable or disable the MODBUS TCP function.
	Slave ID	Set up the slave ID No.
	Port	Set up the MODBUS TCP port No.
	MODBUS TCP Address Table	Download the MODBUS TCP address table.
MODBUS TCP IP LIST	Allowed Remote IP	Set up the allowed remote IP.
	Access Level	Set up the access level for each remote IP.

7.6.9 Net Notification

Path:  → Net Notification

Item	Sub Item	Description
SNMP TRAP LIST	Target IP	Set up the target IP.
	Port	Set up the target IP's port No.
	Trap Type	Select the trap type.
	Community String	Set up the community string.
	Event Level	Select the event level.
	SNMPv3 User Name	Select the SNMPv3 user name.
	MIB	Select the MIB type.

Item	Sub Item	Description
INFORM	Timeout	Set up the timeout for SNMP INFORM.
	Retry	Set up the retry times for SNMP INFORM.
MAIL SERVER	SMTP Server Name or IP	Set up the SMTP server's DNS IP.
	SMTP Server Port	Set up the SMTP server's port No.
	Sender	Set up the sender's email address.
	Account	Set up the sender's email login account.
	Password	Set up the sender's email login password.
	TLS	Enable or disable the TLS function.
MAIL LIST	Receiver	Set up the receivers' email address.
	Event Level	Select the event level. If the event's level is higher than this setting, this event log will be sent.
	Email Test	Test if the sample event log will be sent or not.

7.6.10 Control

Path:  → Control

Item	Description
Buzzer	Enable or disable the buzzer.
Reset Module	Reset the power modules or not. In Bypass mode, when you tap the ON/ OFF Button () to start up the UPS but the UPS does not respond, please select ' Reset ' to reset the power modules. After the power modules are reset, please tap the ON/ OFF Button () to start up the UPS.


Item	Description
Reset System	Reset the system or not. In Bypass mode, when you tap the ON/ OFF Button (🔌) to start up the UPS but the UPS does not respond, please select ' Reset ' to reset the system. After the system is reset, please tap the ON/ OFF Button (🔌) to start up the UPS.
Force Equalized Charge	Manually force the UPS to run in auto equalized charge mode to charge the batteries.
Force Bypass to Inverter	Manually force the UPS to switch from bypass to inverter when the inverter keeps staying in the soft-start status and is unable to transfer to On-Line mode successfully.

7.7 System Maintenance

7.7.1 Warning

Path 1:  → Warning
MAINTENANCE

Path 2: When there is a warning, the buzzer icon (🔊) will light up in red, and the buzzer will sound. Tap the warning icon (⚠️) to enter the **WARNING** screen.

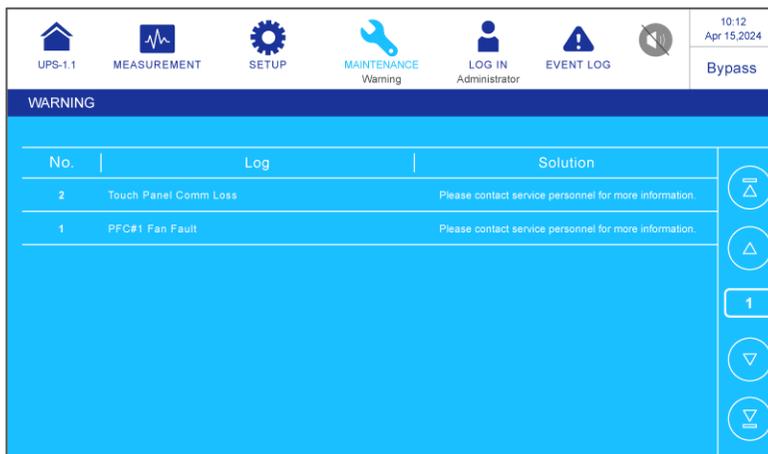

7.7.2 Historical Event

Path:  → Historical Event



No	Start Date	Code	Location	Log
187	2024-1-15 10:27:07	A883-0000	D/D #6	Local CAN Comm Normal - PFC
186	2024-1-15 10:28:52	A883-0001	D/D #6	Local CAN Comm Loss - PFC
185	2024-1-15 10:28:38	6084-0000	PFC #2	MONCAN #1 Normal - Physical
184	2024-1-15 09:08:59	6084-0001	PFC #2	MONCAN #1 Abnormal - Physical
183	2024-1-15 10:27:07	81E1-0001	INV #1	DC Bus Fuse Open - S
182	2024-1-15 10:28:52	471C-0000	STS	Recover from PM #5 Output Rating Compati...
181	2024-1-15 10:28:38	471C-0001	STS	PM #5 Output Rating Incompatible
180	2024-1-15 09:16:45	0100-0000	STS	Mains Input Volt Normal

7.7.3 Statistics

Path:  → Statistics

Item	Description
In Battery Mode	Shows how long and how many times the UPS runs in Battery mode.
In Bypass Mode	Shows how long and how many times the UPS runs in Bypass mode.
Operation Time	Shows how long the UPS has operated.

To clear the statistics, please refer to **7.7.5 Clear**.

7.7.4 Test

Path:  → Test

You can perform the manual battery test via the LCD screen.

7.7.5 Clear

Path:  → Clear
MAINTENANCE

Item	Description
Clear Statistics	After you select 'Clear' and confirm clearance of statistics, all records of the statistics will be cleared.
Clear Historical Event	After you select 'Clear' and confirm clearance of historical event logs, all historical event logs will be cleared.
Clear Battery Test Result	After you select 'Clear' and confirm clearance of battery test result, the battery test result will be cleared.
Clear Kilowatt Hour (kWh)	After you select 'Clear' and confirm clearance of kilowatt hour records, the kilowatt hour statistics will be cleared.



NOTE:

The records mentioned above are important information for system analysis and maintenance. Do not clear any of them without the consent of qualified service personnel.

7.7.6 Advanced Diagnosis

Path:  → Advanced Diagnosis
MAINTENANCE

This is an optional function. Please contact Delta customer service for more information. If you are able to access to the **Advanced Diagnosis** screen, you can obtain the system and the specific power module's relevant readings of the following items.

Location	System	Power Module #
Item	STS Temp. (°C)	INV Temp. (°C)
	Battery Temp. (°C)	REC Temp. (°C)
	-	D2D Temp. (°C)
	-	Aux. Leg Temp (°C)
	-	Fan Speed (rpm)

7.7.7 Version & S/N



NOTE:

To operate the UPSs in parallel, please make sure all the versions below are the same for each parallel unit. If you have any questions about parallel operation, please contact Delta customer service.

Path:  **MAINTENANCE** → Version & S/N

Item	Sub Item	Description
S/N	System	Check the system's serial No.
	Touch Panel	Check the touch panel's serial No.
MAIN	System Control Board	Check and update the MAIN MCU, COM MCU or FPGA firmware version of the system control board.
	Touch Panel	Check and update the MAIN MCU firmware version of the touch panel.
PM	PM1	Check and update the PFC MCU, PFC MCU2, INV MCU, INV MCU2 or FPGA firmware version of the power module.

Chapter 8 : Optional Accessories

No.	Item	Function
1	Dust Filter	It prevents dust from entering into the UPS to ensure UPS reliability and to prolong product life.
2	EMS 1000 (EnviroProbe)	It monitors temperature, humidity and other connected monitoring devices in a room environment. Connect the EMS 1000 (EnviroProbe) to the UPS's EMS port located at the rear of the touch panel, and the UPS will integrate the detected information from the EMS 1000 (EnviroProbe) and display relevant data on the LCD. See Figure 4-14 for the location of the EMS port. For details, please refer to 8.1 EMS Function on the LCD Screen .
3	Battery Cabinet Temperature Sensor Cable	It detects the temperature of an external battery cabinet connected to the UPS.
4	Parallel Cable (Length: 20 m (787.4"))	It connects to the parallel UPSs.
5	Top Water-resistant Cover	It prevents water droplets or other liquids from entering the UPS and causing electrical hazards.



NOTE:

For installation and operation details, please refer to the **Quick Guide** or **User Manual** included in the package of the optional accessory. To purchase any accessory mentioned above, please contact your local dealer or customer service.

8.1 EMS Function on the LCD Screen

- Path 1: Tap the shortcut button () on the Main Screen.

Path 2:  → EMS

The UPS can display the information of the optional EMS 1000 (EnviroProbe) on the **EMS** screen. To activate it, please connect the EMS 1000 (EnviroProbe) with the UPS and complete relevant settings.



NOTE:

1. The **EMS** screen is related to the settings shown in  → **EMS Setting**.
The settings can be adjusted according to your needs.
2. For installation of the optional EMS 1000 (EnviroProbe), please refer to the instructions below and the *EnviroProbe 1000 Quick Guide* included in its package.



No.	Item	Color (Status)	Descriptions
1	ID	Green (Normal) Yellow (Warning) Red (Alarm) Gray (Off)	<ol style="list-style-type: none"> 1. ID # represents each EMS 1000 (EnviroProbe) device which is connected and set as 'Enable'. 2. Shows the integrated status of each EMS 1000 (EnviroProbe) device. The integrated status is determined by the most severe status among Temperature (°C), Humidity (%) and DI1 ~ DI4.

No.	Item	Color (Status)	Descriptions
2	Temperature	Green (Normal) Yellow (Warning) Red (Alarm)	<p>Shows the statuses of Temperature/ Humidity based on the EMS settings.</p> <ul style="list-style-type: none"> Green (Normal): lower than the set Warning value. Yellow (Warning): higher than the set Warning value, but lower than the set Alarm value. Red (Alarm): higher than the set Alarm value. <p>If Red (Alarm)/ Yellow (Warning) is triggered, the status will recover only when the detected value is lower than the Recovery value.</p>
3	Humidity	Green (Normal) Yellow (Warning) Red (Alarm)	
4	DI1	Green (None/ Information)	<p>1. Shows the statuses of the input contacts.</p> <p>2. The Title, NO/ NC, and Event Type can be adjusted according to your needs.</p>
	DI2		
	DI3	Yellow (Warning)	
	DI4	Red (Alarm)	

- **Connecting the Optional EMS 1000 (EnviroProbe)**

1. Each UPS can be connected with a maximum of 16 EMS 1000 (EnviroProbe) devices in string to expand the environment monitoring range. A maximum of 8 UPS units can be paralleled. Please use a CAT-5 cable (user-supplied & the cable length depends on the on-site application and environment) to connect the EMS 1000 (EnviroProbe) to the EMS port on the UPS. For the location of the EMS port, please see *Figure 4-14*.
2. The UPS only supports RS-485 communication. When installing the EMS 1000 (EnviroProbe), please set the device's communication mode as RS-485 following *3-1 Comm DIP Switch Settings* of the *EnviroProbe 1000 Quick Guide*.
3. When installing, please set the ID # by the four ID DIP switches on the left of the device following *3-2 ID DIP Switch Settings* of the *EnviroProbe 1000 Quick Guide*.




NOTE:

The ID # of each EMS 1000 (EnviroProbe) device connected to the UPS must be different so that the UPS can identify each device.

4. To enable the EMS function, you have to set up relevant items on the LCD after connecting the optional EMS 1000 (EnviroProbe) to the UPS.

- Path:  → EMS Setting (Administrator login is required)

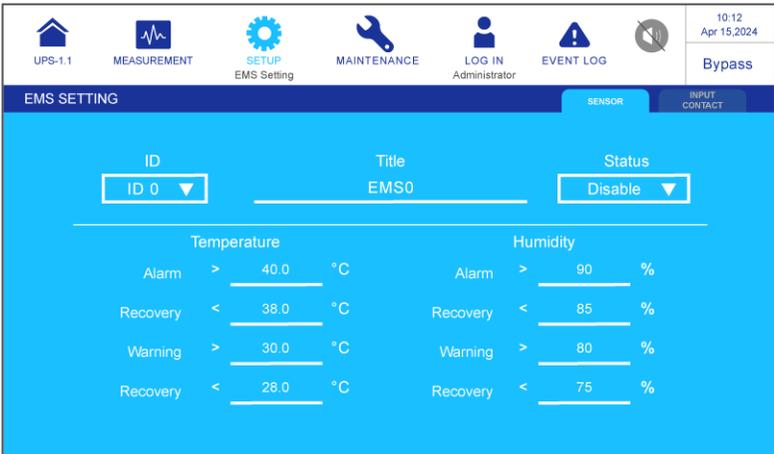

The screenshot shows the 'EMS SETTING' interface with the 'SENSOR' tab selected. At the top, there is a navigation bar with icons for UPS-1.1, MEASUREMENT, SETUP EMS Setting, MAINTENANCE, LOG IN Administrator, EVENT LOG, and a bypass button. The main area contains a form for configuring sensor settings. It includes dropdown menus for 'ID' (set to ID 0) and 'Status' (set to Disable). Below these are two columns of settings: Temperature and Humidity. Each column has four rows for Alarm, Recovery, Warning, and Recovery, with numerical values and units (°C or %) and directional arrows.

ID	Title	Status
ID 0	EMS0	Disable

Temperature		Humidity	
Alarm	> 40.0 °C	Alarm	> 90 %
Recovery	< 38.0 °C	Recovery	< 85 %
Warning	> 30.0 °C	Warning	> 80 %
Recovery	< 28.0 °C	Recovery	< 75 %



The screenshot shows the 'EMS SETTING' interface with the 'INPUT CONTACT' tab selected. It features the same navigation bar as the previous screenshot. The main area contains a table for configuring input contacts. It includes dropdown menus for 'ID' (set to ID 0) and 'Status' (set to Disable). Below these are four rows, each representing an input contact with its NO/NC setting, title, and event type.

ID	Title	Status
ID 0	EMS0	Disable

Input Contact	NO/NC	Title	Event Type
1	Normally Open	Security	Warning
2	Normally Open	Leakage	Warning
3	Normally Open	Fire	Warning
4	Normally Open	Smoke	Warning



NOTE:

The default values are shown in the figures above.

Item	Sub Item	Description
SENSOR	ID	<p>Set the ID # (ID 0/ ID 1/ .../ ID 15) according to the ID DIP switch setting of the EMS 1000 (EnviroProbe) device.</p> <p> NOTE: If the ID # setting is wrong, the warning message 'The EMS 1000 ID # Communication Fail' will appear.</p>

Item	Sub Item	Description
SENSOR (continued)	Title	Set the title for each EMS 1000 (EnviroProbe) device.
	Status	The status ' Enable/ Disable ' determines whether or not the LCD shows the information of the EMS 1000 (EnviroProbe) device (ID #) on the screen.
	Temperature	Set the temperature (°C) values for Alarm/ Warning/ Recovery.
	Humidity	Set the humidity (%) values for Alarm/ Warning/ Recovery.
INPUT CONTACT	Input Contact 1	<ol style="list-style-type: none"> 1. Set each input contact as Normally Open (NO)/ Normally Closed (NC). 2. Set the title for each input contact. 3. Set the event type as None/ Information/ Warning/ Alarm.
	Input Contact 2	
	Input Contact 3	
	Input Contact 4	

Chapter 9 : Maintenance



NOTE:

Please ask your local dealer or customer service for more maintenance information. Do not perform maintenance if you are not trained for it.

- **UPS**

1. UPS Cleaning:

Regularly clean the UPS, especially the slits, openings and filters, to ensure that the air freely flows into the UPS to avoid overheating. If necessary, use an air blower to clean the slits and openings and replace the filters regularly to prevent any object from blocking or covering these areas.

2. UPS Regular Inspection:

- a. Monthly check the filters and regularly replace them.

- b. Biannually check the UPS and inspect:

- 1) Whether the UPS, LED indicators and alarm function normally.

- 2) Whether the UPS works in Bypass mode (normally, the UPS works in On-Line mode). If yes, check if any error, overload, internal fault, etc. occur.

- 3) Whether the battery voltage is normal. If the battery voltage is too high or too low, find the root cause.

- **Batteries**

The UPS uses the lead-acid batteries or lithium-ion batteries. Make sure to replace batteries according to the battery life. The actual battery life depends on the environment temperature, usage, and charging/ discharging frequency. High temperature environments and high charging/ discharging frequency will quickly shorten the battery life; thus, battery inspection and maintenance are required periodically. Please follow the suggestions below to ensure normal battery life.

1. Keep usage temperature between 15°C ~ 25°C (59°F ~ 77°F).

2. When the UPS needs to be stored for an extended period of time, the lead-acid batteries must be recharged once every three months and the charging time must not be less than 24 hours each time. As for the lithium-ion batteries, please contact your battery supplier for the charging frequency and charging duration.

- **Fans**

Higher temperature will shorten fan life. When the UPS is running, please check if all fans work normally and make sure if air can move freely around and through the UPS. If not, please replace abnormal fans.

Appendix 1 : Technical Specifications

Model		IPT-40K	IPT-50K	IPT-100K	IPT-120K
UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Power Rating	Parallel Configuration	Up to 8 units			
Input	Nominal Voltage	220/380, 230/400, 240/415 Vac			
	Phase/Wire	3P4W + PE/ 3P3W + PE			
	Voltage Range	187/324 ~ 276/477 Vac (100% load) 165/286 ~ 187/324 Vac (with derating to 70 ~ 100% load)			
	Frequency Range	40 ~ 70 Hz			
	Total Harmonic Distortion (THDi)	< 3 %			
	Power Factor (100% load)	> 0.99			
	Connection	Single or dual feed			
	Cable Entry	Bottom			
Bypass	Overload Capability	≤110: 60 mins; 111 ~ 125%: 10 mins; 126 ~ 150%: 1 min > 150%: 1 sec			
Output	Nominal Voltage	220/380, 230/400, 240/415 Vac			
	Voltage Regulation	± 1% (static) ± 3% (dynamic)			
	Frequency	50/60 Hz ± 0.05 Hz			
	Total Harmonic Distortion (THDv)	< 2% (linear load) < 5% (non-linear load)			
	Power Factor	0.9			

Model		IPT-40K	IPT-50K	IPT-100K	IPT-120K
UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Output (continued)	Permitted Load Power Factor	0.8 leading to 0.7 lagging without derating			
	Overload Capability	≤110: 60 mins; 111 ~ 125%: 10 mins; 126 ~ 150%: 1 min > 150%: 1 sec			
	Short-circuit Current (RMS)	300A, 200 ms	300A, 200 ms	510A, 200 ms	510A, 200 ms
	Phase Angle Accuracy w/ Balanced Loads	120 ± 1°			
	Phase Angle Accuracy w/ Unbalanced Loads	120 ± 3°			
	Range of Frequency Synchronized with Bypass	50/60 Hz ± 5 Hz			
	Current Crest Ratio	3 : 1			
Efficiency	Online Mode	Up to 94.5%			
	ECO Mode	Up to 97.5%			
	Battery Mode	Up to 93%			
Battery	Battery Type	VRLA, Lithium-ion			
	Battery Quantity	36 ~ 44 PCS			
	Battery Nominal Voltage	480 Vdc			
	Battery Operational Voltage Limits	346 ~ 638 Vdc			

Model		IPT-40K	IPT-50K	IPT-100K	IPT-120K
UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Battery (Continued)	Maximum Charge Current	15A	17A	38A	45A
Communication Interfaces	Display	10-inch color LCD touchscreen			
	Ports	USB port × 1, RS-232 × 1, Input dry contact × 4, Output dry contact × 6, Network port × 1, REPO × 1, Modbus (RS-485) × 1,			
	REPO (Emergency Power Off)	Standard			
	Protocols	SNMP, Modbus RTU, Modbus TCP/IP, HTTP(S), SNTP, SMTP, DHCP			
Physical	Dimensions (W × D × H)	600 × 830 × 1420 mm (23.6" × 32.7" × 55.9")	800 × 830 × 1570 mm (31.5" × 32.7" × 61.8")		
	Net Weight	404 kg (890.7 lb)	593 kg (1307.3 lb)		
	Ventilation	Front to top			
	Service Access	Front and top			
Environment	Operating Temperature	0 ~ 40°C (32 ~ 104°F)			
	Humidity	0 ~ 95% (non-condensing)			
	Audible Noise	< 78 dBA*1			
	Altitude	0 ~ 2000 m (0 ~ 6562 ft) (derating 1% per 100 m (328.08 ft) from 1000 m (3280.84 ft) to 2000 m (6562 ft)			

Model		IPT-40K	IPT-50K	IPT-100K	IPT-120K
UPS Capacity		40kVA/ 36kW	50kVA/ 45kW	100kVA/ 90kW	120kVA/ 108kW
Environment (continued)	Storage Temperature	-20 ~ 70°C (-4 ~ 158°F)			
	Storage Humidity	0 ~ 95% (non-condensing)			
	Ingress Protection Level	IP20, IP43 (optional)			
Conformance	IEC Pollution Degree (PD)	PD 2			
	Over Voltage Category (OVC)	OVC III			
	Type of System Earthing	TN-S, TN-C, TN-C-S			
	Safety	IEC 62040-1, CE			
	EMC	IEC 62040-2			
	Performance	IEC 62040-3			
	Sustainability	RoHS, REACH			

**NOTE:**

1. *1 At a distance of 1 m (3.28 ft) in front of the UPS.
2. Please refer to the rating label for the safety certification.
3. All specifications are subject to change without prior notice.

Appendix 2 : Warranty

Seller warrants this product, if used in accordance with all applicable instructions, to be free from original defects in material and workmanship within the warranty period. If the product has any failure problem within the warranty period, Seller will repair or replace the product at its sole discretion according to the failure situation.

This warranty does not apply to normal wear or to damage resulting from improper installation, operation, usage, maintenance or irresistible force (i.e. war, fire, natural disaster, etc.), and this warranty also expressly excludes all incidental and consequential damages.

Maintenance service for a fee is provided for any damage out of the warranty period. If any maintenance is required, please directly contact the supplier or Seller.



WARNING:

The individual user should take care to determine prior to use whether the environment and the load characteristic are suitable, adequate or safe for the installation and the usage of this product. The User Manual must be carefully followed. Seller makes no representation or warranty as to the suitability or fitness of this product for any specific application.

No. : 501331790104

Version : V 1.4

Release Date : 2025_04_22

Global Headquarter

Taiwan

Delta Electronics Inc.
30 Section 2, Huandong Road, Shanhua District,
Tainan City 74144, Taiwan
T +886 6 505 6565
E ups.taiwan@deltaww.com

Regional Office

Netherlands

Delta Electronics (Netherlands) B.V.
Zandsteen 15, 2132 MZ Hoofddorp, The Netherlands
T +31 (0)20 800 3900
E info@delta-emea.com

Poland

Delta Electronics (Poland) Sp. z.o.o.
23 Poleczki St., 02-822 Warszawa, Poland
T +48 22 335 2600
E ups.poland@deltaww.com

Brazil

Delta Electronics Brasil Ltda.
Estrada Velha Rio-São Paulo, 5300 – Eugênio de Melo –
CEP 12247-001 São José dos Campos-SP-Brazil
T +55 12 39322300
E ups.brazil@deltaww.com

Peru

Delta Electronics (Peru) Inc. S.R.L.
Av. Pardo y Aliaga 699 Of. 601, San Isidro Lima, Peru.
T +51 962 834 287
E ups.peru@deltaww.com

China

Delta GreenTech (China) Co., Ltd.
238 Minxia Road, Pudong, Shanghai, 201209 P.R.C
T +86 21 5863 5678
+86 21 5863 9595
E ups.china@deltaww.com

South Korea

Delta Electronics (Korea), Inc.
1511, Byucksan Digital Valley 6-cha, Gasan-dong, Geumcheon-gu,
Seoul, Korea, 153-704
T +82-2-515-5303
E ups.south.korea@deltaww.com

Thailand

Delta Electronics (Thailand) Public Co.,Ltd.
909 Soi 9, Moo 4, E.P.Z., Bangpoo Industrial Estate, Tambon Phraksa,
Amphur Muang-samutprakarn, Samutprakarn Province 10280,
Thailand
T +662 709-2800
E ups.thailand@deltaww.com

Vietnam (Hanoi)

Delta Electronics (Vietnam) Co., Ltd.
3rd Floor, Vietnam 3D Creative Center Building, No. 3 Duy Tan Street,
Dich Vong Hau Ward, Cau Giay District, Hanoi City, Vietnam
T +84 966 532 266
E ups.vietnam@deltaww.com

Indonesia

Delta Electronics International (S) Pte Ltd.
Soho Capital, 30th Fl, Unit SC3009
Jl. Letjend S. Parman kav 28. Jakarta 11470 Indonesia
T + 65 9667 4687
E ups.indonesia@deltaww.com

UK

Delta Electronics (UK) Ltd.
Eltek House, Unit 1 Cleveland Road, Hemel Hempstead,
Hertfordshire, HP2 7EY, UK
T +44 1442 210805
E sales.gb@eltek.com

U.S.A

Delta Electronics (Americas) Ltd.
46101 Fremont Blvd. Fremont, CA 94538
T +1 510 668 5100
E ups.na@deltaww.com

Colombia

Delta Electronics Colombia SAS
Cra 72 # 95 – 51 Bodega 16, Parque Empresarial Los
Lagartos
Bogota DC, Colombia
T +57 317 4052794
E ups.colombia@deltaww.com

India

Delta Electronics India Pvt. Ltd.
Plot No. 43, Sector-35, HSIIDC, Gurgaon-122001,
Haryana, India
T +91 124 4874 900
E ups.india@deltaww.com

Japan

Delta Electronics (Japan), Inc.
2-1-14 Shibadaimon, Minato-Ku, Tokyo, 105-0012,
Japan
T +81-3-5733-1111
E jpstps@deltaww.com

Singapore

Delta Electronics Int'l (Singapore) Pte Ltd.
17 Kallang Junction, #01-01, TRION,
Singapore 339274
T +65 6747 5155
E ups.singapore@deltaww.com

Vietnam (Ho Chi Minh)

Delta Electronics (Vietnam) Co., Ltd.
10th Floor, The Galleria Office Building,
258 Nam Ky Khoi Nghia Street, Vo Thi Sau Ward,
District 3, Ho Chi Minh City, Vietnam
T +84 903 133 548
E ups.vietnam@deltaww.com

Philippines

Eltek Power Inc./ Delta
302 Orient Square Bldg
F. Ortigas JR Road, Barangay
San Antonio, Pasig City
1605 Philippines
E ups.philippines@deltaww.com

Australia

Delta Electronics (Australia) Pty Ltd.
St Leonard's Corporate Centre
Unit 18/39 Herbert Street, St Leonards NSW 2065, Australia
T +61 2 9479 4200
E ups.australia@deltaww.com

