



The power behind competitiveness

## Delta UPS Modulon Family

DPH Series, Three-Phase, 380/ 400/ 415 Vac  
50-200kVA

User Manual

## SAVE THIS MANUAL

This manual contains important instructions and warnings that you should follow during the installation, operation, storage and maintenance of this product. Failure to heed these instructions and warnings will void the warranty.

Copyright © 2024 by Delta Electronics Inc. All Rights Reserved. All rights of this User Manual ("Manual"), including but not limited to the contents, information, and figures are solely owned and reserved by Delta Electronics Inc. ("Delta"). The Manual can only be applied to the operation or the use of this product. Any disposition, duplication, dissemination, reproduction, modification, translation, extraction, or usage of this Manual in whole or in part is prohibited without the prior written permission of Delta. Given that Delta will continuously improve and develop the product, changes may be made to the information in this Manual at any time without obligation to notify any person of such revision or changes. Delta will make all possible efforts to secure the accuracy and the integrity of this Manual. Delta disclaims any kinds or forms of warranty, guarantee, or undertaking, either expressly or implicitly, including but not limited to the completeness, faultlessness, accuracy, non-infringement, merchantability or fitness for a particular purpose of the Manual.

# Table of Content

Chapter 1: Important Safety Instructions.....	7
1.1    Installation Warnings .....	7
1.2    Connection Warnings .....	7
1.3    Usage Warnings .....	8
1.4    Storage Warnings.....	10
1.5    Standard Compliance .....	10
Chapter 2: Introduction .....	11
2.1    General Overview .....	11
2.2    Package Inspection .....	11
2.3    Functions & Features .....	12
2.4    Exterior & Dimensions.....	14
2.5    Front View.....	15
2.6    Internal View.....	16
2.7    Rear View.....	18
2.8    Tri-color LED Indicator & Buzzer .....	20
Chapter 3: Operation Modes .....	23
3.1    On-Line Mode .....	23
3.2    Battery Mode.....	24
3.3    Bypass Mode.....	24
3.4    Manual Bypass Mode .....	25
3.5    ECO Mode.....	25
3.6    Frequency Conversion Mode.....	26
3.7    Green Mode.....	27
Chapter 4: Communication Interfaces.....	28
4.1    Communication Interfaces (I): on the Front of the UPS with Its Front Door Open.....	28
4.1.1    Display Port .....	29
4.1.2    REPO Dry Contacts.....	29
4.1.3    External Battery Temperature Detection .....	31
4.1.4    External Switch/ Breaker Status Dry Contacts .....	31

4.1.5	Output Dry Contacts.....	31
4.1.6	Input Dry Contacts.....	35
4.1.7	Parallel Communication Cards.....	37
4.1.8	Parallel Ports .....	38
4.1.9	SMART Slot.....	38
4.1.10	USB Port & RS-232 Port.....	39
4.1.11	Auxiliary Power Cards .....	39
4.1.12	Battery Start Buttons.....	40
4.2	Communication Interfaces (II): at the Rear of the Touch Panel .....	41
Chapter 5: Installation and Wiring .....		43
5.1	Before Installation and Wiring.....	43
5.2	Installation Environment .....	43
5.3	UPS Transportation .....	45
5.4	UPS Installation .....	46
5.5	Wiring.....	48
5.5.1	Pre-wiring Warnings .....	48
5.5.2	Single Input to Dual Input Modification.....	52
5.5.3	Single Unit Wiring.....	55
5.5.3.1	Single Input (Single Unit).....	56
5.5.3.2	Dual Input (Single Unit) .....	60
5.5.4	Parallel Units Wiring.....	62
5.6	External Battery Cabinet Connection Warnings.....	64
5.7	STS Module .....	73
5.7.1	STS Module Installation.....	74
5.7.2	STS Module Removal.....	76
5.7.3	STS Module's LED Indicator STS Module's LED Indicator.....	78
5.8	Power Module (Optional) .....	79
5.8.1	Power Module Installation.....	80
5.8.2	Power Module Removal.....	83
5.8.3	Power Module's LED Indicator .....	85
Chapter 6: UPS Operation.....		86
6.1	Pre Start-up & Pre Turn-off Warnings.....	86



6.2	Start-up Procedures.....	88
6.2.1	On-Line Mode Start-up Procedures.....	88
6.2.2	Battery Mode Start-up Procedures.....	89
6.2.3	Bypass Mode Start-up Procedures.....	90
6.2.4	Manual Bypass Mode Start-up Procedures .....	92
6.2.5	ECO Mode Start-up Procedures.....	93
6.2.6	Frequency Conversion Mode Start-up Procedures.....	95
6.2.7	Green Mode Start-up Procedures.....	97
6.2.8	Energy Recycle Mode Start-up Procedures .....	99
6.3	Turn-off Procedures .....	101
6.3.1	On-Line Mode Turn-off Procedures.....	101
6.3.2	Battery Mode Turn-off Procedures.....	101
6.3.3	Bypass Mode Turn-off Procedures .....	102
6.3.4	Manual Bypass Mode Turn-off Procedures.....	102
6.3.5	ECO Mode Turn-off Procedures .....	103
6.3.6	Frequency Conversion Mode Turn-off Procedures .....	104
6.3.7	Green Mode Turn-off Procedures .....	105
6.3.8	Energy Recycle Mode Turn-off Procedures .....	106
Chapter 7: LCD Display & Settings .....		107
7.1	LCD Display Hierarchy.....	107
7.2	How to Turn on the LCD.....	110
7.3	Introduction of Touch Panel and Function Keys .....	111
7.4	Password Entry .....	117
7.5	Check Kilowatt-Hour .....	117
7.6	UPS Settings .....	119
7.6.1	Bypass Setting .....	119
7.6.2	Mode Setting.....	120
7.6.3	Output Setting.....	121
7.6.4	Battery & Charging Setting .....	122
7.6.5	Parallel Setting .....	124
7.6.6	Dry Contact Setting.....	125
7.6.7	General Setting .....	126

7.6.8	IP Setting .....	128
7.6.9	Control .....	129
7.6.10	Network Service.....	129
7.6.11	Remote User Setting .....	130
7.7	System Maintenance .....	130
7.7.1	Warning .....	130
7.7.2	Historical Event .....	131
7.7.3	Statistics .....	131
7.7.4	Test.....	131
7.7.5	Clear.....	132
7.7.6	Advanced Diagnosis .....	132
7.7.7	Version & S/N .....	133
Chapter 8: Optional Accessories.....		134
8.1	EMS Function on the LCD Screen .....	136
8.2	BMS Function on the LCD Screen .....	139
8.3	MFC Function on the LCD Screen .....	142
Chapter 9: Maintenance.....		144
Appendix 1: Technical Specifications.....		145
Appendix 2: Warranty .....		150

# Chapter 1: Important Safety Instructions

## 1.1 Installation Warnings

- This is a three-phase four-wire on-line uninterruptible power supply (hereafter referred to as 'UPS'). It can be used for commercial and industrial applications.
- Install the UPS in a well-ventilated indoor area, away from excess moisture, heat, dust, flammable gas or explosives. To avoid fire accidents and electric shock, the indoor area must be free of conductive contaminants. For the temperature and humidity specifications, please refer to ***Appendix 1: Technical Specifications***.
- Leave adequate space around all sides of the UPS for proper ventilation and maintenance. Please refer to ***5.2 Installation Environment***.
- Only authorized Delta engineers or service personnel can perform installation and maintenance. If you want to install the UPS by yourself, please install it under the supervision of authorized Delta engineers or service personnel.
- Follow the IEC 60364-4-42 standard to install the UPS.

## 1.2 Connection Warnings

- Before applying electrical power to the UPS, make sure that the UPS is grounded to avoid a possible risk of current leakage.
- You can parallel up to eight UPS units.
- The UPS must be connected with an external battery cabinet (user-supplied, handled and configured by Delta service personnel). Please refer to ***5.6 External Battery Cabinet Connection Warnings*** for relevant information.
- It is necessary to connect the protective devices with the UPS when the UPS is connected to power sources and critical loads.
- The protective devices connected to the UPS must be installed near the UPS and easily accessible for operation.
- Protective Devices:
  1. For single input, you must install (1) a protective device between the main AC source and the UPS and (2) a protective device between the connected critical loads and the UPS.
  2. For dual input, you must install (1) a protective device between the main AC source and the UPS, (2) a protective device between the bypass source and the UPS and (3) a protective device between the connected critical loads and the UPS.
  3. For grounding information, please refer to ***Figure 2-5***.

- The recommended electrical rating of the input, output and backfeed protective devices are as follows. Application of the protective devices shall be in accordance with local installation codes.

50kVA	100kVA	150kVA	200kVA
690V/100A	690V/200A	690V/300A	690V/400A

- Each protective device should have the functions of overcurrent protection, short circuit protection, insulating protection and shunt trip feature. Please refer to the table below for the UPS rated short-time withstand current (I<sub>cw</sub>).

50kVA	100kVA	150kVA	200kVA
10KA	10KA	10KA	10KA

- When selecting the protective devices, please take each power cable's current capacity and the system's overload capacity (please refer to **Appendix 1: Technical Specifications**) into consideration. Besides, the short-circuit capacity of the upstream protective devices must be equal to or larger than the capacity of the UPS's input protective devices.
- Due to abnormalities in the UPS, the fault current may reach 20 kA. At the time, the UPS's internal semi-conductor fuses will take 8 ~ 10 ms to open. Thus, the reaction time of the upstream\*<sup>1</sup> protective devices must be more than 10 ms so that the fuses would have sufficient time to interrupt the fault current, and the UPS's bypass will be able to keep supplying power to the loads.



#### NOTE:

\*<sup>1</sup> For dual input application, this refers to the bypass upstream.

- If the UPS is supplied by a power source whose neutral is grounded, each protective device must be a 3-pole type. If the UPS is supplied by a power source whose neutral is not grounded, each protective device must be a 4-pole type.

## 1.3 Usage Warnings

- Only qualified service personnel can upgrade the UPS's firmware.
- Before installation, wiring and working on the UPS's internal circuits, please completely cut off all power supplying to the UPS, including the input power and battery power.

- The UPS is specifically designed for information technology equipment and used to power computers, servers, and associated peripheral devices. If you want to connect any capacitive loads or non-linear loads (that have serious surge current) to the UPS, it needs to be de-rated according to on-site applications. For such special applications, please contact Delta service personnel for the accurate UPS sizing. The UPS is not suitable for connecting with any asymmetrical loads. For the load suitability, please contact Delta customer service before purchasing.
- The external slits and openings in the UPS are provided for ventilation. To ensure reliable operation of the UPS and to protect the UPS from overheating, these slits and openings must not be blocked or covered. Do not insert any object into the slits and openings that may hinder ventilation.
- Before applying electrical power to the UPS, you must allow the UPS to adjust to room temperature (20°C ~ 25°C (68°F ~ 77°F)) for at least one hour and ensure that there is no moisture condensing inside the unit.
- Do not put beverages on the UPS, external battery cabinet(s) or any other accessory associated with the UPS.
- Do not open or remove the covers or panels of the UPS to avoid high-voltage electric shock. Only authorized Delta engineers or service personnel can do so for installation or maintenance. If you want to open or remove the covers or panels, do it only under the supervision of authorized Delta engineers or service personnel.
- It is not recommended to connect the UPS to any regenerative loads. For the load suitability, please contact Delta customer service before purchasing.
- The risk of dangerous high voltage is possible when batteries are still connected to the UPS even though the UPS is disconnected from the power sources. Before maintenance of the UPS, turn off each external battery cabinet's circuit breaker to completely cut off the battery power from the UPS.
- Do not dispose of the battery or batteries in a fire. The batteries may explode.
- Do not open or damage the battery or batteries. The released electrolyte is harmful to the skin and eyes and may be toxic.
- The UPS is electronic equipment that runs 24 hours continuously. To ensure its normal lifetime, regular maintenance of the UPS and batteries is of vital importance and necessary.
- Some components like batteries, power capacitors, and fans will become worn-out due to long-term usage, and this will increase the risk of UPS failure. To replace and maintain the components, please contact Delta service personnel.
- A battery can present a risk of electrical shock and high short-circuit current. Contact with any part of a grounded battery can result in electrical shock. The following precautions should be observed when working on batteries:
  1. Remove watches, rings, or other metal objects.
  2. Use tools with insulated handles.

3. Wear rubber gloves and boots.
  4. Do not lay tools or metal parts on top of the batteries.
  5. Disconnect charging source and loads prior to installing or maintaining the batteries.
  6. Remove battery grounds during installation and maintenance to reduce likelihood of shock. Remove the connection from ground if any part of the battery is determined to be grounded. Please note that the battery grounds mean any battery pole (+/ -) connecting to the ground.
- You must contact Delta customer service if any of the following events occurs:
    1. Any liquid is poured or splashed on the UPS.
    2. The UPS is deformed.
    3. Any conductive powders or metals enter into the UPS.
    4. The UPS does not run normally after you carefully followed the instructions in this *User Manual*.

## 1.4 Storage Warnings

- Use the original packing materials to pack the UPS to prevent any possible damage from rodents.
- If the UPS needs to be stored prior to installation, it should be placed in a dry indoor area. The allowable storage temperature is below 70°C (158°F) and relative humidity is below 95%.

## 1.5 Standard Compliance

- EN 62040-1
- EN 62040-2 Category C3
- EN 61000-4-2 Level 4
- EN 61000-4-3 Level 3
- EN 61000-4-6
- EN 61000-4-4 Level 4
- EN 61000-4-5 Level 4
- YD 5083-2005
- YD/ T 5096-2016

## Chapter 2: Introduction


### 2.1 General Overview

The DPH series UPS, a three-phase four-wire online uninterruptible power supply (hereafter referred to as 'UPS'), is a dedicated design for data centers, factory facilities and large scale power systems. The unit not only adopts advanced IGBT technology to provide high quality, low noise, pure and uninterruptible output power to the connected loads but also applies the latest design of DSP digital control technology and highest quality components.

### 2.2 Package Inspection

During UPS transportation, some unpredictable situations might occur. It is recommended that you inspect the UPS exterior packaging. If you notice any damage, please immediately contact the dealer from whom you purchased the unit.

Please check if any items are missing according to the following package lists. If the UPS needs to be returned, carefully repack the UPS and all of the accessories using the original packing materials that came with the unit.

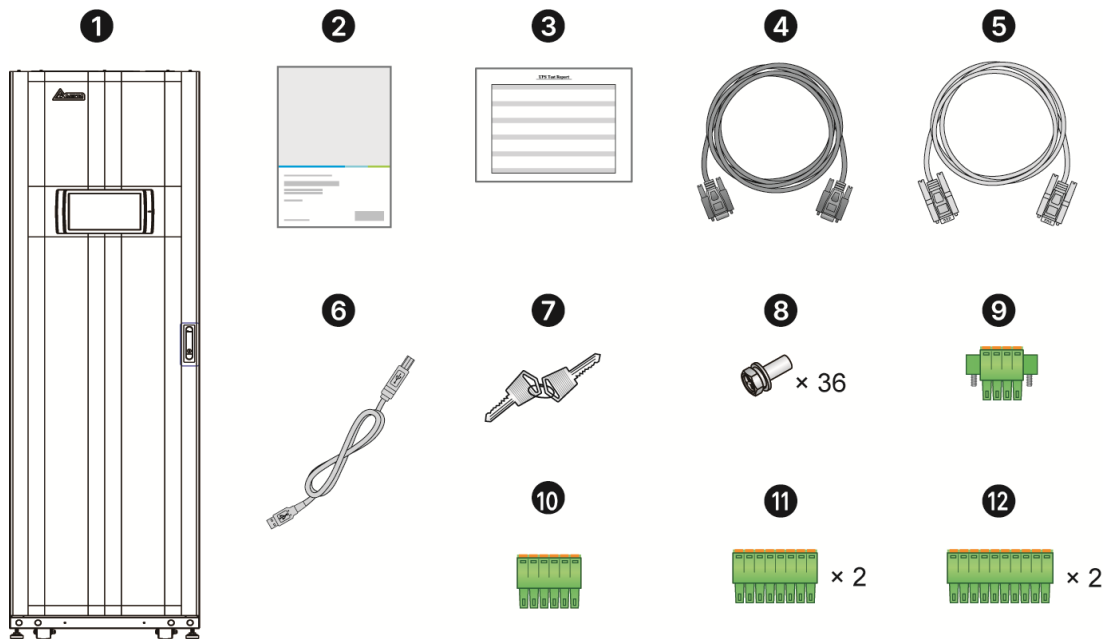

No.	Item	Q'ty
①	UPS	1 PC
②	User Manual	1 PC
③	Test Report	1 PC
④	Parallel Cable	1 PC
⑤	RS-232 Cable	1 PC
⑥	USB Cable	1 PC
⑦	Key (placed inside the UPS cabinet)	2 PCS
⑧	M10 Screw (used for input/ output/ battery wiring)	36 PCS
⑨	4-Pin Dry Contact Terminal Block (used for REPO dry contacts)	1 PC
⑩	6-Pin Dry Contact Terminal Block (used for Modbus and BMS ports)	1 PC
⑪	8-Pin Dry Contact Terminal Block (used for (1) external battery temperature detection and (2) external switch/ breaker status dry contacts)	2 PCS
⑫	10-Pin Dry Contact Terminal Block (used for input/ output dry contacts)	2 PCS

## 2.3 Functions & Features

- Hot-swappable STS module, communication interfaces and power modules (optional) realize on-line maintenance and reduce the MTTR (Mean Time to Repair).
- Input power factor > 0.99 and input THDi < 3% save on installation cost and diminish power contamination.
- Output power factor=1.
- Efficiency > 96.5% saves on operation cost.
- Automatic input frequency detection enables operation at 40Hz to 70Hz.



- Automatic restart:
  1. After a low battery shutdown, the UPS inverter will restart in On-Line mode automatically right after the AC input resumes.
  2. The UPS returns automatically to On-Line mode from Bypass mode after an overload condition is cleared.
- Supports ECO mode.
- Both auxiliary power and control circuit adopt redundancy design, which doubly enhances UPS reliability.
- Allows maintenance of the power modules and system components from the top and front of the unit.
- Generator compatible.
- Surge protection and EMI filter functions.
- Remote emergency power off.
- Single input and dual input functions.
- Supports external switch/ breaker status detection.
- Wide AC input voltage range (176/ 305 Vac ~ 276/ 477 Vac (full load); 132/ 229 Vac ~ 176/ 305 Vac (with derating to 70~100% load)) reduces frequent transfer from On-Line mode to Battery mode to save battery consumption and prolong battery life.
- Battery start-up function even when there is no AC input.
- AC start-up function even when the UPS is not connected to the batteries.



**WARNING:**

Please note that when the UPS is not connected to the batteries, it will not protect your equipment if the utility power is lost.

- Connects up to four external battery cabinets at maximum to extend the backup time.
- Provides setting options such as battery test (schedulable) and battery replacement alarm.
- Battery temperature monitoring and compensation.
- Optional battery management system (BMS) allows measurement of every battery's voltage.
- Smart battery charger design allows auto-charging or manual charging to shorten the charging time.
- Provides diversified communication interfaces and a SMART slot. Please refer to ***4. Communication Interfaces.***

- Built-in memory stores a maximum of 10,000 event logs.
- Fan speed auto adjustment prolongs fan life and reduces noise when the critical loads decrease. Moreover, fan failure detection circuit is established.
- State-of-the-art microprocessor technology performs self-detection and monitors fan speed in real time, which provides complete and detailed operating status of the UPS.

## 2.4 Exterior & Dimensions

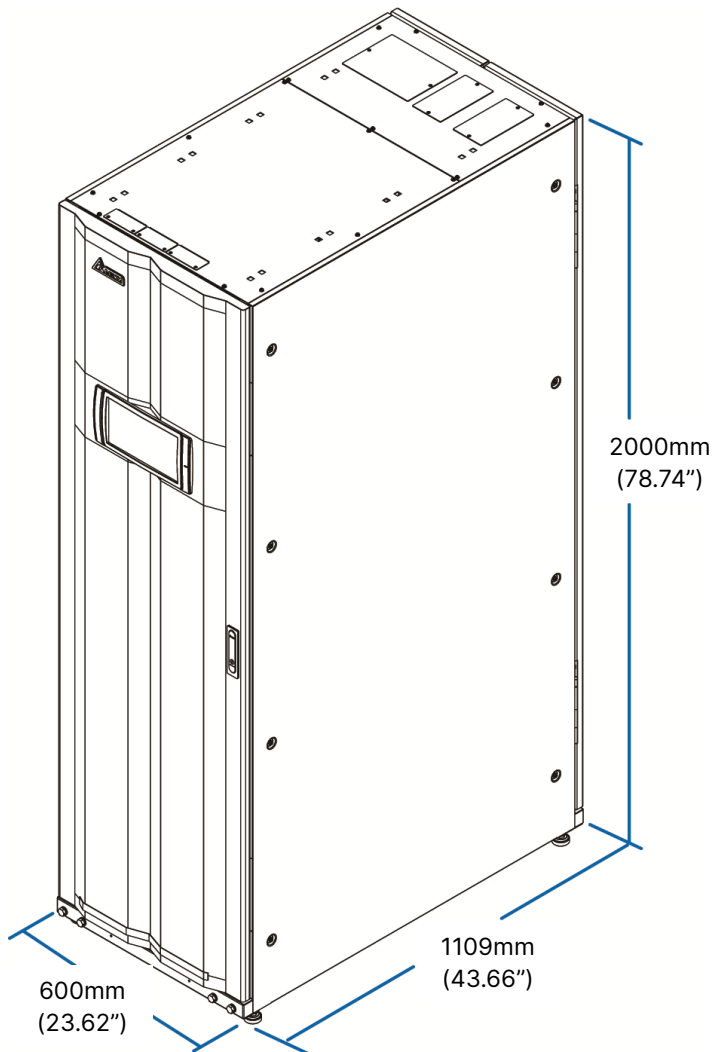


Figure 2-1: Exterior & Dimensions

## 2.5 Front View

On the front of the UPS, there are a 10" color touch panel, a tri-color LED indicator, a door switch, six casters and four leveling feet. Please see *Figure 2-2*.

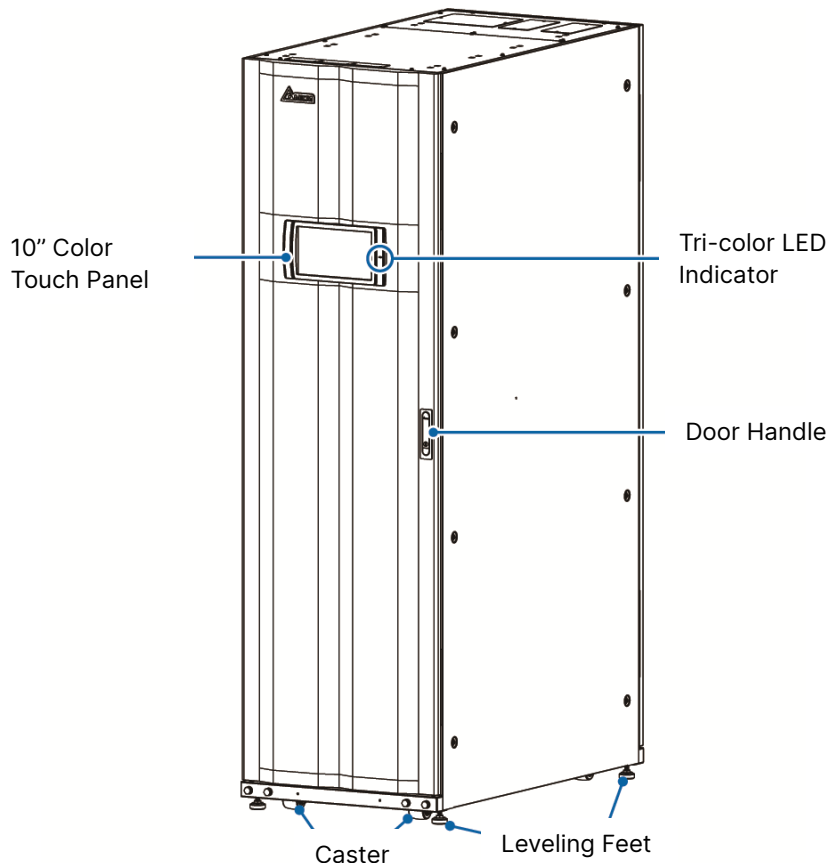


Figure 2-2: Front View

1. For information about the 10" color touch panel, please refer to *7. LCD Display & Settings*.
2. For information about the tri-color LED indicator, please refer to *2.8 Tri-color LED Indicator & Buzzer*.
3. The caster at the bottom of the UPS can be used to move over short distances, and the leveling feet fix and stabilize the UPS on the ground. Please refer to *5.3 UPS Transportation* for relevant information.
4. Please refer to *Figure 2-3* for how to open the UPS front door.

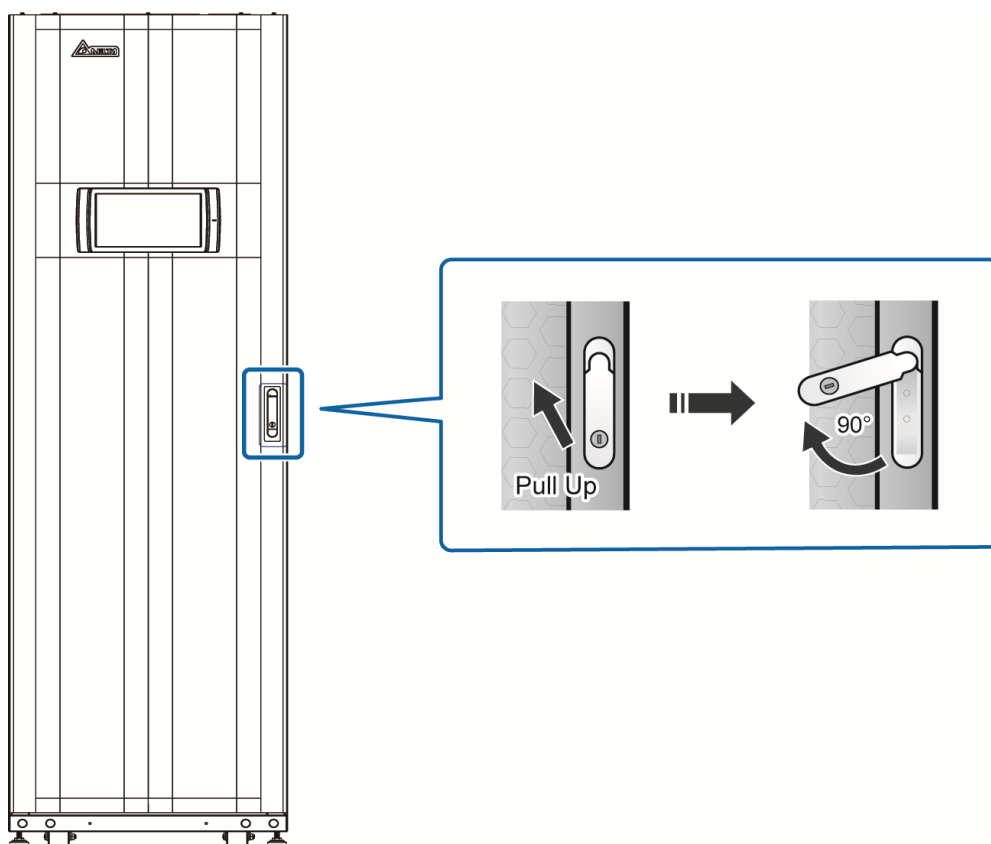


Figure 2-3: How to Open the UPS Front Door

## 2.6 Internal View



### WARNING:

Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel.

After you open the UPS's front door, you will see the internal mechanisms including communication interfaces, five power module slots (among which, only the top three slots have covers), an STS module and four breakers (Input/ Bypass/ Manual Bypass/ Output). Please refer to **Figure 2-4**.


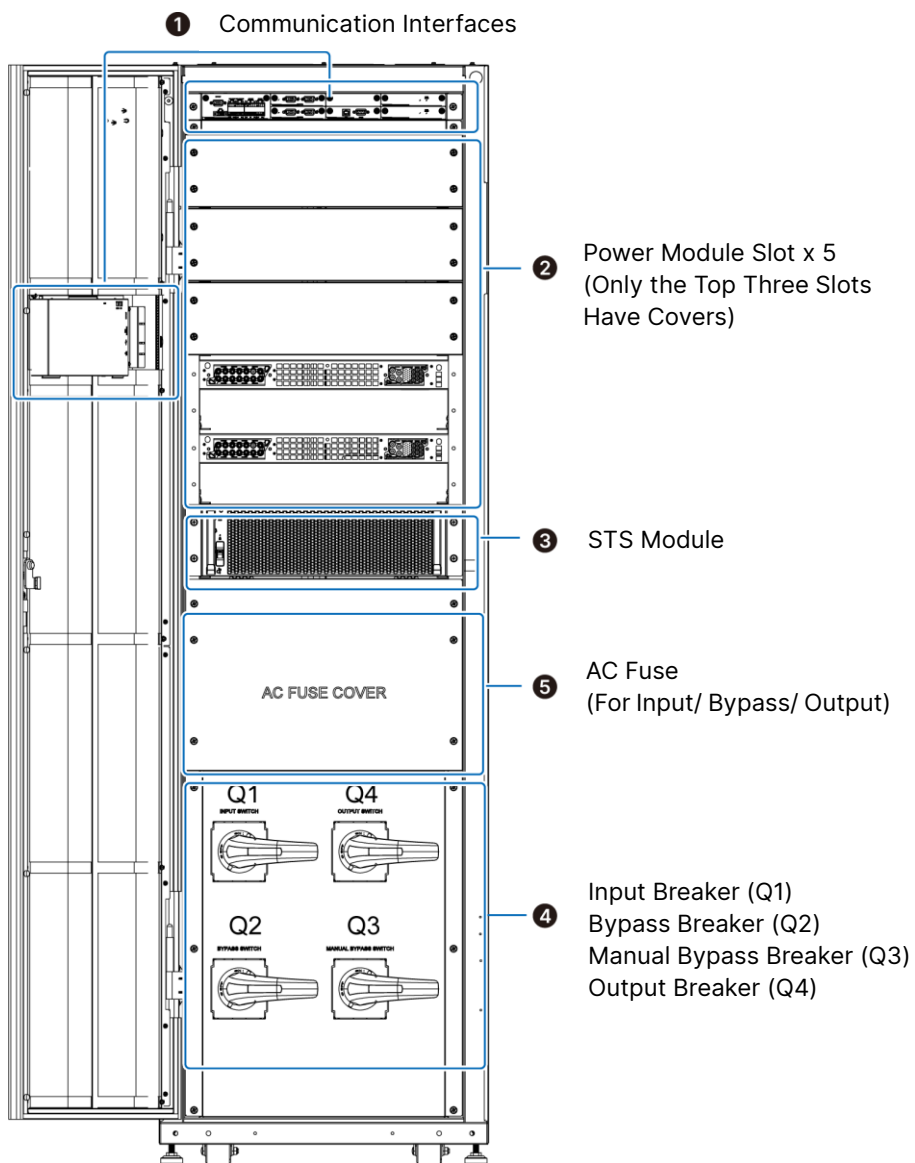


Figure 2-4: Internal View

No.	Description
1	For detailed information about the communication interface, please refer to <b>4. Communication Interfaces</b> .
2	Please follow on-site requirements to install the correct number of power modules (optional). Please refer to <b>5.8 Power Module (Optional)</b> for relevant information.
3	For detailed information about STS module, please refer to <b>5.7 STS Module</b> .
4	<p>The UPS has four breakers, which are Input Switch (Q1), Bypass Switch (Q2), Manual Bypass Switch (Q3) and Output Switch (Q4). Please refer to <b>Figure 2-4</b> for the location of the four breakers.</p> <p>For how to turn on/ off each switch, please refer to below Figure.</p> 

## 2.7 Rear View

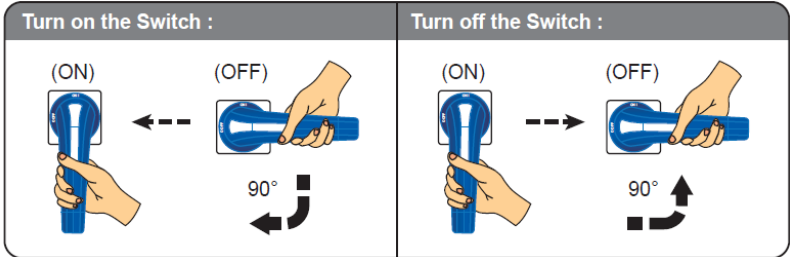

### WARNING:

Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel.

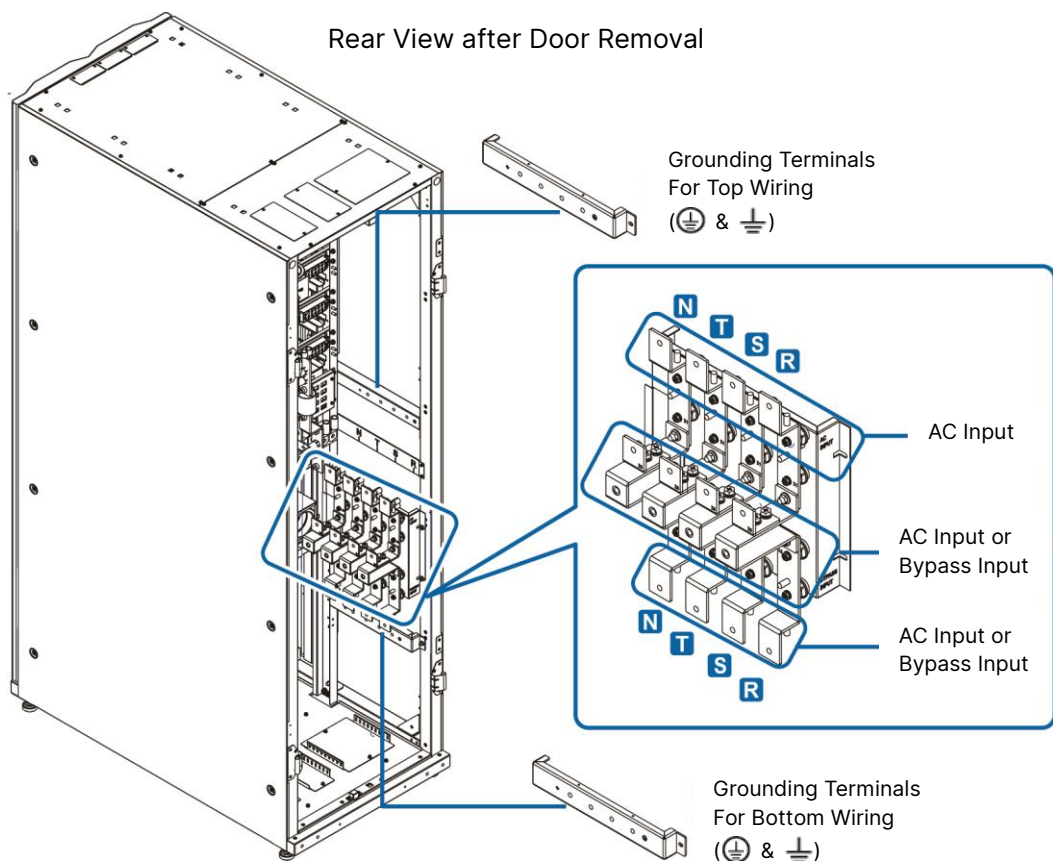


Figure 2-5: Wiring Terminals\_ AC Input & Bypass Input& Grounding

## Rear View after Door Removal

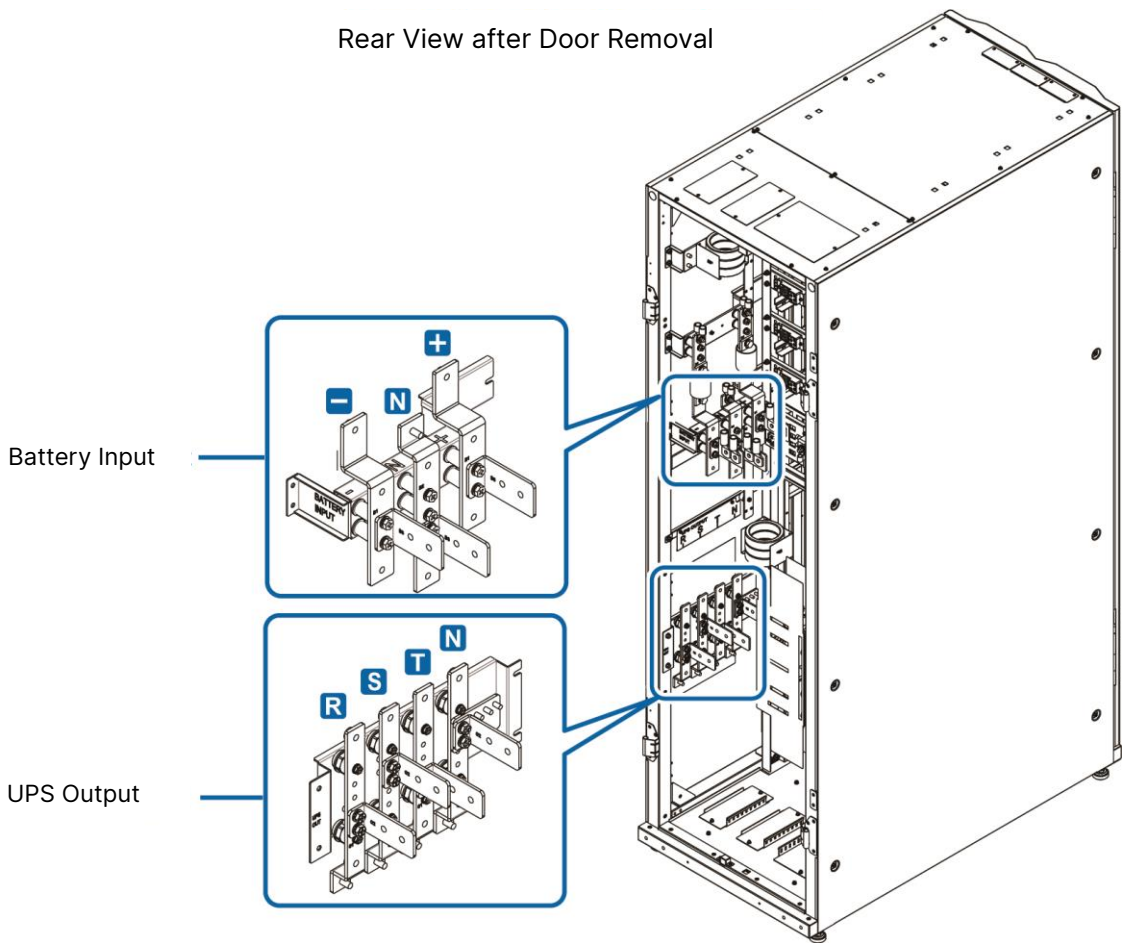


Figure 2-6: Wiring Terminals\_ Battery Input & UPS Output

## 2.8 Tri-color LED Indicator & Buzzer



Figure 2-7: Tri-color LED Indicator Location



### NOTE:

For information about the 10" color touch panel, please refer to *7. LCD Display & Settings*.



Open the UPS's front door and find the buzzer at the rear of the touch panel. Please see *Figure 2-8*.

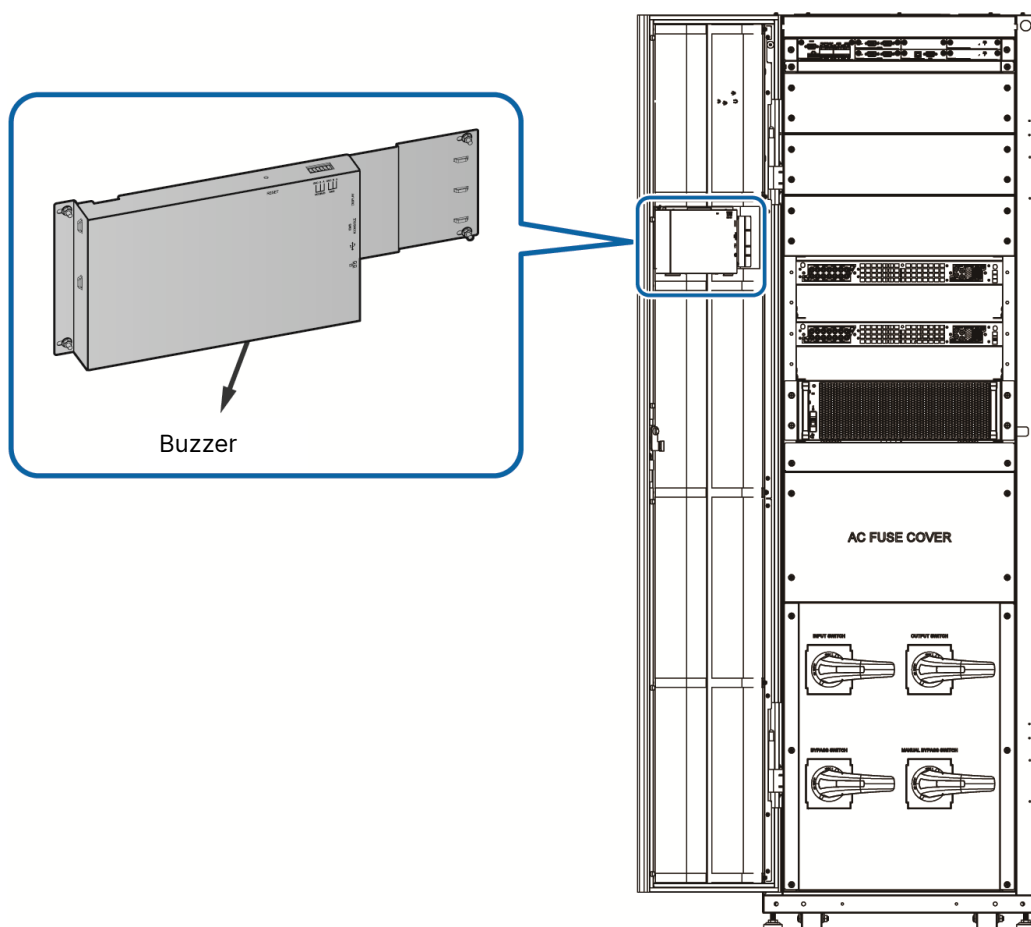


Figure 2-8: Buzzer Location

**Table 2-1: Tri-color LED Indicator, UPS Operation Mode & Buzzer**

Tri-color LED Indicator	Status	Meaning		
Green	ON	<ul style="list-style-type: none"><li>Indicates the UPS is operating in one of the following modes.</li></ul>	UPS Operation Mode	Text on the LCD Screen (upper-right corner)
			On-Line Mode	'On-Line'
			ECO Mode	'ECO'
			Frequency Conversion Mode	'Frequency Conversion'
			Green Mode	'Green'
Yellow	ON	<ul style="list-style-type: none"><li>Indicates the UPS is operating in one of the following modes.</li></ul>	UPS Operation Mode	Text on the LCD Screen (upper-right corner)
			Bypass Mode	'Bypass'
			Battery Mode	'Battery'
			Standby Mode	'Standby'
			Softstart Mode	'Softstart'
			Energy Recycle	'Energy Recycle'
		<ul style="list-style-type: none"><li>Indicates a warning message.</li></ul>	Warning Level	Buzzer Frequency
			Minor	Sounds 0.5 second every 3 seconds.
			Medium	Sounds 0.5 second every second.
Red	ON	<ul style="list-style-type: none"><li>Indicates a warning message.</li></ul>	Warning Level	Buzzer Frequency
			Major	Long beep.

## Chapter 3: Operation Modes

The UPS runs in eight basic operation modes, which are **On-Line** mode, **Battery** mode, **Bypass** mode, **Manual Bypass** mode, **ECO** mode, **Frequency Conversion** mode, **Green** Mode and **Energy Recycle** Mode.



### NOTE:

1. In this user manual, Q1, Q2, Q3, Q4 and Q5 represent the following.

Code	Meaning
Q1	Input Switch.
Q2	Bypass Switch.
Q3	Manual Bypass Switch.
Q4	Output Switch.
Q5	External Battery Cabinet's Breaker.

2. To enable the following operation modes, please refer to **6. UPS Operation** & **7. LCD Display & Settings**.

### 3.1 On-Line Mode

In On-Line mode, the main AC source supplies AC power via the Input Switch (Q1) to the rectifier, and the rectifier converts the AC power to DC power and supplies the DC power to the inverter. In the meantime, the rectifier provides charging power to the batteries. After receiving the DC power, the inverter converts it into clean and stable AC power to the connected critical loads via the Output Switch (Q4). During On-Line mode, the UPS's tri-color LED illuminates green and the text 'On-Line' appears in the upper right corner of the LCD screen.

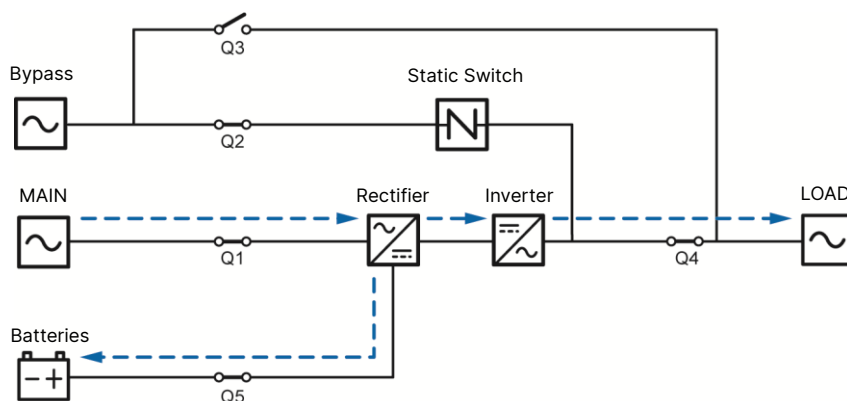


Figure 3-1: On-Line Mode Diagram

## 3.2 Battery Mode

The UPS transfers to Battery mode automatically if the main AC source is abnormal, for example, when unstable voltage or a power outage occurs. In Battery mode, the batteries provide DC power and the UPS converts it into AC power and supplies it to the connected critical loads via the Output Switch (Q4). During the conversion process, output voltage remains the same. During Battery mode, the UPS's tri-color LED illuminates yellow and the text '**Battery**' appears in the upper right corner of the LCD screen.

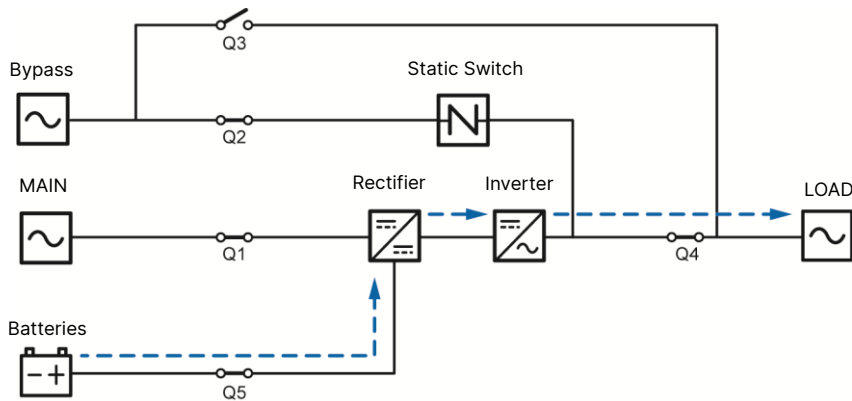


Figure 3-2: Battery Mode Diagram

## 3.3 Bypass Mode

When the inverter encounters abnormal situations such as over temperature, overload, short circuit, abnormal output voltage or low battery, it will automatically shut itself down. If the UPS detects the bypass input is normal, it will automatically switch to Bypass mode to protect the connected critical loads from power interruption. After the above-mentioned abnormalities are eliminated, the UPS will switch back to On-Line mode from Bypass mode. During Bypass mode, the UPS's tri-color LED illuminates yellow and the text '**Bypass**' appears in the upper right corner of the LCD screen.

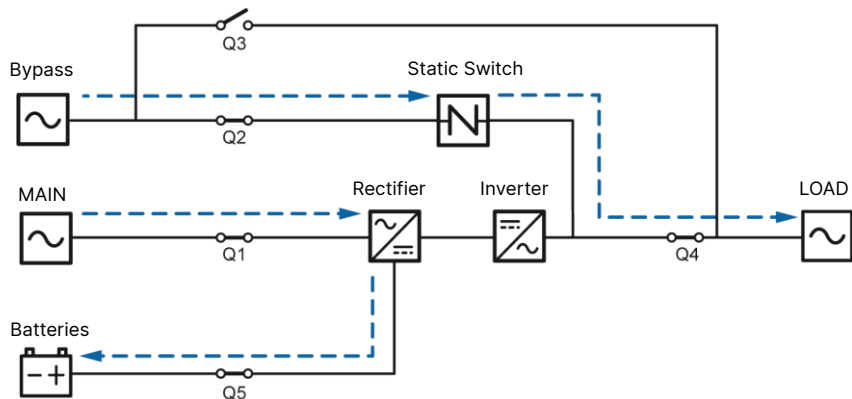


Figure 3-3: Bypass Mode Diagram

### 3.4 Manual Bypass Mode

When the UPS runs in Manual Bypass mode, the current only flows through the maintenance bypass so that the maintenance personnel can maintain the circuit inside the UPS. However, DO NOT touch any external maintenance bypass cabinet's terminal and bus bar which may carry high-voltage electricity. During Manual Bypass mode, the UPS's input power is completely cut off, and the critical loads are not protected. At the moment, the UPS's tri-color LED and LCD screen are both off.

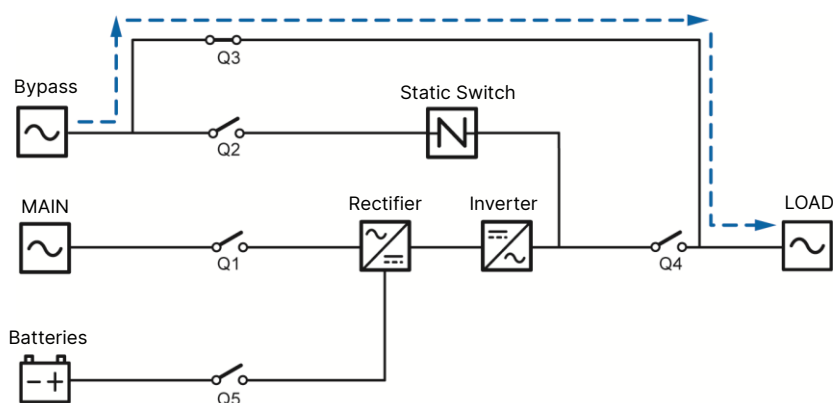


Figure 3-4: Manual Bypass Mode Diagram

### 3.5 ECO Mode

After the UPS is manually set as ECO mode via the LCD, the UPS will work in Bypass mode if bypass input voltage and frequency are within  $\pm 10\%$  of the rated voltage and  $\pm 3$  Hz of the rated frequency respectively. Otherwise, the UPS will run in On-Line mode. During ECO mode, the UPS's tri-color LED illuminates green and the text 'ECO' appears in the upper right corner of the LCD screen.

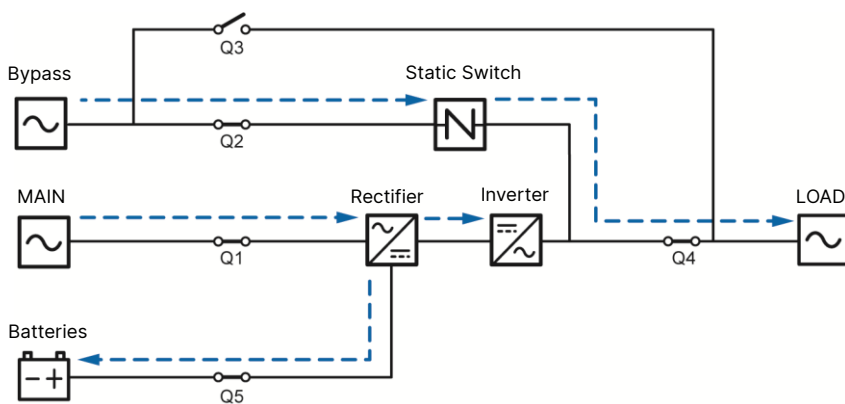


Figure 3-5: ECO Mode Diagram

## 3.6 Frequency Conversion Mode



### NOTE:

1. Frequency Conversion mode is only applicable to single UPS, but not to parallel UPSs.
2. When the UPS runs in Frequency Conversion mode, once the inverter becomes off, there is no bypass power supplying to the loads.

After the UPS is manually set as Frequency Conversion mode via the LCD, the inverter will automatically select 50Hz or 60Hz as the fixed output frequency. After the output frequency is determined, the system will automatically disable the bypass function. Please note that, once the inverter shuts down, there is no bypass output. During Frequency Conversion mode, the UPS's tri-color LED illuminates green and the text 'Frequency Conversion' appears in the upper right corner of the LCD screen.

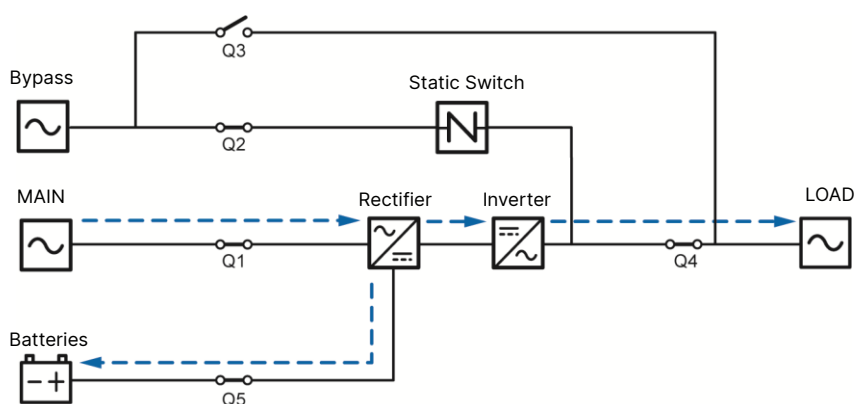


Figure 3-6: Frequency Conversion Mode Diagram

### 3.7 Green Mode

The UPS is manually set as Green mode via the LCD. Green mode is the same as On-Line mode, but the difference is that the system will automatically detect the output status (i.e. total load capacity %) to decide which specific power modules should be fully powered on or idle in order to achieve higher efficiency of the UPS. During Green mode, the UPS's tri-color LED illuminates green and the text '**Green**' appears in the upper right corner of the screen.

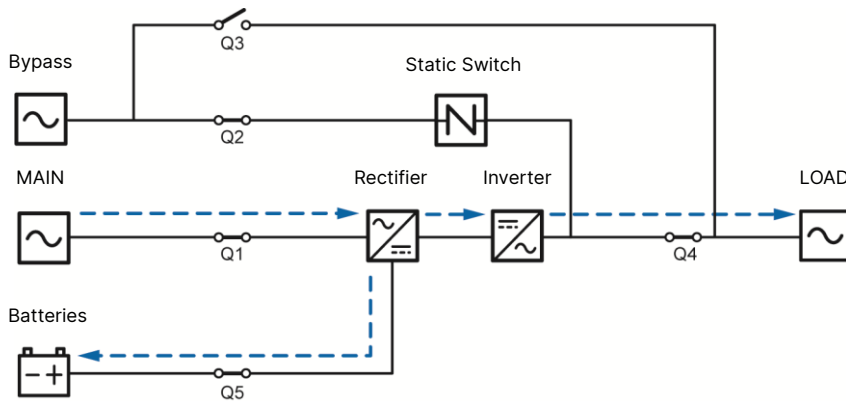


Figure 3-7: Green Mode Diagram





No.	Item	200kVA
5	System Control Card	1 PC
6	Auxiliary Power Card	2 PCS

### 4.1.1 Display Port

Before shipment, the display port has been connected to the 10" touch panel with the designated cable in Delta factory.

### 4.1.2 REPO Dry Contacts

Connect the REPO dry contacts to a user-supplied switch and you can remotely shut down the UPS when an emergency occurs. The REPO dry contacts provide normally open (NO) and normally closed (NC) these two options for use.

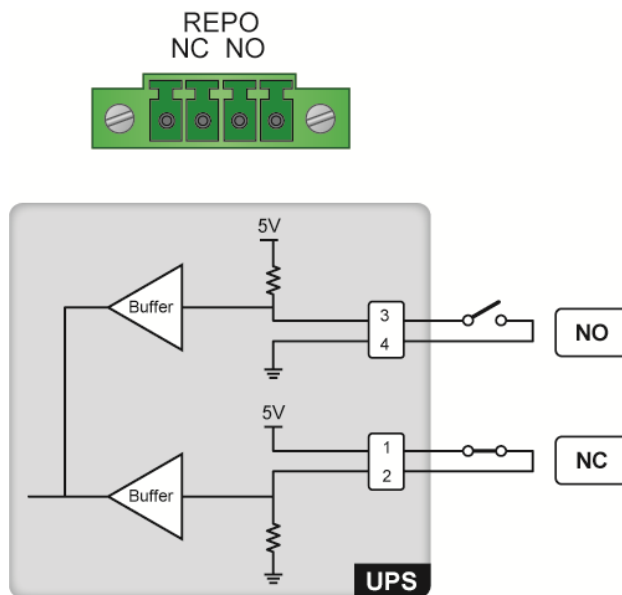


Figure 4-2: REPO Dry Contacts & Schematic



#### NOTE:

To enable the normally closed (NC) function, please take out the dry contact card and remove its Jump CNR3 before you turn on the UPS.

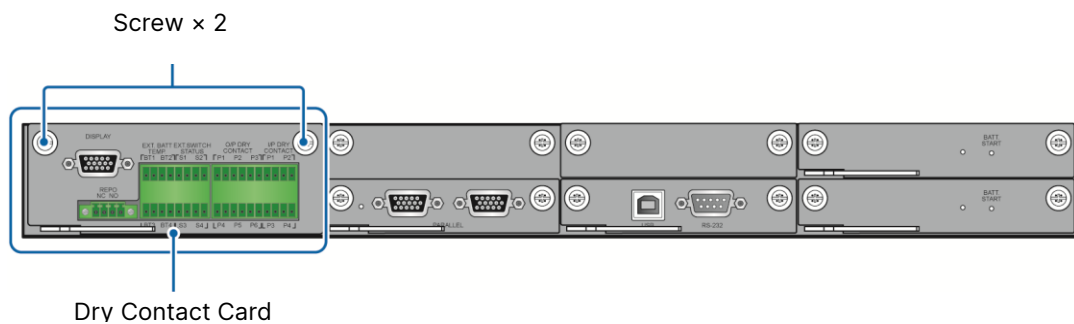


Figure 4-3: Location of the Dry Contact Card

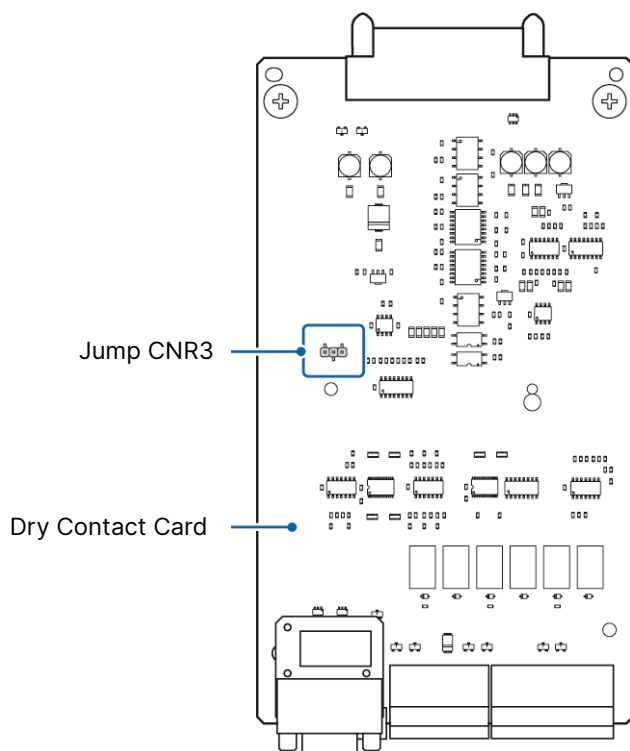


Figure 4-4: Location of the Jump CNR3

### 4.1.3 External Battery Temperature Detection

You can use the external battery temperature detection (BT1, BT2, BT3 and BT4) to detect a maximum of four external battery cabinets' temperature. You need to purchase the battery cabinet temperature sensor cable (optional).

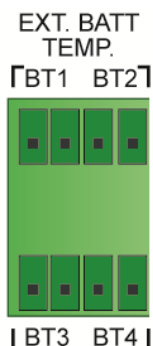


Figure 4-5: External Battery Temperature Detection & Schematic

### 4.1.4 External Switch/ Breaker Status Dry Contacts

There are four sets of external switch/ breaker status dry contacts (S1, S2, S3 and S4), which can be used to respectively detect the status of input, bypass, output and manual bypass switches or breakers.



#### NOTE:

Only authorized Delta engineers or service personnel can perform this function.

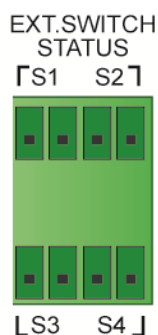


Figure 4-6: External Switch/ Breaker Status Dry Contacts

### 4.1.5 Output Dry Contacts

There are six sets of programmable output dry contacts. Please use the touch panel to set each dry contact as normally open (NO) or normally closed (NC). Each dry contact can be assigned a specific event. Six out of twenty-one events can be assigned according to your applications. Please refer to the table below and **7.6.6 Dry Contact Setting**.



#### NOTE:

Since the output dry contacts belong to the secondary circuit, the voltage of each dry contact's connected device should not exceed 60Vdc/ 42Vac to avoid electric shock or insufficient insulation.

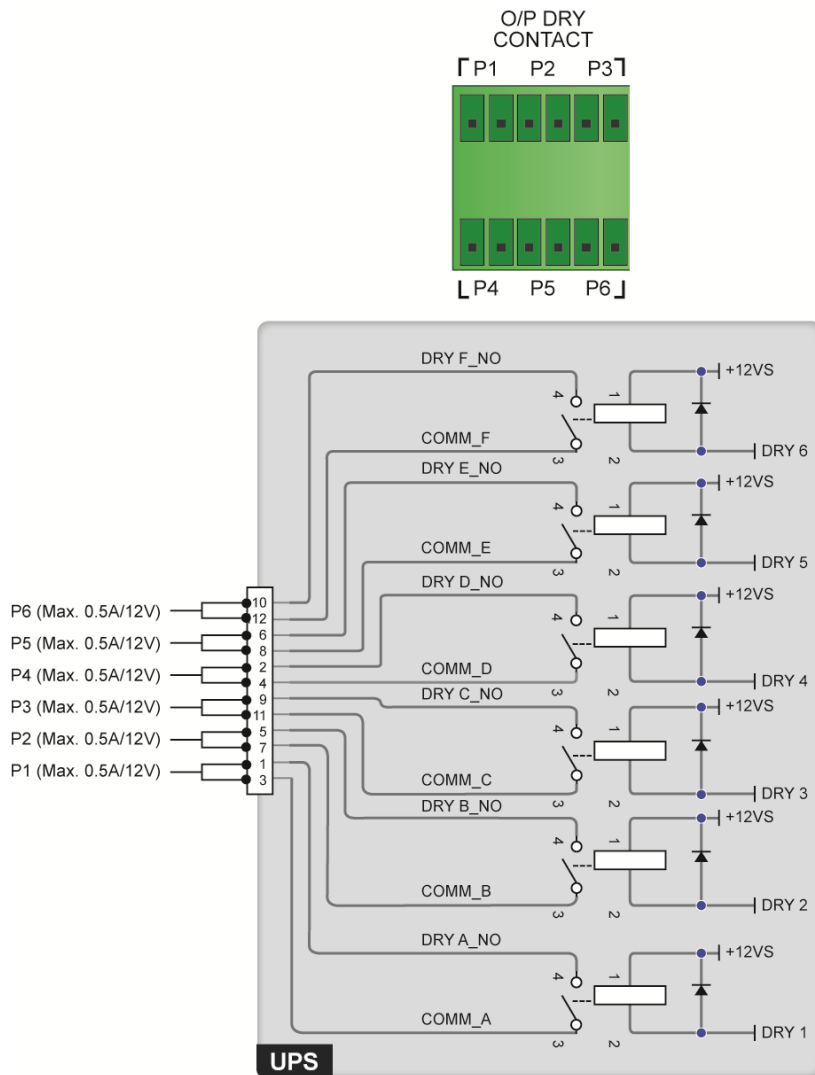


Figure 4-7: Output Dry Contacts & Schematic

No.	Event	Description
1	None	No set-up.
2	Load On Inverter	The UPS works in On-Line mode.
3	Load On Bypass	The UPS works in Bypass mode.
4	Load On Battery	When the main AC source fails, the batteries supply power to the critical loads.
5	Battery Low	When the UPS runs in Battery mode, battery voltage is lower than the setup limit (default: 220 Vdc).
6	Bypass Input Abnormal	The bypass voltage, frequency or phase sequence is abnormal.
7	Battery Test Fail	During the battery test, the battery voltage is out of the setup limit.
8	Internal Comm. Fail	The #n power module's internal communication is abnormal.
9	External Parallel Comm. Fail (For parallel application only)	In parallel mode, parallel communication is abnormal.
10	Output Overload	The UPS is overloaded or the UPS shuts down to let the bypass supply power to the critical loads.
11	EPO Activated	To urgently power off the UPS.
12	Load On Manual Bypass	The Manual Bypass Switch (Q3) is turned on and the UPS transfers to Manual Bypass mode.
13	Battery Over Temperature	The external battery cabinet's temperature is too high.
14	Output Voltage Abnormal	The output voltage is abnormal.
15	Battery Need Replacement	The battery replacement date is due.

No.	Event	Description
16	Bypass Over Temperature	The bypass static switch temperature is too high.
17	Bypass Static Switch Fault	The bypass static switch has an open/ short issue.
18	UPS Over Temperature	The UPS temperature is too high.
19	Battery Breaker Shunt Trip	The UPS will send a signal to the connected external shunt trip device to cut off the battery power.
20	Backfeed Protection	When the UPS's bypass SCR has a short-circuit issue, the UPS will send a signal to the connected external shunt trip device to cut off the backfeed voltage.
21	General Alarm	When any UPS alarm occurs, the UPS will send a signal.

## 4.1.6 Input Dry Contacts

There are four sets of programmable input dry contacts. The input dry contacts allow the UPS to receive external signals from peripheral devices and let the UPS response accordingly. Please use the touch panel to set each dry contact as normally open (NO) or normally closed (NC). Each input dry contact can be assigned a specific event. For information about the eleven events, please refer to the table below. To learn how to set up, please contact your local dealer and refer **7.6.6 Dry Contact Setting**.

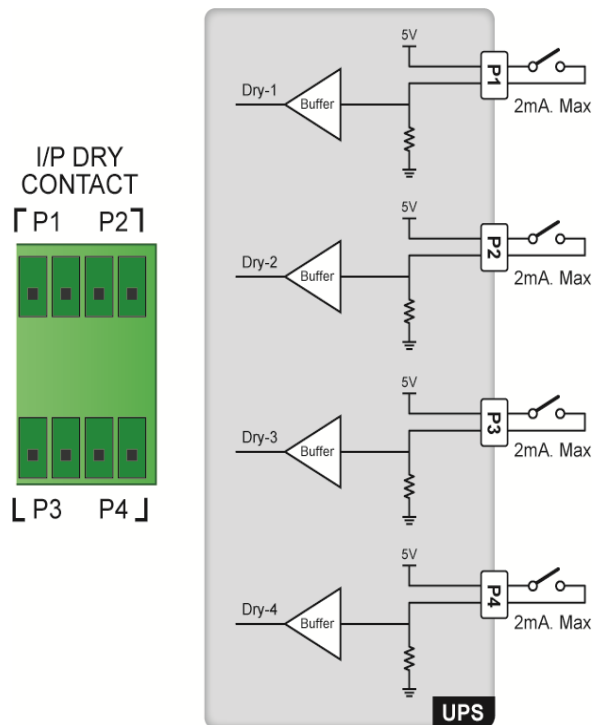


Figure 4-8: Input Dry Contacts & Schematic

No.	Event	Description
1	None	No set-up.
2	Generator Status	Generator status detection.
3	Battery Ground Fail	Battery leakage detection.
4	External Battery Breaker Detection	Status detection of the external battery cabinet's breaker or switch.
5	Charger Off (Positive)* <sup>1</sup>	Turn off the charger (positive).
6	Charger Off (Negative)* <sup>1</sup>	Turn off the charger (negative).
7	Battery Abnormal Shutdown	Battery Abnormal Shutdown
8	Input Transformer OTW	Input Transformer over temperature warning
9	Output Transformer OTW	Output Transformer over temperature warning
10	Battery Fuse Open	Battery Fuse status detection
11	Charge Off* <sup>1</sup>	Turn off the charger (total)




#### NOTE:

\*<sup>1</sup> If you use non-Delta lithium-ion batteries, you must set up **Charger Off (Positive)**, **Charger Off (Negative)** and **Charger Off** these three items. Please refer to **7.6.6 Dry Contact Setting**. For settings relevant to the non-Delta lithium-ion batteries, please refer to **7.6.4 Battery & Charging Setting**. For more information, please contact Delta customer service.




## 4.1.7 Parallel Communication Cards

The UPS has one parallel communication card, and the card includes two parallel ports and one LED indicator. See **Figure 4-9** for relevant location. If the card works normally, its LED indicator will illuminate green; if not, the LED indicator will illuminate red. During initialization process, the card's LED indicator flashes yellow.

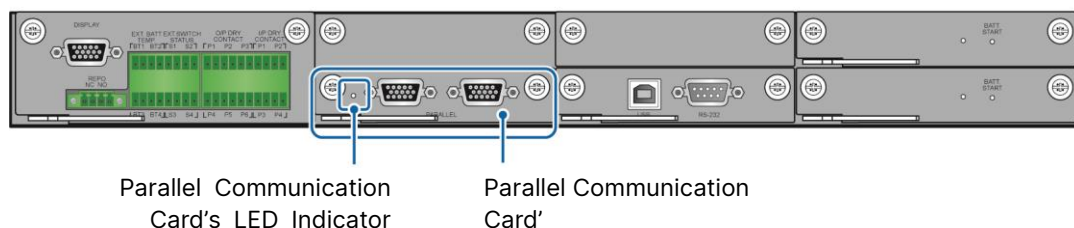


**Figure 4-9: Location of the Parallel Communication Card**

You can purchase the optional parallel communication card and install it into the parallel communication card slot. For the slot location, please refer to **Figure 4-10**.

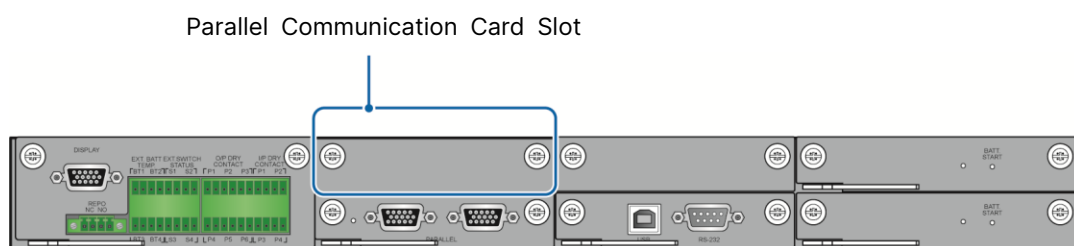

**Figure 4-10: Location of Parallel Communication Card Slot**

When there are two parallel communication cards installed in the UPS, the lower one is named as master parallel communication card (the card is a standard accessory) and upper one is called the backup communication card (the card is an optional accessory). Please refer to **Figure 4-11** for the two cards and their LED indicators' location.

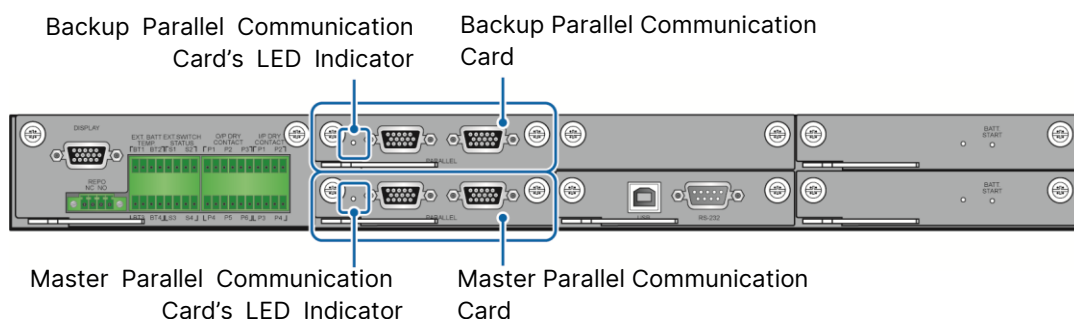

**Figure 4-11: Location of Master and Backup Parallel Communication Cards**

If both cards work normally, the master parallel communication card's LED indicator will illuminate green and the backup parallel communication card's LED indicator will illuminate yellow.

If one card works normally and the other works abnormally, the normal card's LED indicator will illuminate green and the abnormal card's LED indicator will illuminate red.

During the initialization process, both cards' LED indicators flash yellow.

## 4.1.8 Parallel Ports

The parallel ports are used to connect parallel UPSs to increase system capacity and redundancy. Up to eight UPS units with the same capacity, voltage, frequency and version can be paralleled. Please daisy-chain the parallel UPSs with the provided parallel cables only.

Please refer to **5.5.4 Parallel Units Wiring** to route the parallel cables.



### WARNING:

One parallel cable is provided in each UPS's accessory package. Using non-Delta parallel cables to parallel the UPSs may cause failure, malfunctions and accidents.

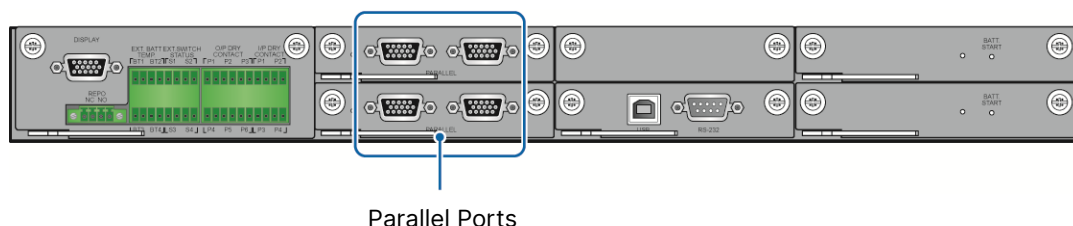


Figure 4-12: Location of the Parallel Ports

## 4.1.9 SMART Slot

1. You can install the optional relay I/O card (for dry contact expansion) into the SMART slot. For installation and application, please contact Delta customer service.
2. If you use the Delta lithium-ion batteries, you must install the optional multifunctional communication card (MFC) into the SMART slot to monitor the battery status. For settings and information relevant to the Delta lithium-ion batteries, please refer to **7.6.4 Battery & Charging Setting** and **8. Optional Accessories**. For more information, please contact Delta customer service.

Please use the Ethernet cable\*1 to connect the MFC's parallel ports. The Ethernet cable routing is the same as the UPS parallel cable routing (see **Figure 5-14**).

**NOTE:**

\*1 One Ethernet cable is provided in each package of the optional multifunctional communication card (MFC).

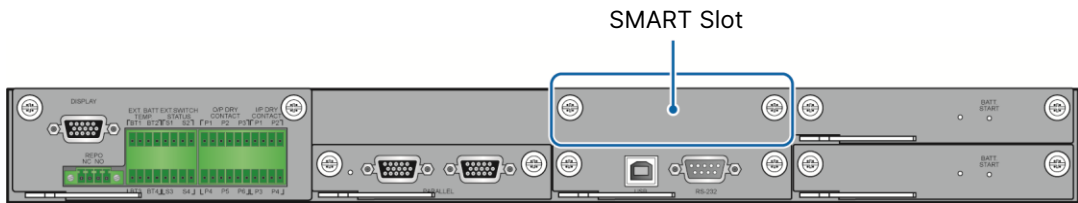



Figure 4-13: Location of the SMART Slot

### 4.1.10 USB Port & RS-232 Port

Only service personnel can use an RS-232 cable (provided) or a USB cable (provided) to connect a computer to the UPS's RS-232 port or USB port to (1) upgrade the firmware of the UPS, power modules, system control card, parallel communication cards and optional multifunctional communication card (MFC) and (2) download event logs.

**NOTE:**

The USB port & RS-232 port are available for authorized service personnel.

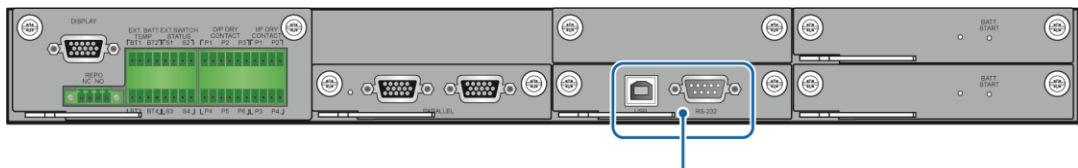

USB Port & RS-232 Port

Figure 4-14: Location of the USB Port & RS-232 Port

### 4.1.11 Auxiliary Power Cards

The UPS has two hot-swappable auxiliary power cards. Each card has one LED indicator. If the auxiliary power card works normally, its LED indicator will illuminate green. If the auxiliary power card is off or abnormal, its LED indicator will be off.

**WARNING:**

When replacing, remove only one auxiliary power card at a time to avoid power interruption.



Figure 4-15: Location of the Auxiliary Power Cards

#### 4.1.12 Battery Start Buttons

For the battery start buttons' operation information, please refer to **6.2.2 Battery Mode Start-up Procedures**.

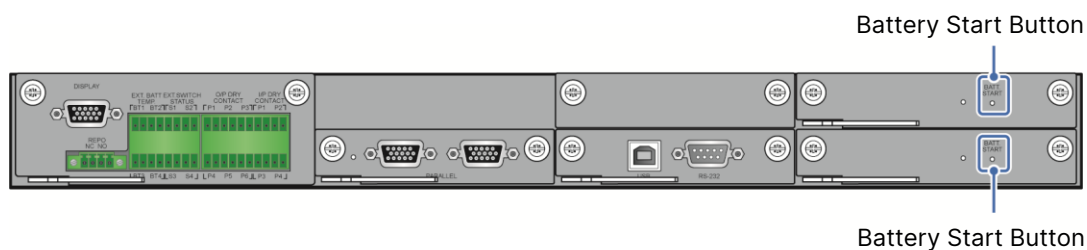


Figure 4-16: Location of the Battery Start Buttons

## 4.2 Communication Interfaces (II): at the Rear of the Touch Panel

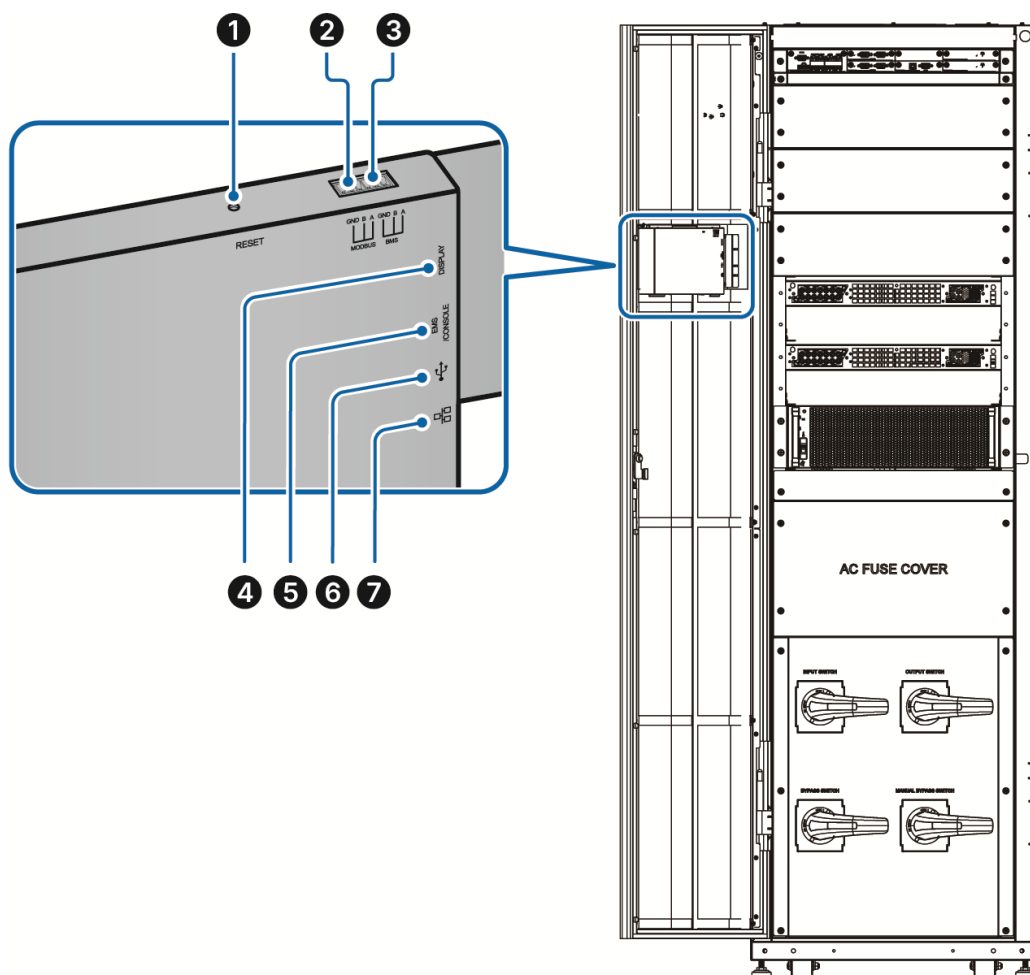




Figure 4-17: Communication Interfaces (II)

No.	Item	Description
①	RESET	Press the <b>RESET</b> button to restart the LCD.
②	MODBUS (RS-485 Port)	<ol style="list-style-type: none"> <li>1. Provides Modbus RTU communication service.</li> <li>2. Connects to a user-supplied monitoring system.</li> </ol>

No.	Item	Description
③	BMS	Connects to the Delta battery management system (optional). The BMS function is only applicable to lead-acid batteries.
④	DISPLAY	Before shipment, the DISPLAY port has been connected.
⑤	EMS/ CONSOLE	Connects to a user-supplied environmental monitoring system or Delta EnviroProbe 1000 (optional).
⑥	 (USB Port × 2)	There are two USB ports. Connect a user-supplied USB flash drive to any of the USB ports to (1) upgrade the UPS and LCD's firmware and (2) download event logs.
⑦	 (Network Port)	<ol style="list-style-type: none"> <li>1. Provides network communication service (including SNMP, Modbus TCP, HTTP, HTTPS, etc.).</li> <li>2. Connects to a user-supplied monitoring system.</li> </ol>

## Chapter 5: Installation and Wiring

### 5.1 Before Installation and Wiring

- Please read this user manual thoroughly before installation, wiring and operation. Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel. If you use a forklift or other equipment to move the UPS, please make sure its load bearing is sufficient. Please refer to **Table 5-1**.
- The UPS must be connected to at least one external battery cabinet (user-supplied, handled and configured by Delta service personnel). Please refer to **5.6 External Battery Cabinet Connection Warnings** for relevant information.

### 5.2 Installation Environment

- Install the UPS indoors. Do not place it outdoors.
- Make sure that transportation routes (e.g. corridors, door gates, elevators, etc.) and installation area can accommodate and bear the weight of the UPS, external battery cabinet(s) and handling equipment. Please refer to **Table 5-1** for the floor weight loading information.

**Table 5-1: UPS Floor Weight Loading Table**

DPH Series UPS					
UPS Capacity	50kVA/ 50kW	100kVA/ 100kW	150kVA/ 150kW	200kVA/ 200kW	
Power Module Q'ty	1	2	3	4	5 (4+1 (redundant))
UPS Net Weight	312 kg 687.8 lb	348 kg 767.2 lb	384 kg 846.6 lb	420 kg 925.9 lb	456 kg 1005.3 lb
Floor Weight Loading	468.9 kg/m <sup>2</sup> 96 lb/ft <sup>2</sup>	523 kg/m <sup>2</sup> 107.1 lb/ft <sup>2</sup>	577.1 kg/m <sup>2</sup> 118.2 lb/ft <sup>2</sup>	631.2 kg/m <sup>2</sup> 129.3 lb/ft <sup>2</sup>	685.3 kg/ m <sup>2</sup> 140.4 lb/ ft <sup>2</sup>

- The UPS allows cable entry from the top or bottom. Please leave adequate space on the top or at the bottom of the UPS to allow cable entry.
- Ensure that the installation area is spacious enough for ventilation, wiring and maintenance. Install the external battery cabinet next to the UPS. For the UPS clearance, we suggest that you:
  1. Keep a distance of 1500 mm (59.06") from the front of the UPS for maintenance and ventilation.
  2. Keep a distance of at least 1000 mm (39.4") from the rear of the UPS for ventilation.
  3. Keep a distance of 1000 mm (39.4") from the top of the UPS for maintenance and wiring.



**NOTE:**

Dust filters have been installed on the inner side of the UPS's front doors before shipment.

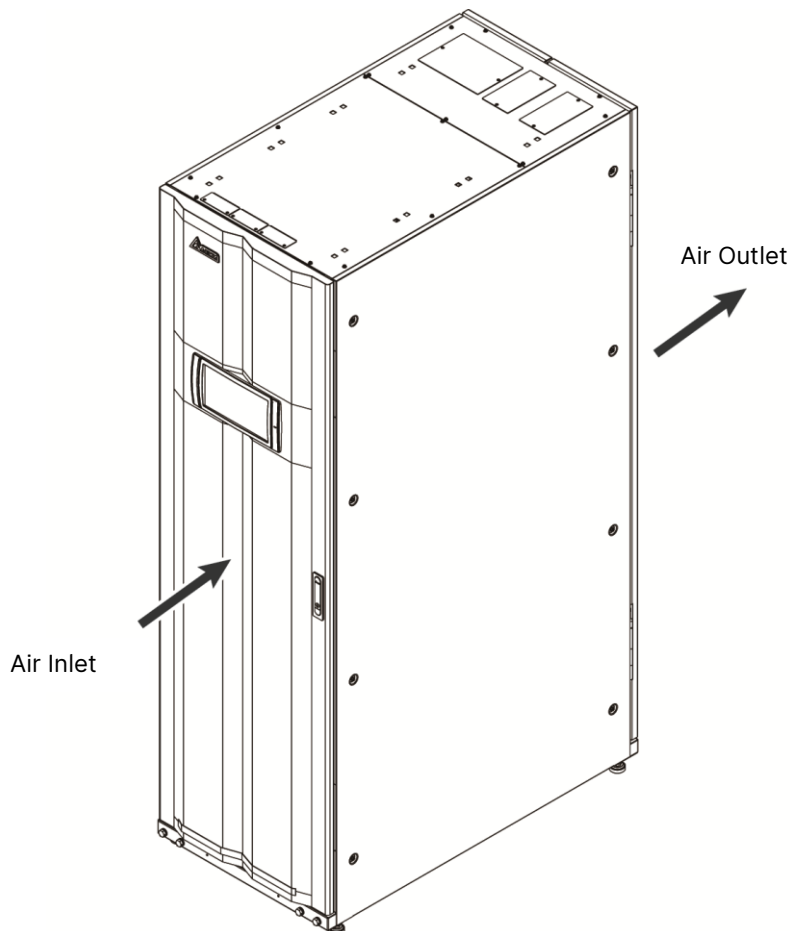


Figure 5-1: Air Inlet & Outlet Direction



**WARNING:**

1. Do not use air conditioners or similar equipment to blow into the rear of the UPS.
  2. Do not hinder ventilation of the UPS.
- Keep the installation area clean. Please note that wiring routes must be hermetic to prevent possible damage from rodents.
  - Keep the installation area's temperature around 25°C (77°F) and humidity within 95%. The highest operating altitude is 1000 meters (3280 ft) above sea level.
  - For safety concerns, we suggest that you:
    1. Equip surroundings of the installation area with CO<sub>2</sub> or dry powder fire extinguishers.
    2. Install the UPS in an environment where fireproof materials are used to construct the walls, floors and ceilings.
    3. Install the UPS on a floor that is made of noncombustible materials.
  - Do not allow unauthorized personnel to enter the installation area and assign specified personnel to keep the UPS keys.

### 5.3 UPS Transportation

- At the bottom of the UPS, there are four casters to help you to move the UPS to a designated area. Before moving the UPS, please turn the four leveling feet counterclockwise to raise them off the ground. This protects the leveling feet from damage while moving. Please arrange sufficient manpower (at least six people) and equipment (e.g. forklift) to carefully move the UPS from its pallet to ground. Please pay attention to movement of the casters to avoid accidents.

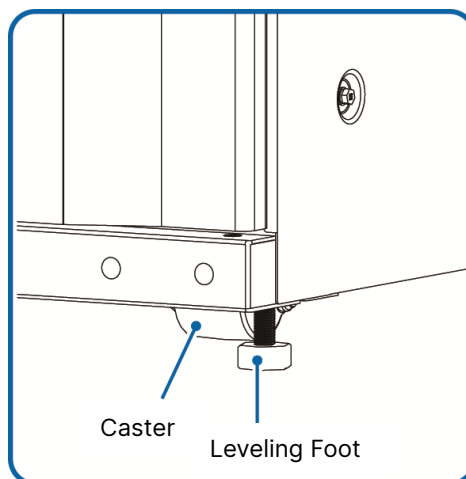


Figure 5-2: UPS Leveling Foot and Caster

**WARNING:**

The UPS is fixed on the pallet with four balance brackets and four M12 screws. When taking apart the two balance brackets from the UPS, pay attention to the movement of the casters to avoid accidents.

- The casters are designed to move on level ground. Do not move the UPS on an uneven surface. This might cause damage to the casters or trip the UPS which could damage the unit.
- After the UPS has been removed from the pallet to the ground, we suggest that at least three people move the UPS to the installation area. With their two hands, one person holds a lateral side of the UPS, another person holds the other lateral side of the UPS, and the other person pushed the UPS, either from the front side or from the backside, to move the unit to the installation area. This is the best way to avoid tipping the UPS.
- If you need to move the UPS over a long distance, please use appropriate equipment (e.g. forklift). Do not use the UPS casters to move the unit over a long distance.

## 5.4 UPS Installation

**NOTE:**

Please use appropriate equipment (e.g. forklift) to move the UPS.

Please follow the steps below:

### Step 1

Before installing the UPS in a designated installation area, please double-check whether the area's floor weight loading is sufficient to bear the UPS, external battery cabinet(s) and handling equipment (e.g. forklift) to avoid accidents.

### Step 2


After the UPS is moved to the designated installation area, use a #17 wrench to stabilize the UPS four leveling feet on the floor. Please note that the UPS must stand on the floor stably and levelly without any tipping.

### Step 3


Use eight M10 screws (four for the front, four for the rear) ❶ and four expansion M12 screws, washer plains and washer springs (two for the front, two for the rear) ❷ to fix the UPS on the ground with four balance brackets. Please refer to *Figure 5-3~ Figure 5-4*. The eight M10 screws and the four balance brackets are those been taken apart from the UPS earlier while moving the UPS from the pallet to the ground (see *5.3 UPS Transportation*). As for the four expansion nuts, they should be provided by qualified service personnel.

**WARNING:**

You must stabilize the UPS with the four provided balance brackets. Otherwise, the UPS might tip over.

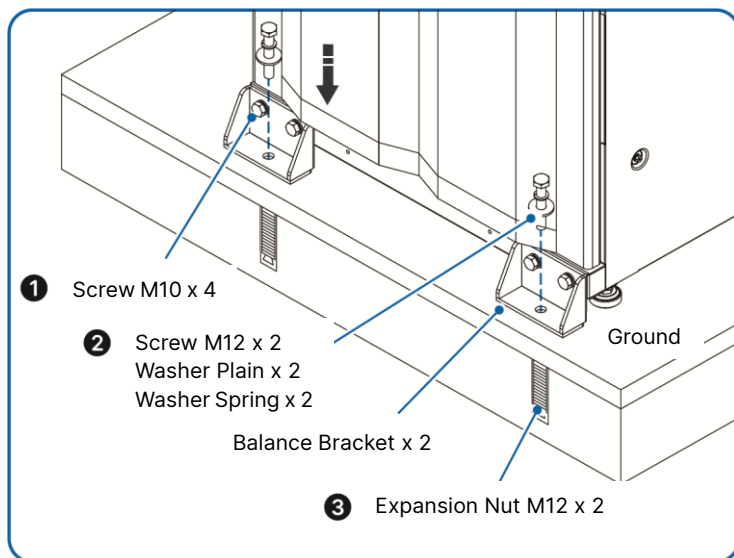

**Figure 5-3: Balance Bracket Installation\_ Front of the UPS**

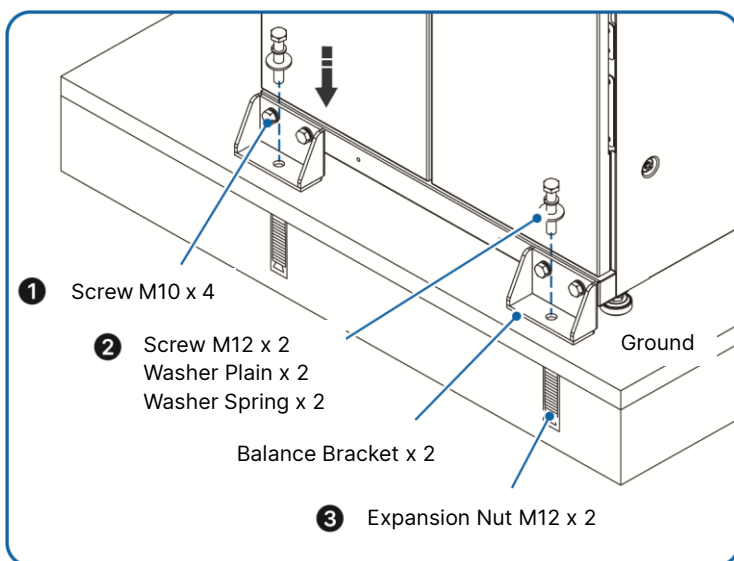

**Figure 5-4: Balance Bracket Installation\_ Rear of the UPS**

**NOTE:**

Please contact Delta service personnel for the expansion nuts. The four balance brackets and the four M12 screws are already provide with the UPS.

#### **Step 4**

Follow the instructions in **5.5 Wiring** to perform UPS wiring. When connecting the external battery cabinet(s), please refer to **5.6 External Battery Cabinet Connection Warnings** to perform external battery cabinet wiring. After wiring, please reinstall the removed panel(s) and then close the UPS door(s). Make sure to seal or cover the gaps between the cables and the cabinet(s) to avoid foreign materials falling into the UPS.

#### **Step 5**

Follow **5.8 Power Module (Optional)** to install the power modules.

#### **Step 6**

After finishing the procedures above, reinstall the removed covers or panels (if necessary) and close the UPS's front doors.

### **5.5 Wiring**

#### **5.5.1 Pre-wiring Warnings**



##### **NOTE:**

1. Before wiring, please ensure that you have followed **5.4 UPS Installation** to fix the UPS in the designated installation area firmly.
  2. Before wiring, please read **5.5 Wiring** thoroughly.
  3. Only authorized Delta engineers or service personnel can perform installation, wiring, panel & cover removal, maintenance and operation. If you want to execute any action mentioned above by yourself, the action must be under the supervision of authorized Delta engineers or service personnel.
  4. During wiring procedures, please protect the UPS from foreign materials falling into the cabinets.
- Before wiring or making any electrical connection, make sure that the power supplied to the input and output of the UPS is completely cut off.
  - Check if the size, diameter, phase and polarity are correct for each cable connected to the UPS and external battery cabinet(s). Please refer to **Table 5-2**.

**NOTE:**

The recommended cable size is in accordance with *IEC 60364-5-52* (the minimum requirements in *Table B.52.2*) and must meet the following requirements:

- 70 °C copper wire
- Ambient temperature is 30 °C
- If the ambient temperature exceeds 30 °C, please refer to the IEC standard to select a higher specification wire.

**Table 5-2** is based on (1) default input/ output voltage: 220V, (2) default battery Q'ty: 40 PCS and (3) default charge current for each power module is 5A, default charge current for 200KW is 20A. The UPS has 5 power module slots for redundancy. For other conditions different from **Table 5-2**, please contact Delta service personnel for relevant values.

**Table 5-2: Specifications of Input/ Output/ Battery Cables, Switches & Breakers**

DPH Series						
UPS Capacity			50kVA/ 50kW	100kVA/ 100kW	150kVA/ 150kW	200kVA/ 200kW
Power Module Q'ty			1	2	3	4
Input	Rated current at 220V with battery charging		93A	186A	279A	372A
	Recomm ended cable size	(L1/ L2/ L3/N)	25 mm <sup>2</sup> ×1 PC (2 AWG ×1 PC)	70 mm <sup>2</sup> ×1 PC (3/0 AWG ×1 PC)	50 mm <sup>2</sup> ×2 PCS (1/0 AWG ×2 PCS)	70 mm <sup>2</sup> ×2 PCS (3/0AWG ×2 PCS)
	Maximum cable size	(L1/ L2/ L3/N)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> × 1 PC (500 kcmil × 1 PC)
	Maximum cable lug width		30 mm (1.18")	30 mm (1.18")	30 mm (1.18")	30 mm (1.18")
	Screw size		M10	M10	M10	M10
	Terminal type*1		TLD10-70			

DPH Series						
UPS Capacity			50kVA/ 50kW	100kVA/ 100kW	150kVA/ 150kW	200kVA/ 200kW
<b>Bypass &amp; Output</b>	Rated current at 220V		77A	153A	230A	306A
	Recomm ended cable size	(L1/ L2/ L3/N)	25 mm <sup>2</sup> ×1 PC (2 AWG ×1 PC)	70 mm <sup>2</sup> ×1 PC (3/0 AWG ×1 PC)	35 mm <sup>2</sup> ×2 PCS (1 AWG ×1 PC)	70 mm <sup>2</sup> ×2 PCS (3/0 AWG ×2 PCS)
	Maximu m cable size	(L1/ L2/ L3/N)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil ×1 PC)
	Maximum cable lug width		30 mm (1.18")	30 mm (1.18")	30 mm (1.18")	30 mm (1.18")
	Screw size		M10	M10	M10	M10
	Terminal type*1		TLD10-70			
<b>Battery</b>	Nominal discharge current (condition: 2V per cell)		110A	220A	329A	439A
	Recomm ended cable size	(+/-/ N)	35 mm <sup>2</sup> ×1 PC (1 AWG×1 PC)	35 mm <sup>2</sup> ×2 PCS (1 AWG ×2 PCS)	70 mm <sup>2</sup> ×2 PCS (3/0 AWG ×2 PCS)	95 mm <sup>2</sup> ×2 PCS (4/0 ×2 PCS)
	Maximu m cable size	(+/-/ N)	240 mm <sup>2</sup> × 1 PC (500 kcmil×1 PC)	240 mm <sup>2</sup> ×1 PC (500 kcmil×1 PC)	240 mm <sup>2</sup> × 1 PC (500 kcmil×1 PC)	240 mm <sup>2</sup> × 1 PC (500 kcmil×1 PC)
	Maximum cable lug width		30 mm (1.18")	30 mm (1.18")	30 mm (1.18")	30 mm (1.18")

DPH Series					
UPS Capacity		50kVA/ 50kW	100kVA/ 100kW	150kVA/ 150kW	200kVA/ 200kW
Battery	Screw size	M10	M10	M10	M10
	Terminal type*1	TLD10-70			
Tightening Torque		M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)	M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)	M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)	M10 = 250 ± 10 kgf- cm (217 ± 8.7 lb-in)
Input Switch (Q1)		100A	200A	300A	400A
Bypass Switch (Q2)		100A	200A	300A	400A
Manual Bypass Switch (Q3)		100A	200A	300A	400A
Output Switch (Q4)		100A	200A	300A	400A
External Battery Cabinet's Breaker (Q5)		150A	300A	400A	500A



**NOTE:**

1. Please follow local regulations to install a suitable conduit and bushing for cable protection.
  2. Please refer to national and local electrical codes for acceptable protective devices and cable sizes.
  3. \*1 The suggested manufacturer is K.S. TERMINALS INC. You may use equivalent terminals provided by other manufacturers.
- If there is a floating voltage between the input power's neutral (N) and the PE (protective earth) (⊕), and you require that the VNG of the UPS should be zero, we suggest that you install an isolation transformer in front of the input side of the UPS, and connect the isolation transformer's secondary neutral (N) to the PE (protective earth) (⊕) at the proximal end of the isolation transformer.
  - The (main/ bypass) AC source must be a three-phase four-wire system (Y configuration) and meets the specifications specified on the UPS rating label. Make sure the connection is in the positive phase sequence.

- Check the battery polarity when connecting the external battery cabinet(s) to the UPS. Do not connect the battery polarity in reverse. For relevant information, please refer to **5.6 External Battery Cabinet Connection Warnings**.
- The UPS's PE terminal (⊕) must be grounded. Please use ring-type terminals when wiring.



**WARNING:**

1. Wrong wiring will cause damage to the UPS and electric shock.
2. For single input, the UPS will not work normally if the main AC power's neutral (N) is not firmly connected or not connected to the UPS's AC Input neutral (N) terminal.

For dual input, the UPS will not work normally if the main AC power's neutral (N) and the bypass power's neutral (N) are not firmly connected or not connected to the UPS's AC Input neutral (N) terminal and Bypass Input neutral (N) terminal respectively. For the AC Input and Bypass Input's neutral (N) terminals.

3. If the UPS is not grounded, the power boards and components might be damaged after the UPS is powered on.

## 5.5.2 Single Input to Dual Input Modification



**NOTE:**

1. Only authorized Delta engineers or service personnel can modify single input to dual input setup.
2. Please keep the removed components properly for future use. If you want to modify the UPS from dual input into single input, please use the removed screws and bus bars to connect the AC Input terminals (L1/ L2/ L3) and Bypass Input terminals (L1/ L2/ L3).

The UPS default setting is single input. If you want to modify it into dual input, please follow the steps below.



### **Step 1**

Open the rear panel shown in *Figure 5-5* and find the AC Input terminals and Bypass Input terminals shown in *Figure 2-5*.

Rear View with Door Open

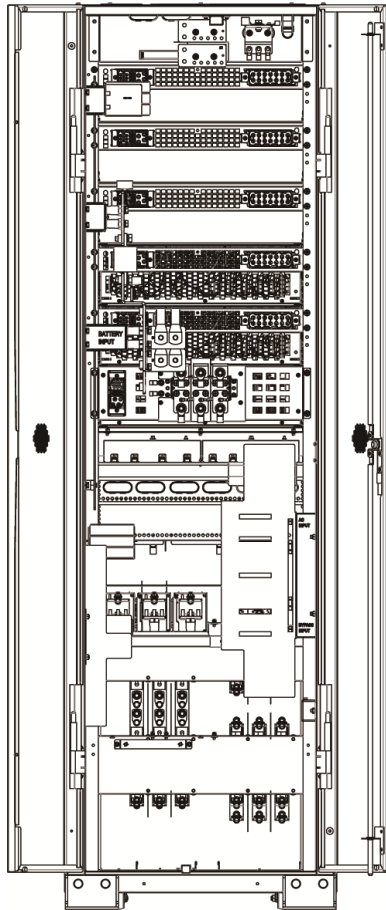


Figure 5-5: Location of the Rear Panel

### **Step 2**

Unscrew the eight nuts and remove the four cooper bars shown in *Figure 5-6*.

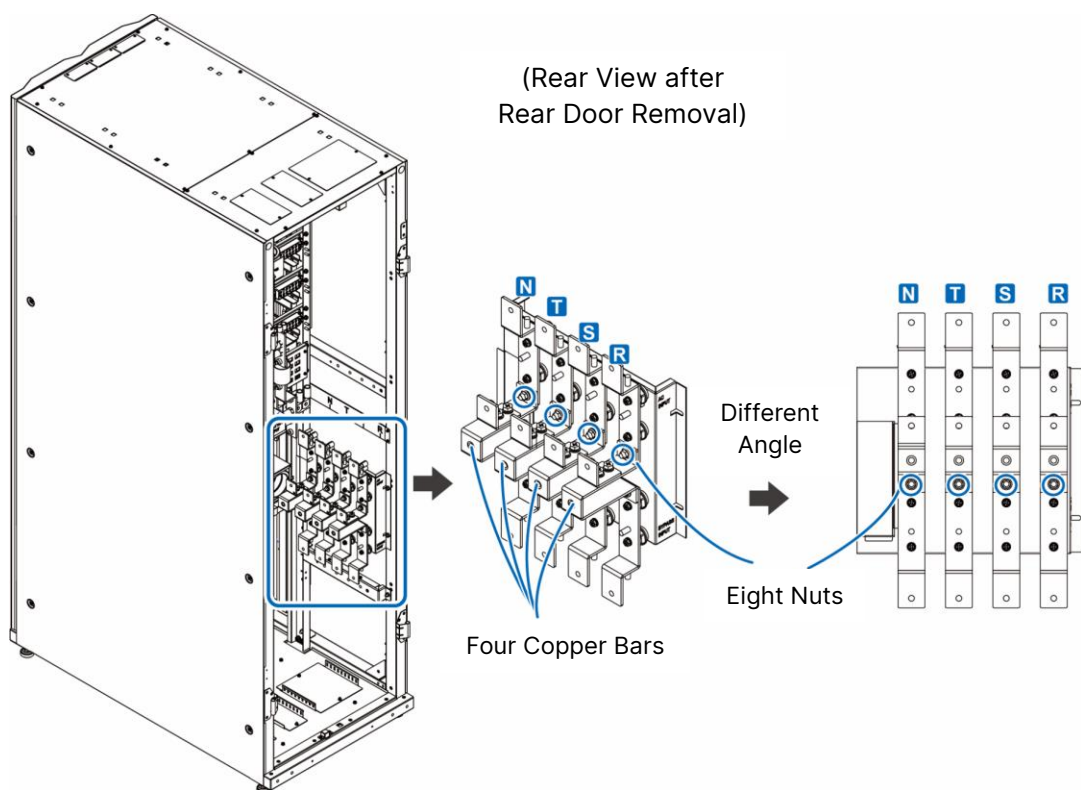


Figure 5-6: Remove the four Cooper Bars

### Step 3

- A. For dual input and top wiring application, follow **Figure 5-7** to install the removed four copper bars in the designated areas. Please secure the eight nuts tightly.


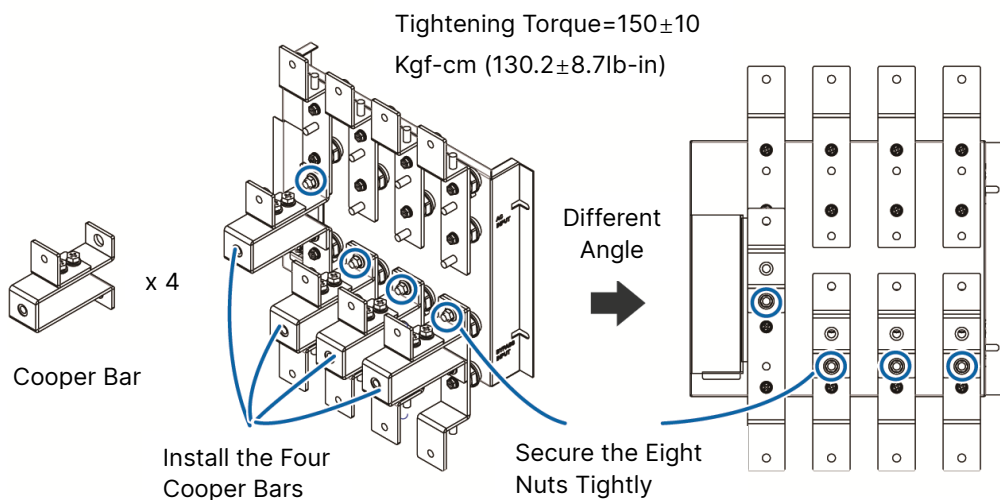


Figure 5-7: Install the Four Copper Bars and Secure the Eight Nuts\_  
for Dual Input & Top Wiring Application

- B. For dual input and bottom wiring application, follow **Figure 5-8** to install the removed four copper bars in the designated areas. Please secure the eight nuts tightly.



**Figure 5-8: Install the Four Copper Bars and Secure the Eight Nuts\_**  
**for Dual Input & Bottom Wiring Application**

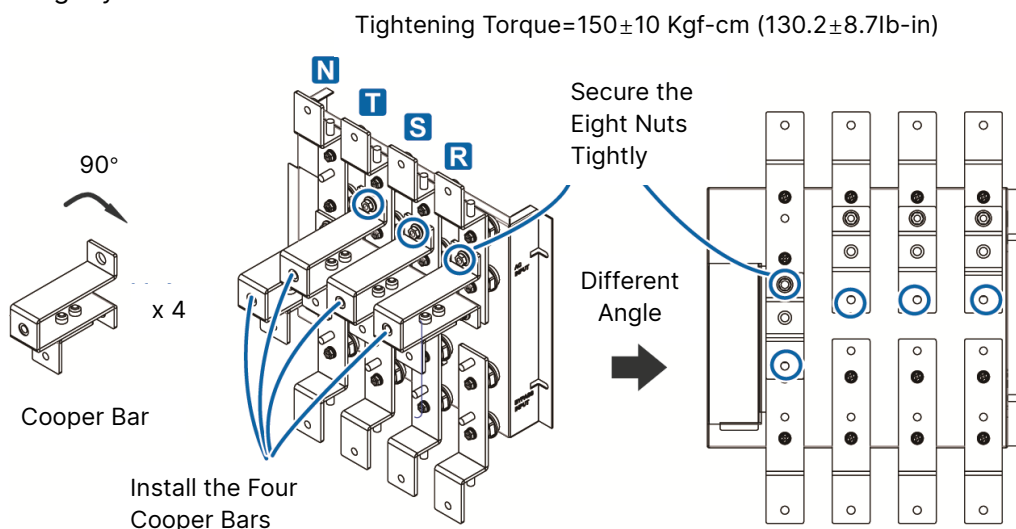

**NOTE:**

Please keep the removed nuts and cables properly for future use. If you want to modify the UPS from dual input into single input, please reverse the procedures mentioned above.

### 5.5.3 Single Unit Wiring





**NOTE:**

Before wiring, please read **5.5 Wiring** thoroughly and make sure that relevant conditions have been met.

Refer to **Table 5-3** for information about the wiring terminals and wiring. For the wiring diagrams and instructions, please refer to the following sections.

**Table 5-3: UPS's Wiring Terminals & Wiring Information**

No.	Item	Function
1	AC Input Terminals (L1/ L2/ L3/ N)	Connect to the main AC source.

No.	Item	Function
2	Bypass Input Terminals (L1/ L2/ L3/ N)	<b>1. Single Input:</b> There is no need to connect the Bypass Input terminals. <b>2. Dual Input:</b> Connect to the Bypass AC source.
3	UPS Output Terminals (L1/ L2/ L3/ N)	Connect to the critical loads.
4	Battery Input Terminals (+/ -/ N)	Connect to the external battery cabinet(s). Please contact Delta service personnel for battery configurations.
5	 PE (protective earth) Terminal* <sup>1</sup>	Protective earthing for protection against electrical shock in case of fault* <sup>1</sup> . The terminal must be connected to the main earth.
6	 GND (ground) Terminals	The terminals are used to ground the devices, which are associated with UPS operation.



#### NOTE:

\*<sup>1</sup> The PE (protective earth) connection ensures that all exposed conductive surfaces are at the same electric potential as the Earth to avoid the risk of electrical shock due to leakage current or an insulation fault.

### 5.5.3.1 Single Input (Single Unit)

When there is only one AC power source, single unit wiring procedures are as follows.

#### Step 1


The UPS allows cable routing from the top or bottom. Please leave adequate space above or below the UPS.

#### Step 2

Open the rear door, you will see the wiring terminals, you will see the wiring terminals shown in *Figure 2-5*.


### **Step 3**

A. For top wiring, please remove the top covers.

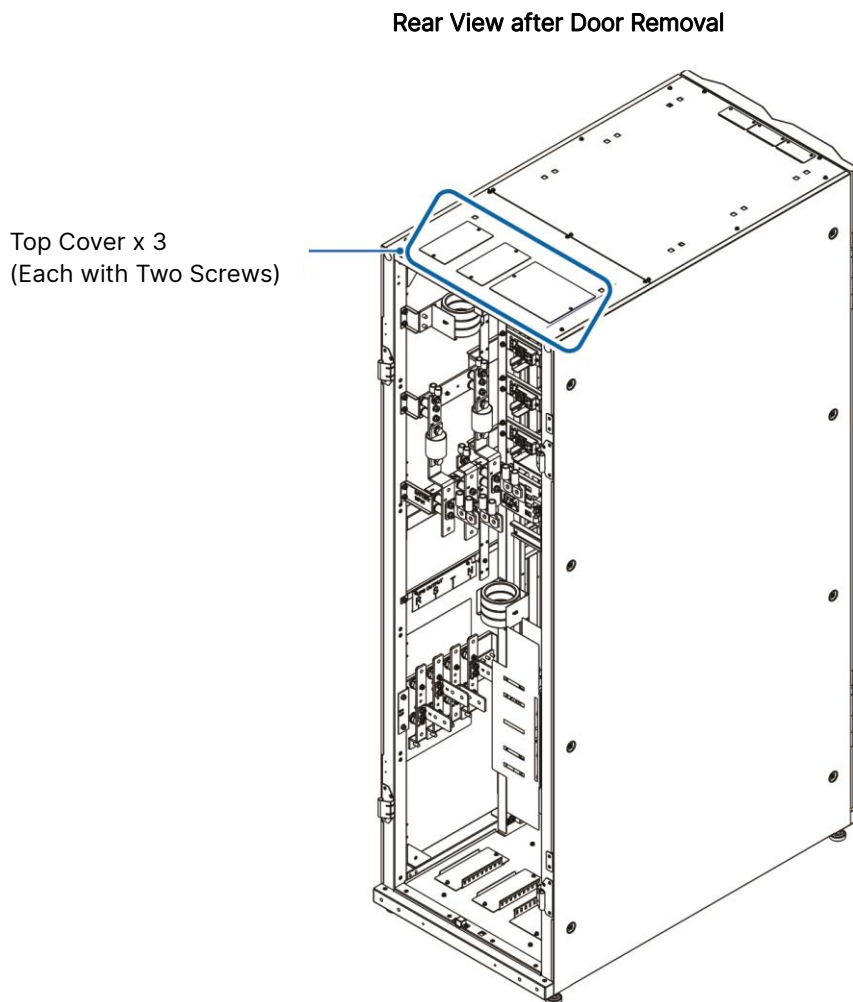

**Figure 5-9: Location of the Top Covers**

B. For bottom wiring, please remove the bottom covers.

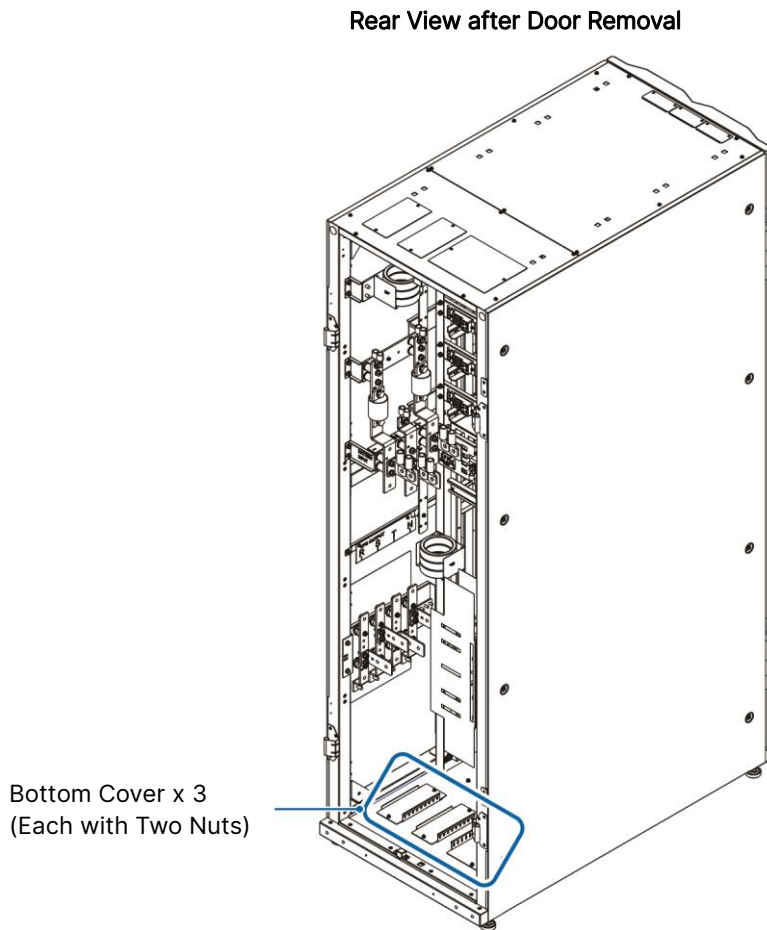

**Figure 5-10: Location of the Bottom Covers**

#### **Step 4**

Make sure the Input Switch (Q1), Bypass Switch (Q2), Manual Bypass Switch (Q3), and the Output Switch (Q4) are in the **OFF** position.

#### **Step 5**


Make sure each external battery cabinet's breaker (Q5) is in the **OFF** position.

#### **Step 6**

Follow **Table 5-2** to select proper input, output, and battery cables.

#### **Step 7**

Connect the cables of the main AC source, output and external battery cabinet(s) to the UPS. Please refer to **Table 5-3, 5.6 External Battery Cabinet Connection Warnings** and following diagram to perform wiring.

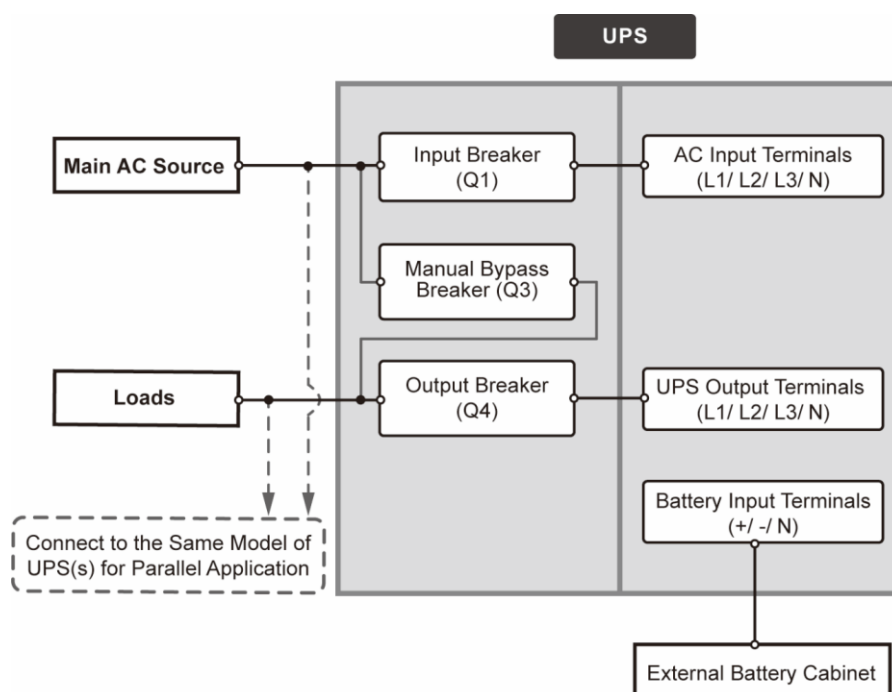

(Figure 5-11: Single Unit Single Input Wiring Diagram)

## Step 8

Follow the table below to select proper Protective Earth (PE) cables to ground the UPS, external battery cabinet(s) and connected critical loads. The table is in accordance with IEC 60364-5-54 (*Article 543* and *Table 54.2*). The grounding diagram below is for reference.

UPS Capacity		200kVA/ 200kW
Suggested PE Cable Size	Input	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Bypass	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Output	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Battery	95 mm <sup>2</sup> × 1 PC (4/0AWG× 1 PC)
Maximum Cable Lug Width		30 mm (1.18")
Screw Size		M10
Tightening Torque		M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)

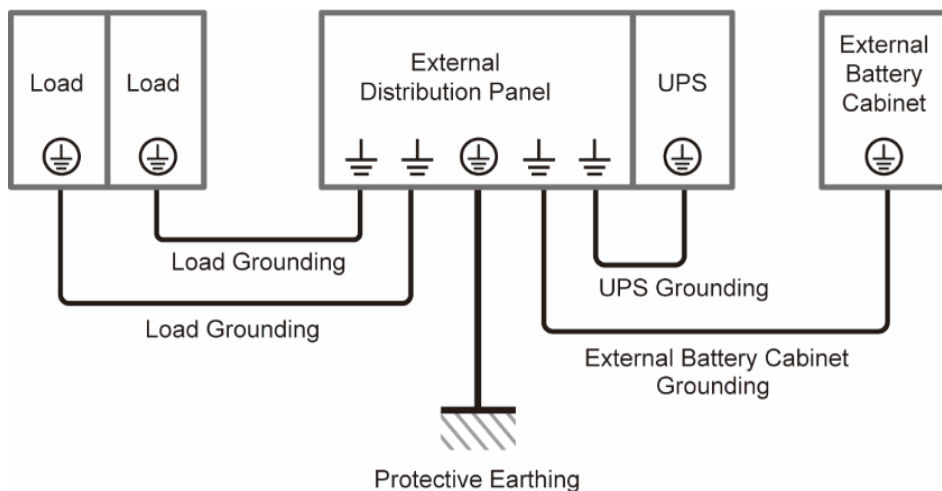


Figure 5-12: Grounding Diagram\_ Single Unit

### 5.5.3.2 Dual Input (Single Unit)

When there are two AC power sources, single unit wiring procedures are as follows.

#### Step 1

Follow **5.5.2 Single Input to Dual Input Modification** to modify the UPS from single input to dual input.

#### Step 2

Follow **Step 1 ~ Step 6** mentioned in **5.5.3.1 Single Input (Single Unit)**.

#### Step 3

Connect the cables of the main AC source, bypass source, output and external battery cabinet(s) to the UPS and the external maintenance bypass cabinet. Please refer to **Table 5-3**, **5.6 External Battery Cabinet Connection Warnings** and following diagram to perform wiring.



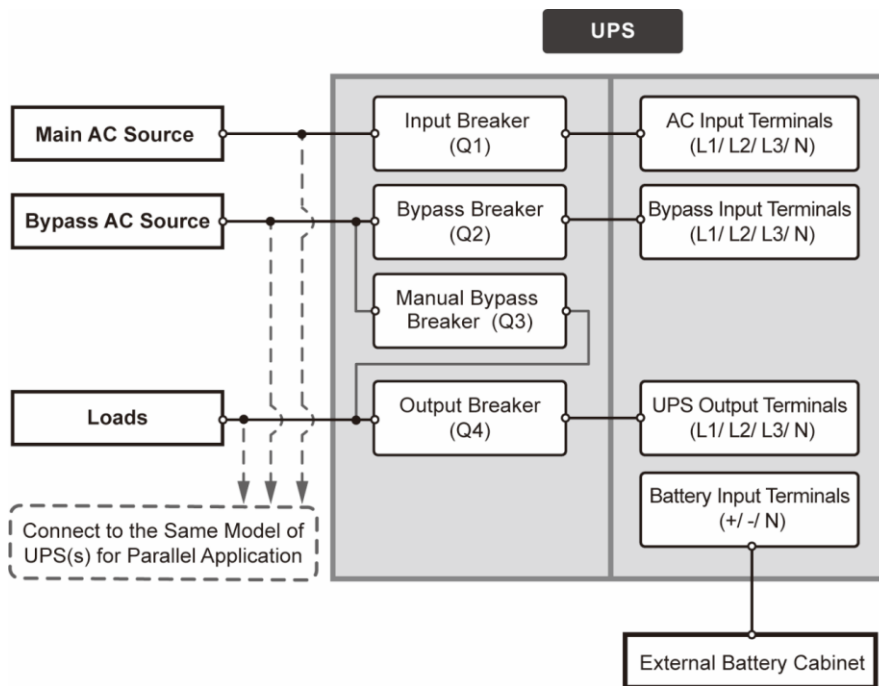


Figure 5-13: Single Unit Dual Input Wiring Diagram

#### Step 4


Refer to **Figure 5-12** to ground the UPS, external battery cabinet(s) and connected critical loads.

## 5.5.4 Parallel Units Wiring



### NOTE:

1. Up to eight UPS units can be paralleled for redundancy and capacity expansion. Only the UPSs with the same capacity, voltage, frequency and version can be paralleled. For parallel connection, please use the provided parallel cable only; otherwise, parallel functions will fail.
2. When the UPSs are paralleled, the length of each unit's bypass input cables plus output cables must be the same. This ensures that the parallel UPSs can equally share the critical loads in Bypass mode.

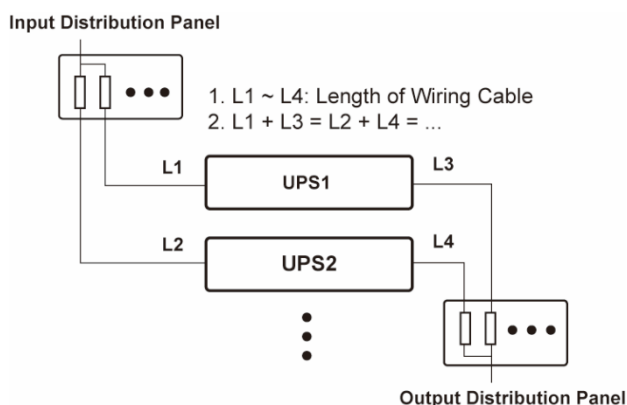

- 3 Before wiring, please read **5.5 Wiring** thoroughly and make sure that relevant conditions have been met.

### Step 1

For single input, please follow **Step 1 ~ Step 7** mentioned in **5.5.3.1 Single Input (Single Unit)**.

For dual input, please follow **Step 1 ~ Step 3** mentioned in **5.5.3.2 Dual Input (Single Unit)**.

### Step 3

Use the provided parallel cables\*<sup>1</sup> to connect the parallel ports of the parallel units. Please adopt the Daisy Chain method shown in the figure below. For the parallel port location, refer to **Figure 4-1**.



### NOTE:

\*<sup>1</sup> One parallel cable is provided in each UPS's accessory package.

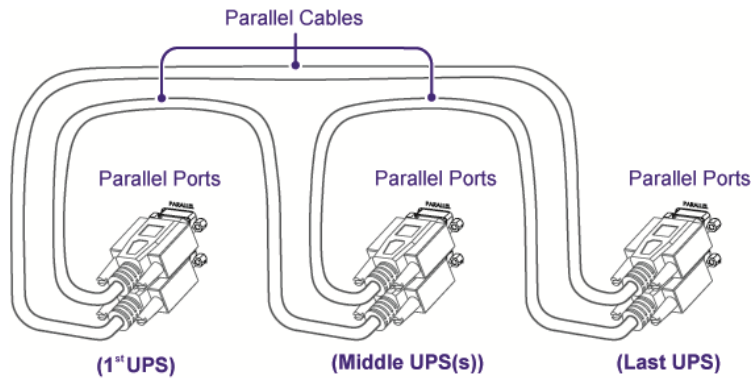


Figure 5-14: Parallel Port Connection\_ Daisy Chain Method

#### Step 4

Follow the table below to select proper Protective Earth (PE) cables to ground the parallel UPS units, external battery cabinet(s) and connected critical loads. The table is in accordance with IEC 60364-5-54 (*Article 543* and *Table 54.2*). The grounding diagram below is for reference.

UPS Capacity		DPH 200kVA
Suggested PE Cable Size	Input	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Bypass	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Output	70 mm <sup>2</sup> × 1 PC (3/0 AWG × 1 PC)
	Battery	95 mm <sup>2</sup> × 1 PC (4/0AWG× 1 PC)
Maximum Cable Lug Width		30mm (1.18")
Screw Size		M10
Tightening Torque		M10 = 250 ± 10 kgf-cm (217 ± 8.7 lb-in)

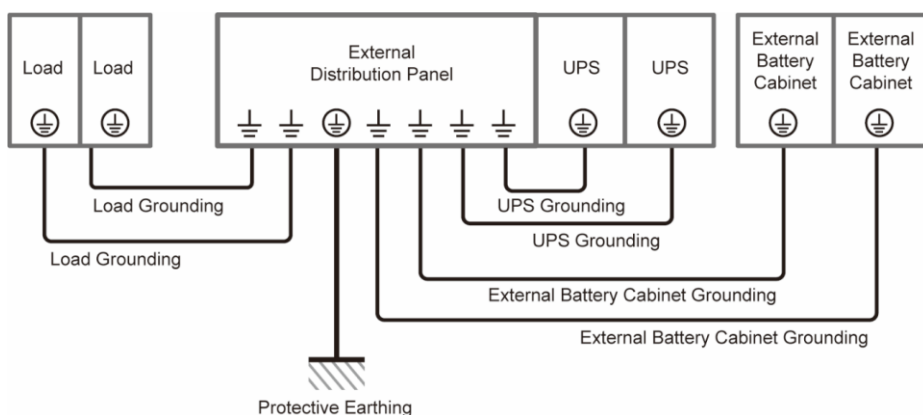


Figure 5-15: Grounding Diagram\_ Parallel Units



**WARNING:**

Before start-up of the parallel units, qualified service personnel must set each UPS's '**Parallel Group ID**' (1 or 2) and '**Parallel ID**' (1 ~ 8) through the LCD. Otherwise, the parallel UPSs cannot be started. Please refer to **7.6.5 Parallel Setting**.

## 5.6 External Battery Cabinet Connection Warnings



**NOTE:**

1. The information of the battery parameters in this chapter may not be applicable to the lithium-ion batteries. For relevant information, please refer to the manual of the lithium-ion batteries.
2. Whether you use the lead-acid batteries or the lithium-ion batteries, please contact Delta service personnel for any battery/ battery cabinet's setup and configurations.



**WARNING:**

1. Before performing battery/ battery cabinet installation, wiring and replacement, please turn off each external battery cabinet's breaker (Q5) to completely disconnect the battery power from the UPS.
2. A battery can present a risk of electric shock and high short-circuit current. Servicing of batteries and battery cabinets must be performed or supervised by qualified service personnel knowledgeable in batteries, battery cabinets and the required precautions. Keep unauthorized personnel away from batteries and battery cabinets.

You should connect the UPS with at least one external battery cabinet to ensure that the connected critical loads are protected when a power failure occurs. You can connect up to four units of external battery cabinets to the UPS.

- To ensure that the batteries are fully charged, please charge the batteries for at least 8 hours before initial use of the UPS. The charging procedures are as follows.
  1. Connect the UPS to the main AC source and the external battery cabinet(s). Please refer to **5. Wiring**.
  2. Follow **6. UPS Operation** to turn on the UPS and the external battery cabinet(s). After that, the batteries will be automatically charged.



**WARNING:**

You can connect the critical loads to the external maintenance bypass cabinet only after the batteries are fully charged. This guarantees that the external maintenance bypass cabinet can provide sufficient backup power to the critical loads connected when a power failure occurs.

- To connect the external battery cabinet(s) to the UPS, please refer to **5.5 Wiring** and **Figure 5-16**.
- For the external battery cabinet's grounding information, please refer to **Figure 5-12** and **Figure 5-15**.
- **Battery Parameters:**

No.	Item	Description
1	Charge Voltage	Float charge voltage: $\pm 272$ Vdc (default)
		Equalized charge voltage: $\pm 280$ Vdc (default)
2	Charge Current	Default: $\pm 5$ A (per power module)
		$\pm 15$ A (Max.) (per power module)
3	Low Battery Shutdown Voltage	$\pm 210$ Vdc (default)
4	Battery Quantity	12V $\times$ 40 PCS (default)



#### NOTE:

1. The charge current is adjustable from 5A to the maximum, 1A per step.
  2. If you need to modify the default charge current setting and default low battery shutdown setting, please contact your local dealer or service personnel.
  3. Follow on-site requirements to choose 12V × 30/ 32/ 34/ 36/ 38/ 40/ 42/ 44 or 46 PCS of batteries. Change of the battery quantity will influence the applied specifications. For battery selection, installation and replacement, please contact your local dealer or customer service.
  4. You must set up the '**Battery Rating Voltage**', '**Battery Strings**' and '**Capacity**' on the LCD according to on-site application. Otherwise, the batteries will be over-charged, not fully charged or even seriously damaged.
- Only use the same type of batteries from the same supplier. Never use old, new and different Ah batteries at the same time.
  - The number of batteries must meet the UPS requirements.
  - Do not connect the batteries in reverse.
  - Use a voltage meter to measure whether the total voltage is around 12.5 Vdc × the total number of batteries after the batteries are connected in series.
  - The default battery quantity is 40 PCS of 12V batteries connected in series. The external battery cabinet's neutral (N) is to be connected to the middle of the 20th and 21st batteries.

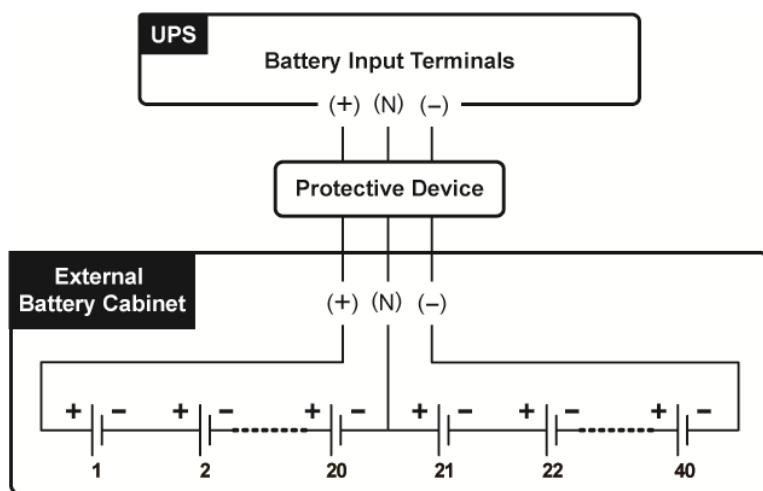


Figure 5-16: External Battery Cabinet Connection

**WARNING:**

The electrolyte leakage of the batteries can lead to serious accidents. For safety concerns, you must insulate the batteries properly (using insulated trays or boxes) from the metal cabinets and racks.

- **Installation of the External Battery Cabinet's Protective Device**

Please follow your UPS rating to install an appropriate protective device for each external battery cabinet. There are four installation methods for selection.

- (1) A 4-pole DC circuit breaker or DC isolated switch connected in series with a DC fuse
- (2) A 3-pole DC circuit breaker or DC isolated switch connected in series with a DC fuse
- (3) A 4-pole DC circuit breaker
- (4) A 3-pole DC circuit breaker

For relevant values, please refer to **Table 5-4**. For installation diagrams, please refer to **Figure 5-17** and **Figure 5-20**.

**Table 5-4: External Battery Cabinet's Protective Device (Default Battery Q'ty: 12Vdc × 40 PCS)**

UPS Rating	Power Module Q'ty	Protective Device's Current	Protective Device's Voltage
50kVA/ 50kW	1	150A	<ul style="list-style-type: none"><li>• 4-pole DC isolated switch/ DC circuit breaker: voltage per pole <math>\geq 250</math> Vdc.</li><li>• 3-pole DC isolated switch/ DC circuit breaker: voltage per pole <math>\geq 500</math> Vdc</li><li>• DC fuse: voltage <math>\geq 500</math> Vdc</li></ul>
100kVA/ 100kW	2	300A	
150kVA/ 150kW	3	400A	
200kVA/ 200kW	4	500A	




#### NOTE:

1. **Table 5-4** is for 12Vdc × 40 PCS of batteries (default). If you install a different number of batteries, please contact Delta service personnel for the protective device's current and voltage values.
  2. If you need to parallel multiple units of external battery cabinets, please contact Delta service personnel for relevant information.
  3. To extend the backup time, you can parallel up to four units of external battery cabinets to the UPS. Please note that (1) the number of batteries in each paralleled external battery cabinet shall be the same and that (2) the cable length of each battery string shall be the same.
- When choosing the external battery cabinet's protective device, please take the following factors into consideration: (1) overcurrent between the UPS and battery circuit, (2) short circuit current of the batteries, (3) wire/ cable materials, and (4) local electrical regulations. If you have any questions about the external battery cabinet's protective device, please contact Delta service personnel.
  - The protective device is optional, and its type must be fast-acting DC circuit breaker and/ or fast-acting DC fuse. If you want to buy any of them, please contact Delta service personnel. When choosing the protective device, follow the instructions below.
    - (1) The protective device's rated current must comply with the current values shown in **Table 5-4**.
    - (2) The specifications of the protective device's short-circuit protection (i.e. the tripping current of the fast-acting DC circuit breaker and/ or the melting current of the fast-acting DC fuse) must be 4 ~ 6 times the values shown in **Table 5-4**. Besides, the response time of the protective device must be less than 20ms.
    - (3) For the choice of the fast-acting DC fuse mentioned above, the A50QS series from the supplier **Ferraz Shawmut** is suggested. Please contact Delta customer service for relevant information.
    - (4) The maximum tripping current of the fast-acting DC circuit breaker and/ or the maximum melting current of the fast-acting DC fuse mentioned above are 6 times as much as the values shown in **Table 5-4**. These maximum values are suggested for general applications only. For the actual maximum values, the maximum short-circuit capacity of the on-site batteries must be taken into consideration. Please contact Delta customer service for relevant information.




### External Battery Cabinet's Protective Device (Option 1)

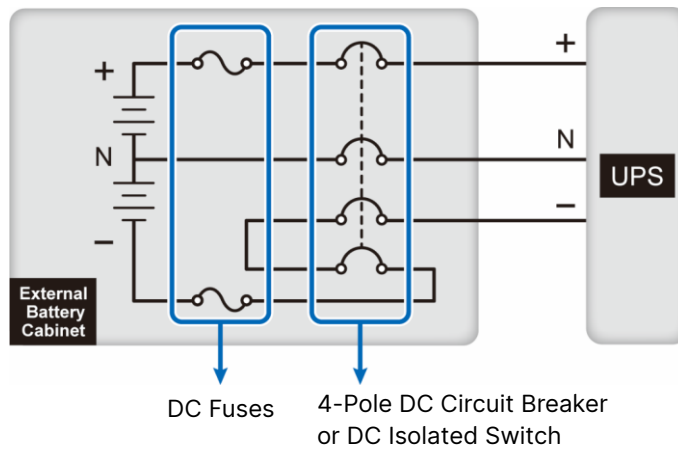

**Figure 5-17: Installation of a 4-Pole DC Circuit Breaker or DC Isolated Switch Connected in Series with a DC Fuse**

### External Battery Cabinet's Protective Device (Option 2)

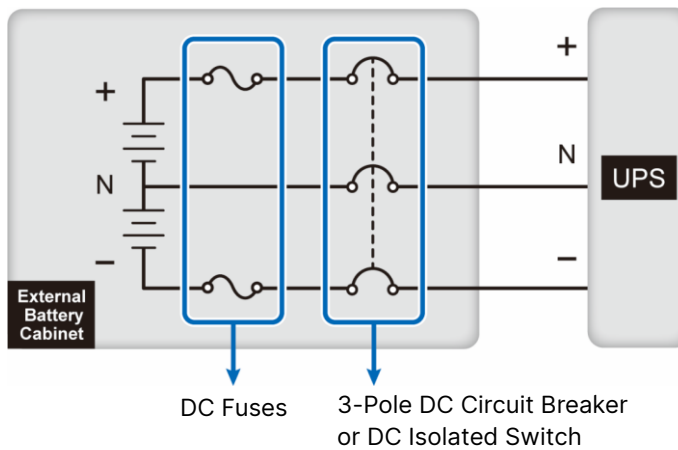

**Figure 5-18: Installation of a 3-Pole DC Circuit Breaker or DC Isolated Switch Connected in Series with a DC Fuse**

### External Battery Cabinet's Protective Device (Option 3)

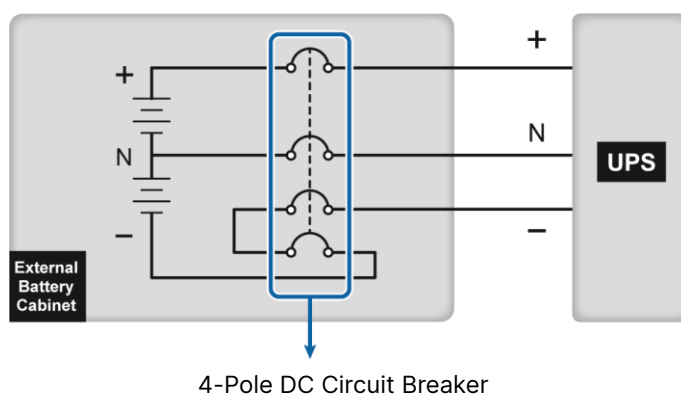


Figure 5-19: Installation of a 4-Pole DC Circuit Breaker

### External Battery Cabinet's Protective Device (Option 4)

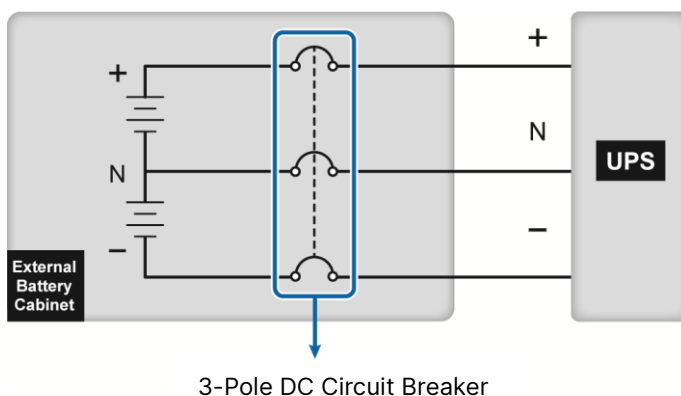


Figure 5-20: Installation of a 3-Pole DC Circuit Breaker

- **Common Battery (Only for Parallel UPSs Sharing the Same External Battery Cabinet(s))**

To save on your costs and installation space, the parallel UPSs can share their connected external battery cabinet(s). See **Figure 5-21** for two parallel UPSs sharing one external battery cabinet as an example.



#### **NOTE:**

The following 'common battery' information is not applicable to the UPS using lithium-ion batteries. For relevant information, please refer to the user manual of the lithium-ion batteries. Whether you use the lead-acid batteries or the lithium-ion batteries, please contact Delta service personnel for any battery/battery cabinet's setup and configurations.

For common battery application, please install a protective device between each parallel UPS and its connected external battery cabinet(s). You have to use the LCD to set each UPS's '**Float Charge Voltage**' (default: 272V) the same, '**Equalized Charge Voltage**' (default: 280V) the same, '**Battery Strings**' even and '**Charge Current (Max)**' even. Please refer to the examples below and *7. LCD Display & Settings*.

#### Example I

When (1) two UPSs are paralleled and share one external battery cabinet, (2) lead-acid batteries are used, (3) the battery capacity is 200AH, (4) there are a total of 4 battery strings, and (5) the charge current is 80A, please use the LCD to set each UPS's '**Battery Type**' as '**VRLA**', '**Capacity**' as 200 AH, '**Battery Strings**' as 2, and '**Charge Current (Max)**' as 40A.

#### Example II

When (1) three UPSs are paralleled and share one external battery cabinet, (2) lead-acid batteries are used, (3) the battery capacity is 300AH, (4) there are a total of 3 battery strings, and (5) the charge current is 90A, please use the LCD to set each UPS's '**Battery Type**' as '**VRLA**', '**Capacity**' as 300 AH, '**Battery Strings**' as 1, and '**Charge Current (Max)**' as 30A.

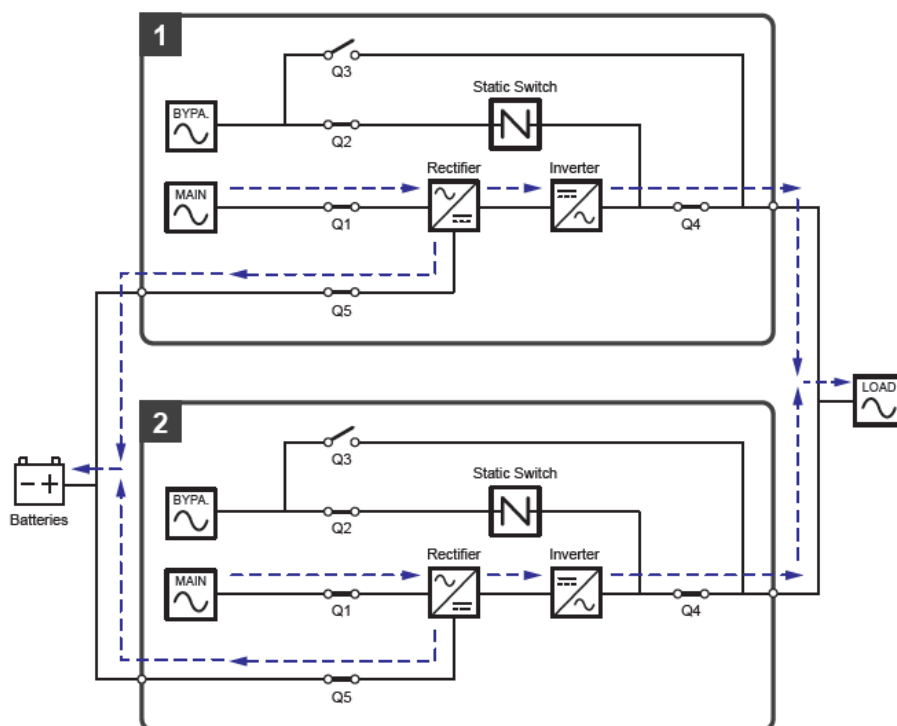


Figure 5-21: Common Battery Diagram

- **External Battery Cabinet Alarm**

When any external battery cabinet connected to the UPS has the following problems, the UPS system will sound an alarm. Please see the table below.

No.	External Battery Cabinet Status	Alarm
1	Battery Abnormal - Reversed	Sounds 0.5 second every second.
2	Battery Ground Fault	Sounds 0.5 second every second.
3	Battery Over Temperature	Sounds 0.5 second every second.
4	Battery Under Temperature	Sounds 0.5 second every second.
5	Battery Breaker Off	Sounds 0.5 second every 3 seconds.
6	Battery Disconnected (Missing)	Sounds once every second.
7	Battery Over Charged	Long beep.
8	Battery Test Fail	Sounds 0.5 second every second.
9	Battery End of Discharge Imminent	Sounds 0.5 second every second.
10	Battery End of Discharge	Long beep.
11	Battery Life Time Expired	Sounds 0.5 second every 3 seconds.

## 5.7 STS Module

The hot swappable STS module has been installed inside the UPS in the Delta factory before shipment. Please see *Figure 5-22* for its location.

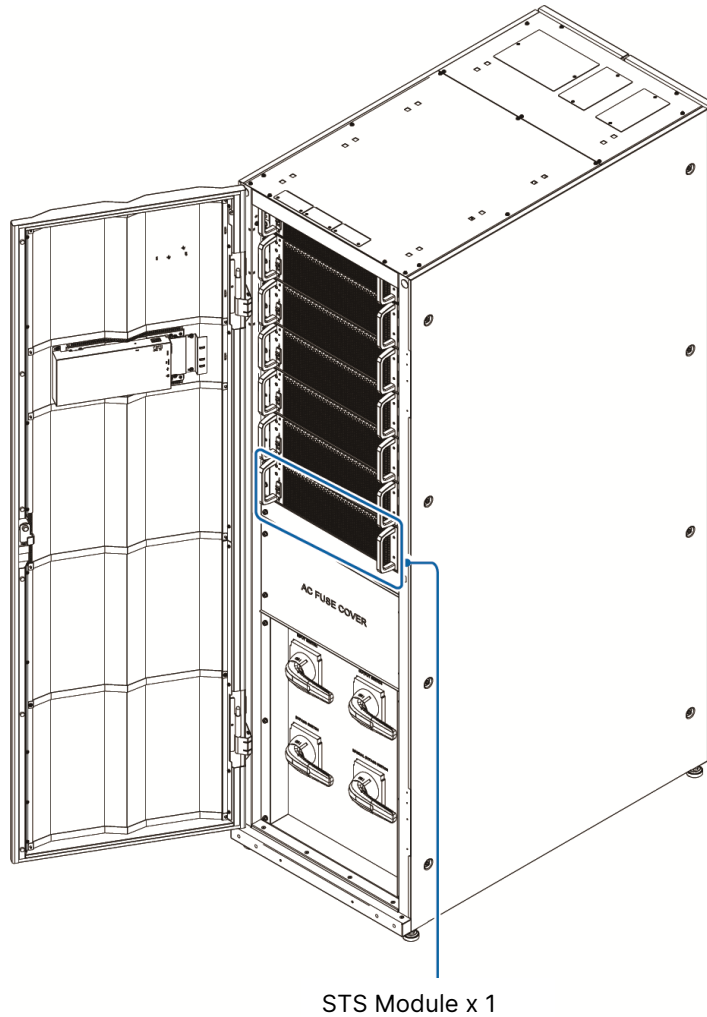


Figure 5-22: 200kVA UPS\_ STS Module Location

For STS module illustration, please refer to *Figure 5-23*.

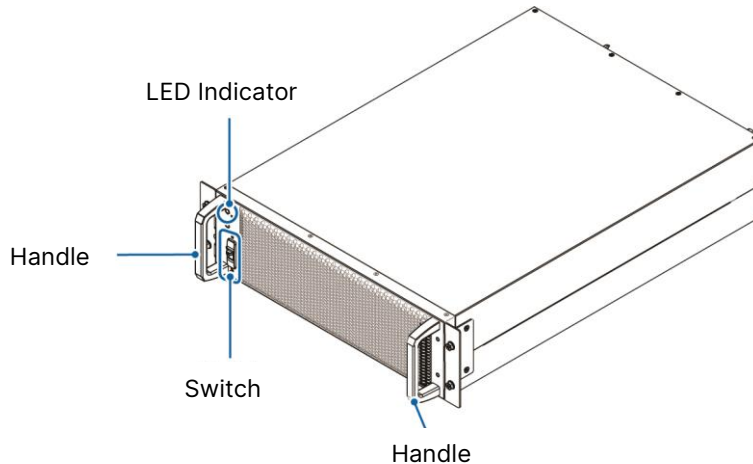


Figure 5-23: STS Module


### 5.7.1 STS Module Installation



**NOTE:**

1. Only qualified service personnel can perform the following STS module installation procedures.
2. The STS module is heavy (> 25 kg (55.12 lb)). At least two people are required for handling.

#### Step 1

Confirm that the STS module's switch is in the lower position (  ).


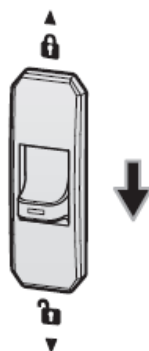


Figure 5-24: Confirm the STS Module's Switch in the Lower Position

## **Step 2**


Insert the STS module into the unoccupied STS module slot until it snaps into place. At least two people are required for handling.

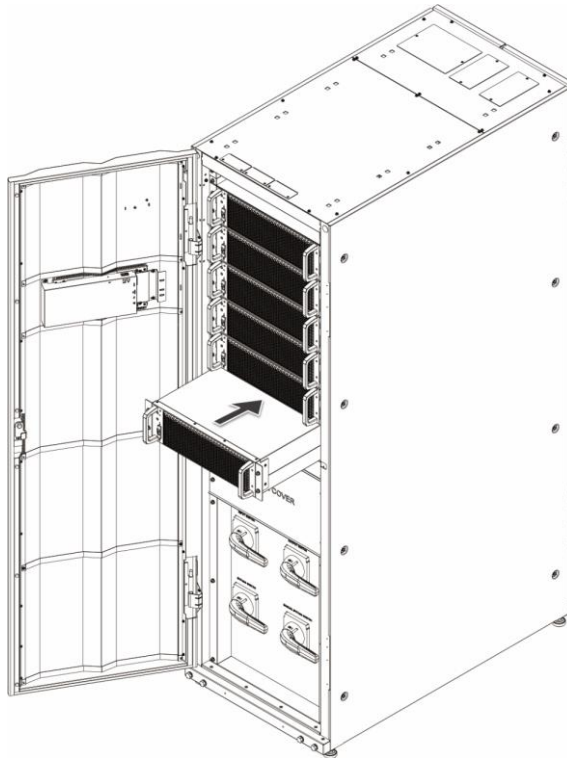

**Figure 5-25: Insert the STS Module into the UPS**


## **Step 3**

Re-install the four screws (removed during the STS module removal process) to firmly fix the STS module's bracket ears on the UPS cabinet.

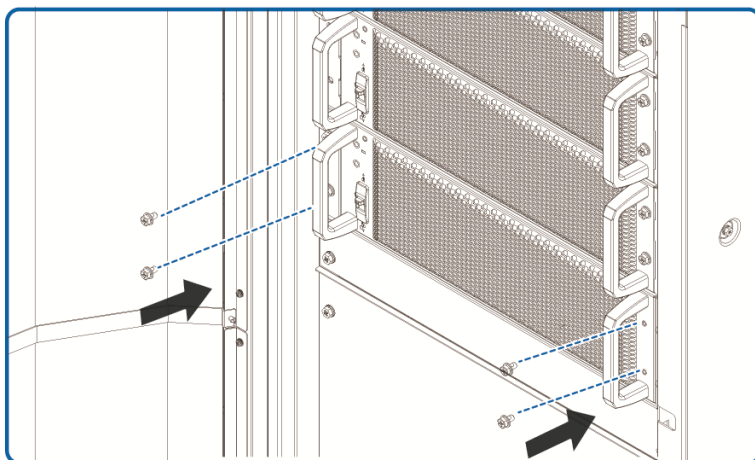

**Figure 5-26: Fix the STS Module on the UPS**

#### **Step 4**

Turn the STS module's switch to the upper position (  ).

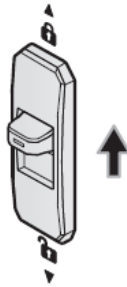


Figure 5-27: Turn the STS Module's Switch to the Upper Position


### **5.7.2 STS Module Removal**



#### **NOTE:**

1. Only qualified service personnel can perform the following STS module installation procedures.
2. The STS module is heavy (> 25 kg (55.12 lb)). At least two people are required for handling.

#### **Step 1**

Turn the STS module's switch to the lower position (  ) and wait until the STS module's LED indicator becomes off.


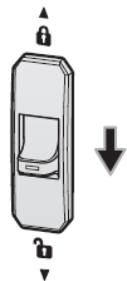


Figure 5-28: Turn the STS Module's Switch to the Lower Position



### **Step 2**


Unscrew the four screws shown in *Figure 5-29*.

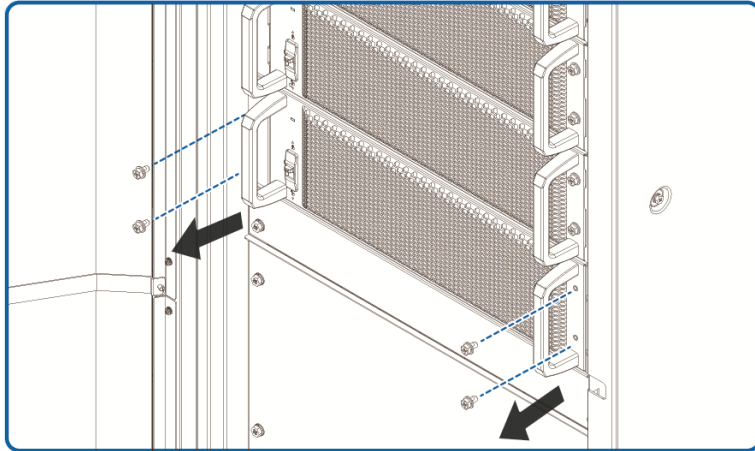


**Figure 5-29: Remove the Four Screws**

### **Step 3**

Pull out the STS module from the slot (two people are required) (see *Figure 5-30*). When the STS module cannot be pulled out any more, press the lock (see *Figure 5-31*) on the left side of the STS module in order to continuously pull out the module from the UPS cabinet.

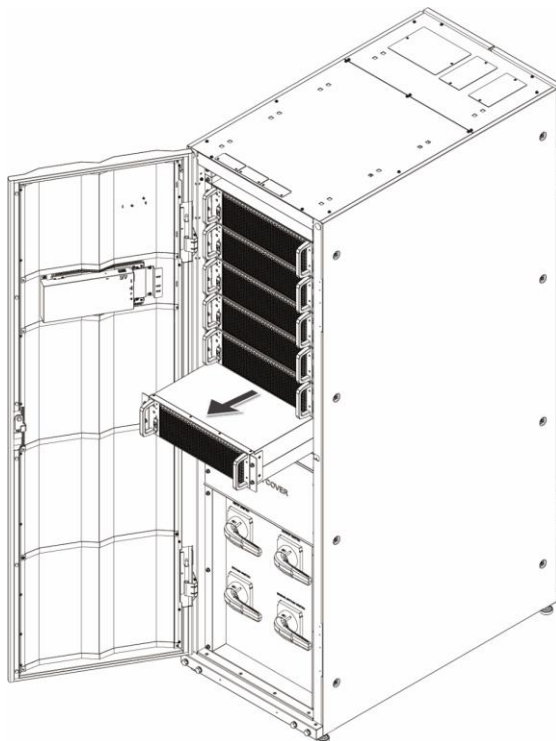

**Figure 5-30: Remove the STS Module**

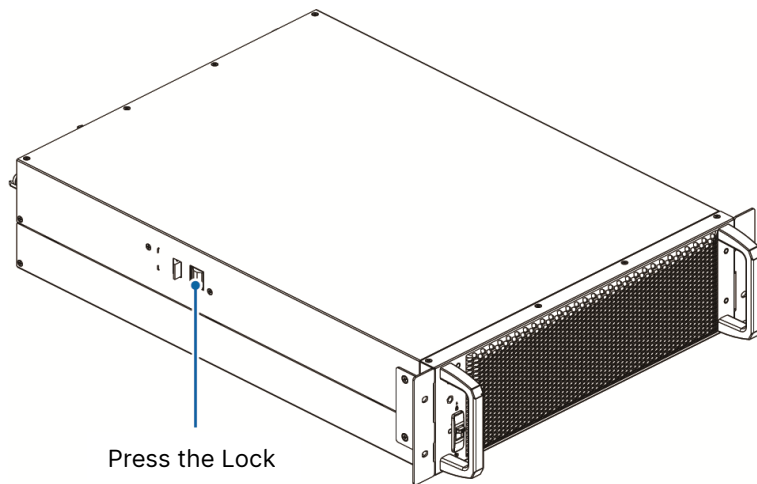

Press the Lock

Figure 5-31: Press the Lock of the STS Module

### 5.7.3 STS Module's LED Indicator STS Module's LED Indicator

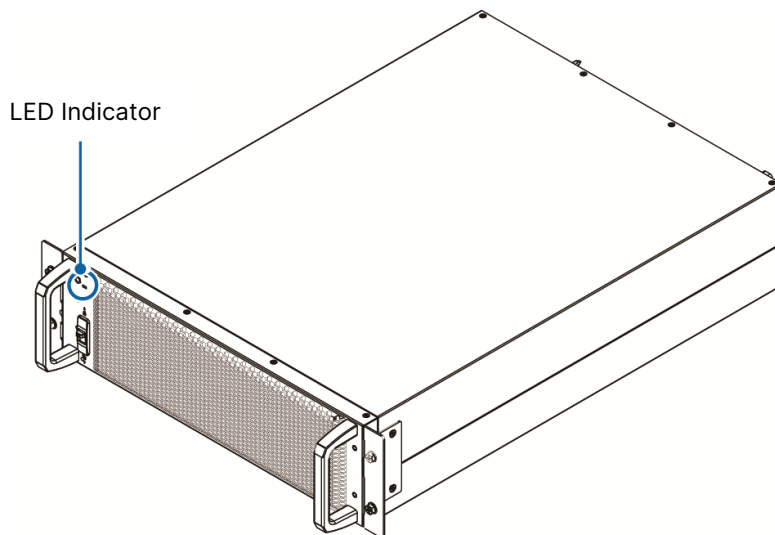


Figure 5-32: STS Module's LED Indicator

The STS module's LED indicator shows its operation status. Please refer to the following table.

LED Indicator	Description
OFF	The STS module is OFF.
ON (yellow)	The STS module is working in bypass mode, ECO mode, or energy recycle mode.
Flashing (yellow)_ on for 0.3 second and off for 3 seconds	The STS module is abnormal.




**NOTE:**

In bypass mode, if you turn the STS module's switch to the lower position (🔒), the STS module will shut down, and its output and its LED indicator will be off.

## 5.8 Power Module (Optional)

The power module is optional. It is hot swappable and each capacity is 50kVA/ 50kW.

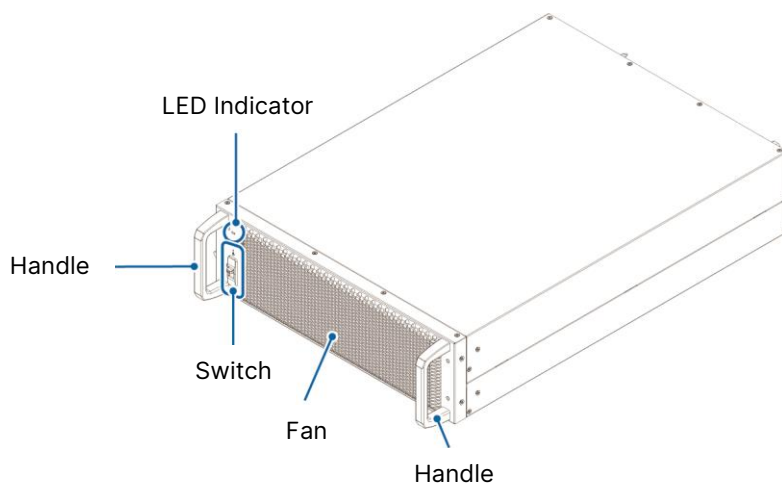

**Figure 5-33: 50kW Power Module (optional)**

Please see the table below for the power module's packing list.

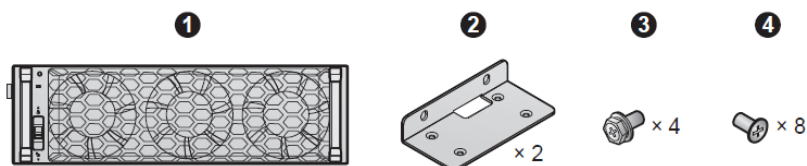


Table 5-5: Power Module Package List

No.	Item	Q'ty
①	Power Module	1 PC
②	Bracket Ear	2 PCS
③	M6 Screw	4 PCS
④	M4 Screw	8 PCS

### 5.8.1 Power Module Installation




#### WARNING:

1. Only qualified service personnel can perform the following power module installation procedures.
2. The power module is heavy (> 36 kg (79.4 lb)). At least two people are required for handling.
3. Please follow your UPS capacity to install the correct number of power modules. Please refer to the table below.

DPH Series				
UPS Capacity	50kVA/ 50kW	100kVA/ 100kW	150kVA/ 150kW	200kVA/ 200kW
Power Module Q'ty	1	2	3	4

4. Please install the power modules from the bottom layer of the power module slot to the top layer of the power module slot in sequence.

### Step 1

Confirm that the power module's switch is in the lower position (  ).

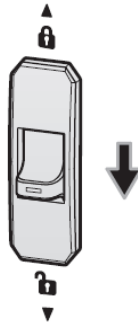


Figure 5-34: Confirm the Power Module's Switch in the Lower Position

### Step 2

Take out the two bracket ears, four M6 screws and eight M4 screws from the power module's package.

### Step 3

Use the provided eight M4 screws to fix the provided two bracket ears on the two sides of the power module. Please refer to *Figure 5-35*.

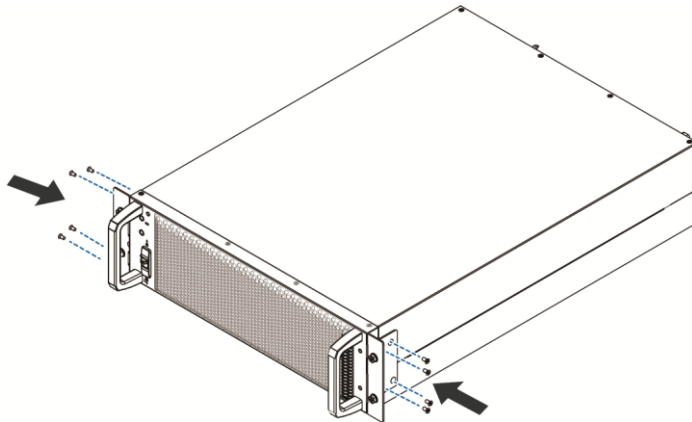


Figure 5-35: Install the Two Bracket Ears

### Step 4

Insert the power module into the unoccupied power module slot until it snaps into place. Two people are required.



#### **NOTE:**

Please install the power modules from the bottom layer of the power module slot to the top layer of the power module slot in sequence.

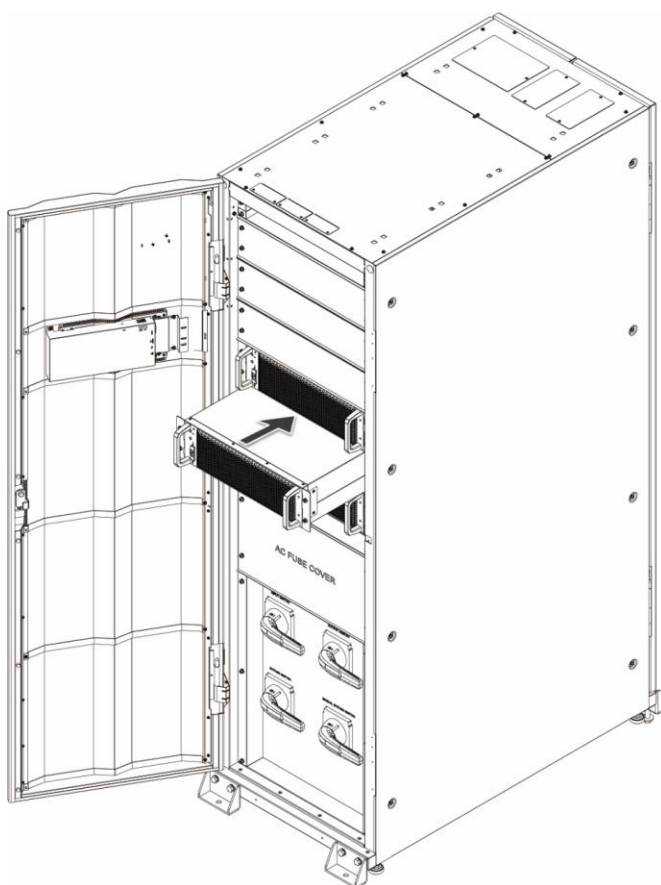


Figure 5-36: Insert the Power Module into the UPS

### **Step 5**

Use the provided four M6 screws to firmly fix the power module on the UPS.

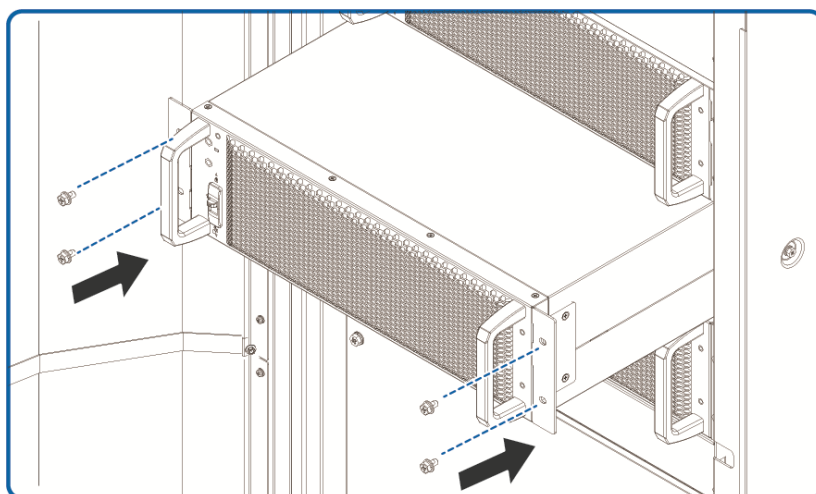


Figure 5-37: Fix the Power Module on the UPS

### Step 6

Turn the power module's switch to the upper position (▲). 

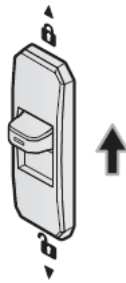


Figure 5-38: Turn the Power Module's Switch to the Upper Position

## 5.8.2 Power Module Removal



### WARNING:

1. Before removing any power module, make sure the remaining power module(s) can support the connected critical loads.
2. Only qualified service personnel can perform the following power module removal procedures.
3. The power module is heavy (>36 kg (79.4 lb)). At least two people are required for handling.

### Step 1

Turn the power module's switch to the lower position (▼). After that, the power module will start discharging. After discharging, the power module's LED indicator will be off.

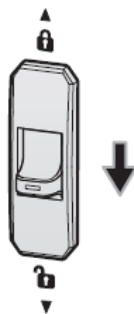


Figure 5-39: Turn the Power Module's Switch to the Lower Position

### Step 2

Use a screwdriver to remove the four screws from the power module shown in *Figure 5-40*.

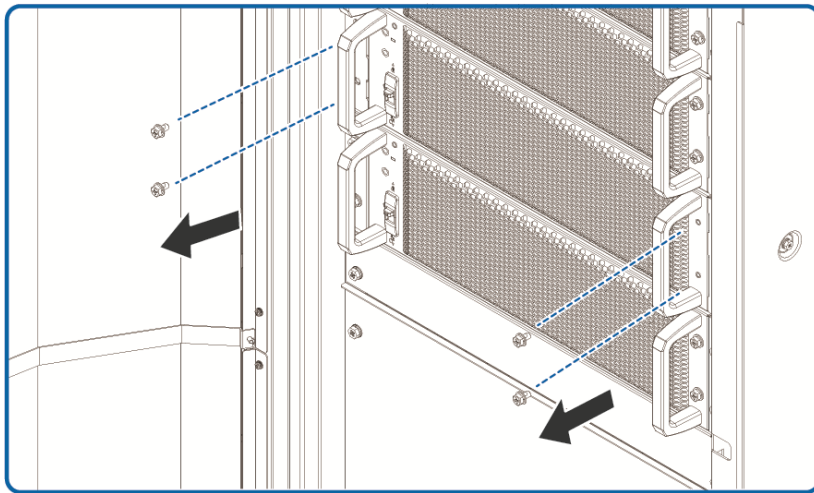


Figure 5-40: Remove the Four Screws

### **Step 3**

Pull out the power module from the slot (two people are required). When the power module cannot be pulled out any more, press the lock on the left side of the power module to continuously pull it out from the UPS cabinet.

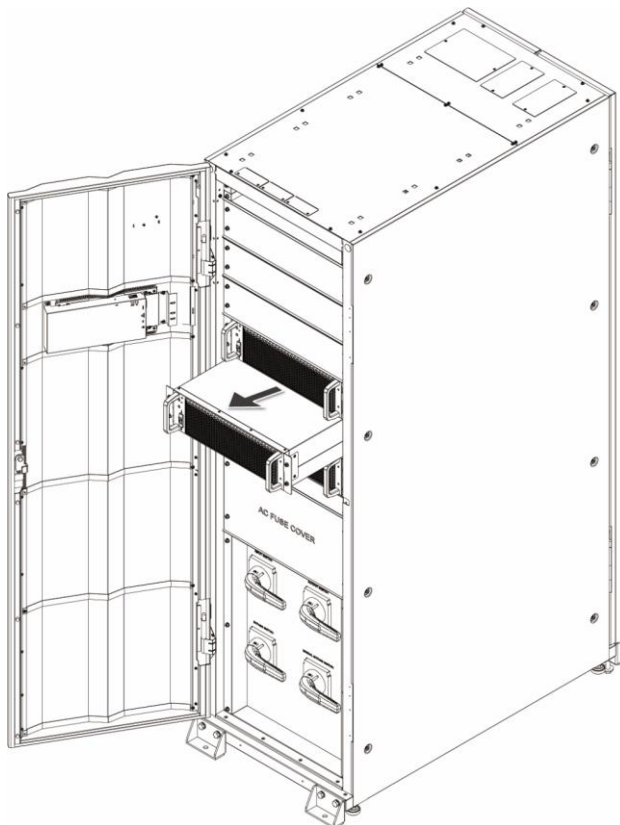


Figure 5-41: Remove the Power Module



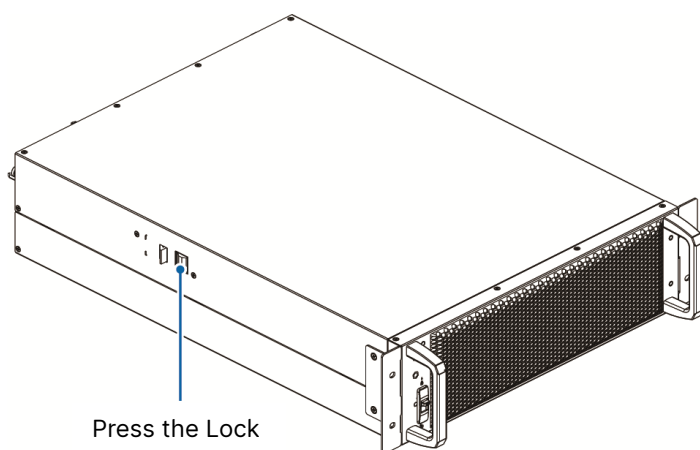


Figure 5-42: Press the Lock of the Power Module


### 5.8.3 Power Module's LED Indicator

The power module's LED indicator shows its operation status. Please refer to the following table.

LED Indicator	Description
OFF	The power module is <b>OFF</b> .
ON (green)	<ol style="list-style-type: none"> <li>1. The power module is running in On-Line mode or Battery mode.</li> <li>2. The power module's inverter starts up.</li> <li>3. The power module's PFC starts up.</li> </ol>
Flashing (green)_ on for 2 seconds and off for 1 second	The power module is under discharging process.
Flashing (green)_ on for 0.3 second and off for 3 seconds	The power module is abnormal.



#### NOTE:


In online mode, if you turn the power module's switch to the lower position (  ), the power module will shut down its output and discharge the DC BUS voltage until the voltage reaches to a safety level. After that, the power module's LED indicator will be off.


## Chapter 6: UPS Operation

### 6.1 Pre Start-up & Pre Turn-off Warnings



#### NOTE:

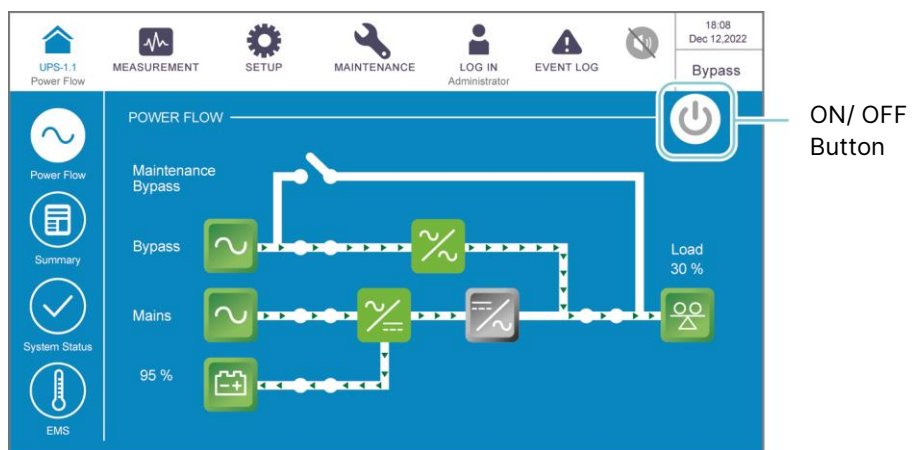

1. All LCD diagrams in the user manual are for reference only. The display is subject to the actual status of the UPS.
2. For information about the LCD touch panel and tri-color LED indicator, please refer to *2.8 Tri-color LED Indicator & Buzzer* and *7. LCD Display & Settings*.
3. If the **ON/ OFF Button** (🔌) does not appear on the screen, please log in as **Administrator** first, and then go to  → **General Setting** → **User** → **On/ Off Button Access** to change the setting.



4. The external battery cabinet's breaker (Q5) shown on the LCD is always **ON** by default. To enable the detection of the Q5 status via the LCD, please contact Delta customer service for additional configurations.

## Single Unit

- **Pre Start-up Warnings for Single Unit**



1. Make sure that all the breakers, including every external battery cabinet's breaker (Q5), are turned to the **OFF** position.
2. Make sure that the UPS's voltage difference between the Neutral (N) and Ground () is < 3V.
3. Check if the wiring is correct. Ensure that the AC power's voltage, frequency, phase sequence and battery type meet the UPS's requirements.
4. Check if all power modules are properly installed and every power module's switch is in the upper position () . Please refer to **5.8 Power Module (Optional)** for more information.

- **Pre Turn-off Warnings for Single Unit**

If you perform turn-off procedures for single unit, all power will be completely cut off. Please make sure the critical loads connected to the UPS have already been safely shut down before you perform the turn-off procedures.

## Parallel Units

- **Pre Start-up Warnings for Parallel Units**

1. You can parallel a maximum of eight UPS units.
2. For parallel units, ensure that each parallel cable (provided) is connected well.
3. Make sure that all the breakers, including every external battery cabinet's breaker (Q5), are turned to the OFF position.
4. Make sure that the UPS's voltage difference between the Neutral (N) and Ground () is < 3V.
5. Check if the wiring is correct. Ensure that the AC power's voltage, frequency, phase sequence and battery type meet the UPS's requirements.
6. Check if all power modules are properly installed and every power module's switch is in the upper position () . Please refer to **5.8 Power Module (Optional)** for more information.
7. For parallel units, ensure that every operation procedure is synchronized to all parallel UPSs.
8. For parallel application, if you just want to operate a specific UPS but not all parallel ones, please contact service personnel.

- **Pre Turn-off Warnings for Parallel Unit**

1. If you want to turn off one of the parallel UPSs, please check whether the remaining parallel units' total capacity exceeds the total critical loads. If the remaining parallel units' total capacity is less than the total critical loads, all parallel units will shut down due to overload.
2. If you perform turn-off procedures for all parallel UPSs, all power will be completely cut off. Please make sure that the critical loads connected to the parallel UPSs have already been safely shut down before you perform the turn-off procedures.

## 6.2 Start-up Procedures

### 6.2.1 On-Line Mode Start-up Procedures



**WARNING:**

Before turning on the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

#### Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

#### Step 3


Switch **ON** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4).

#### Step 4

Tap the **ON/ OFF Button** () on the LCD screen.

#### Step 5

After the inverter turns on, the UPS will run in On-Line mode, the LCD screen will show as below, and the tri-color LED indicator will illuminate green.

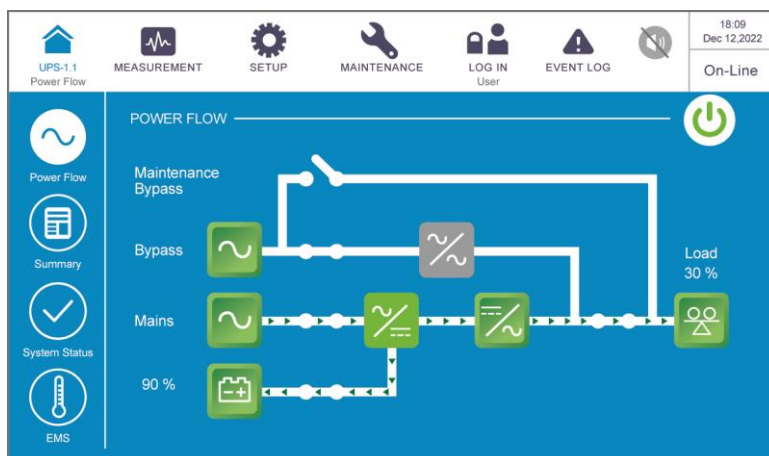

## 6.2.2 Battery Mode Start-up Procedures



### WARNING:

Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

#### Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

#### Step 3

Switch **ON** the Output Switch (Q4).

#### Step 4


Press any of the **BATT. START** buttons on the **Communication Interfaces (I)** for one second.

#### Step 5

Tap the **ON/ OFF Button** (⏻) on the LCD screen.

#### Step 6

After the inverter turns on, the UPS will run in Battery mode, the LCD screen will show as below, and the tri-color LED indicator will illuminate yellow.

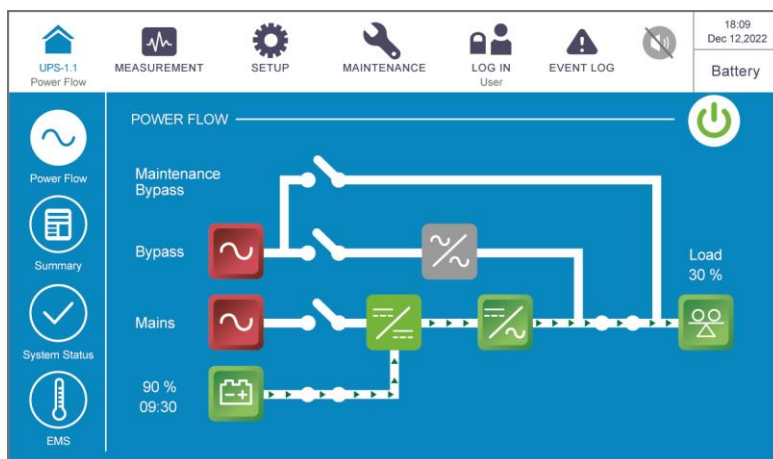

### 6.2.3 Bypass Mode Start-up Procedures



#### WARNING:

Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

#### Step 2

Switch **ON** every external battery cabinet's breaker (Q5).


#### Step 3

Switch **ON** the Input Switch (Q1) and Bypass Switch (Q2).

#### Step 4

For parallel application, please check each parallel UPS's parallel settings. Please note that each parallel UPS's parallel ID No. must be different, and parallel group ID No., input, output and battery settings must be the same.


#### Step 5

For parallel application, tap the icon (  ) located in the upper left corner of the screen and check if the parallel group ID No. and parallel ID No. of the parallel UPSs are correct. The UPS with the smallest parallel ID No. is defined as the master unit. Please refer to below Figure.

Parallel Group  
ID No.

UPS-1.1

Parallel ID No.

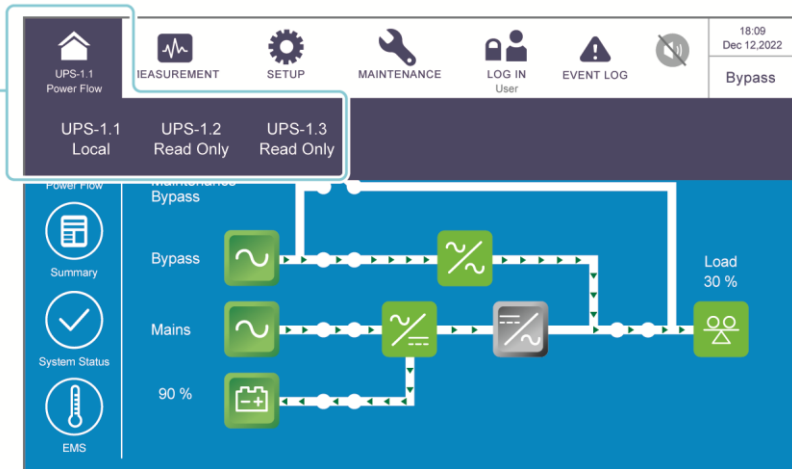


## Step 6

For single unit, turn **ON** the Output Switch (Q4).

For parallel units, ensure that the output voltage difference between each parallel UPS is below 3V. If larger than 3V, it is abnormal; please contact service personnel immediately. If below 3V, turn **ON** each parallel UPS's Output Switch (Q4).

Now, the tri-color LED indicator illuminates yellow and the LCD shows the following screen.

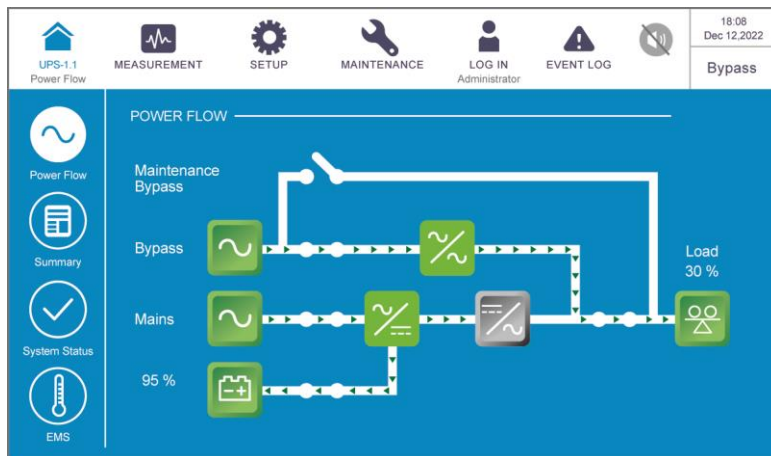

## 6.2.4 Manual Bypass Mode Start-up Procedures



### WARNING:

1. Before turning on/ off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.
2. In Manual Bypass Mode, make sure that all of the switches/ breakers (except for Manual Bypass Breaker/ Switch (Q3)) are in the **OFF** position before working on the UPS's internal circuits to prevent electric shock. **DO NOT** touch any external maintenance bypass cabinet's terminal and bus bar which may carry high-voltage electricity.

### ● From On-Line Mode to Manual Bypass Mode

#### Step 1


Tap the **ON/ OFF Button** (🔌) on the LCD screen to shut down the inverter.

#### Step 2

Ensure that the UPS runs in Bypass mode. After confirmation, turn **ON** the Manual Bypass Switch (Q3).

#### Step 3

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4). After that, the screen shows as follows.

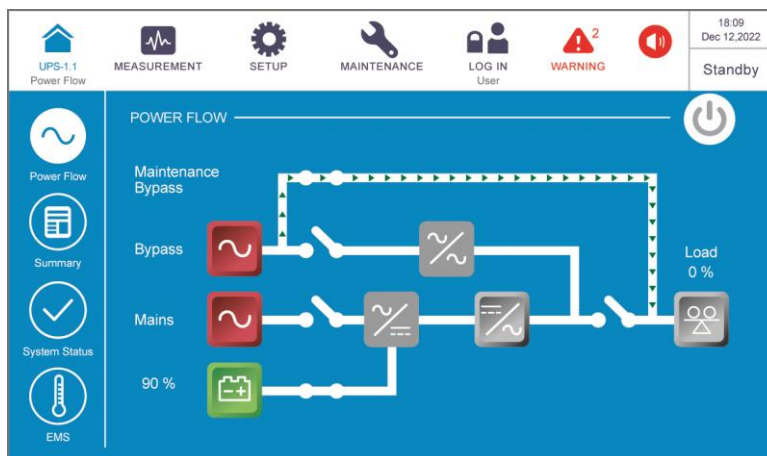

#### Step 4

Wait for the UPS to complete DC BUS discharging. After discharging, switch **OFF** every external battery cabinet's breaker (Q5), and the LCD and tri-color LED indicator will be off.

#### Step 5

Switch **OFF** every external battery cabinet's breaker (Q5).



- From Manual Bypass Mode to On-Line Mode

### Step 1

Switch **ON** every external battery cabinet's breaker (Q5).

### Step 2

Switch **ON** the Output Switch (Q4).

### Step 3

Switch **ON** the Input Switch (Q1) and Bypass Switch (Q2). After That, ensure that the bypass SCR is active.

### Step 4


Switch **OFF** the Manual Bypass Switch (Q3).

### Step 5

Tap the **ON/ OFF Button** (🔌) on the LCD screen.

### Step 6

After the inverter turns on, the UPS will run in On-Line mode, the LCD screen will show as below, and the tri-color LED indicator will illuminate green.

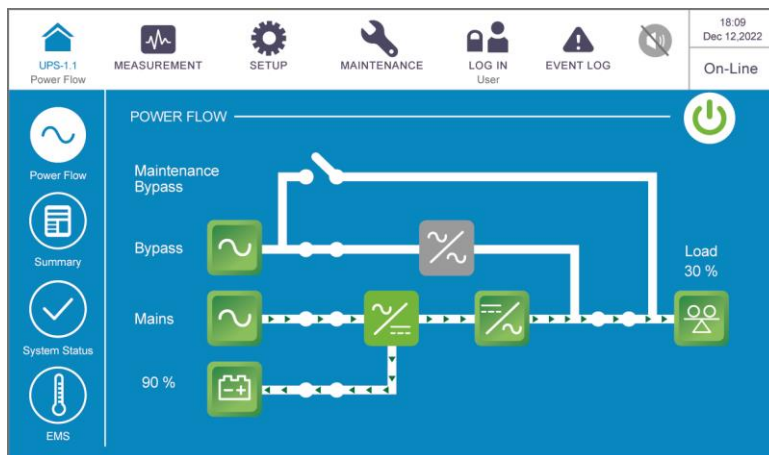

## 6.2.5 ECO Mode Start-up Procedures



### **WARNING:**

Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

## Step 2

Switch **ON** every external battery cabinet's breaker (Q5).


## Step 3

Switch **ON** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4).

If the bypass AC source is within the normal range, the UPS will transfer to run in Bypass mode.


## Step 4

Please log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

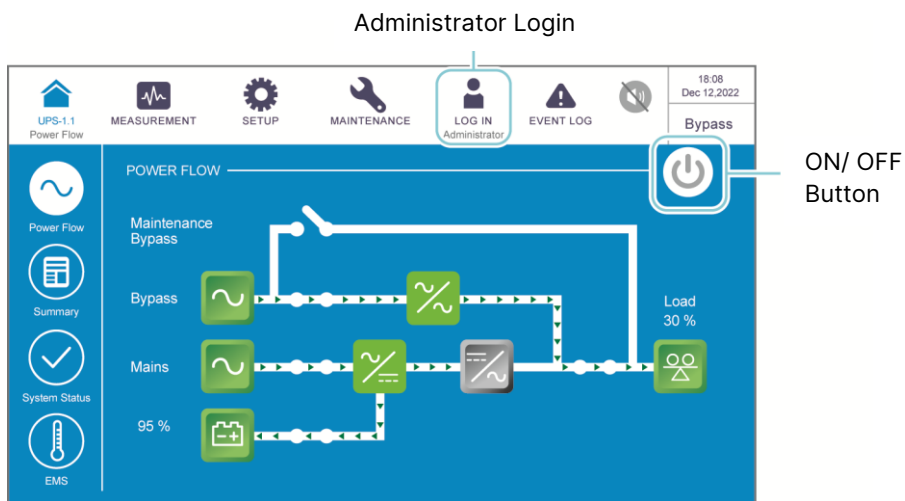

## Step 5

Go to **SETUP** → **Mode Setting** → **ECO**.

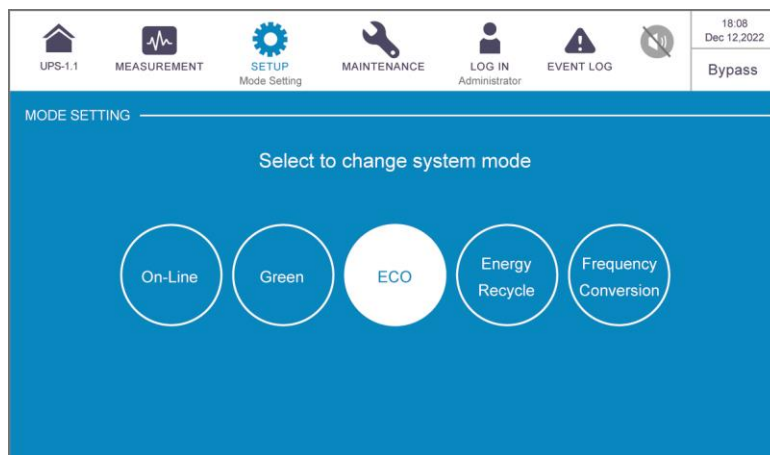


## Step 6

Tap the icon (  ) to go back to the **Main Screen** and tap the **ON/ OFF Button** (  ).

## Step 7

After the inverter turns on and the system confirms that the bypass voltage is normal, the UPS will automatically transfer to ECO mode to let the bypass supply power, the LCD screen will show as below, and the tri-color LED indicator will illuminate green.

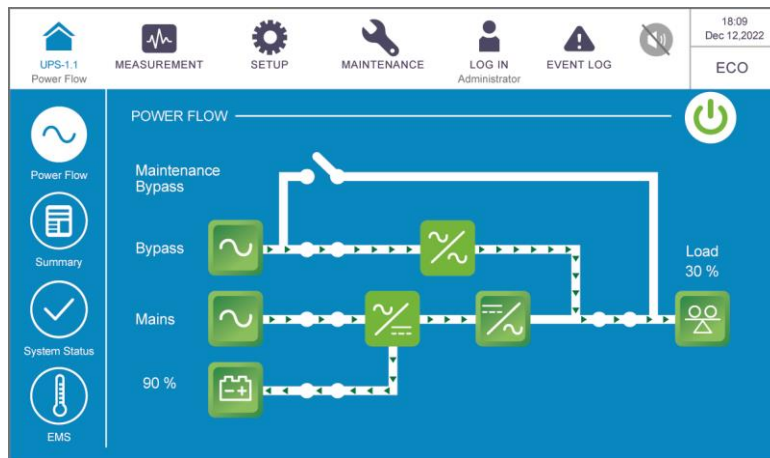

### 6.2.6 Frequency Conversion Mode Start-up Procedures



#### WARNING:

1. Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.
2. Frequency Conversion mode is only applicable to single UPS but not to parallel UPSs.
3. When the UPS runs in Frequency Conversion mode, once the inverter becomes off, there is no bypass power supplying to the loads.

#### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

#### Step 2

Switch **ON** every external battery cabinet's breaker (Q5).


#### Step 3

Switch ON the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4).

If the bypass input is within the normal range, the UPS will run in Bypass mode.

#### Step 4

Please log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

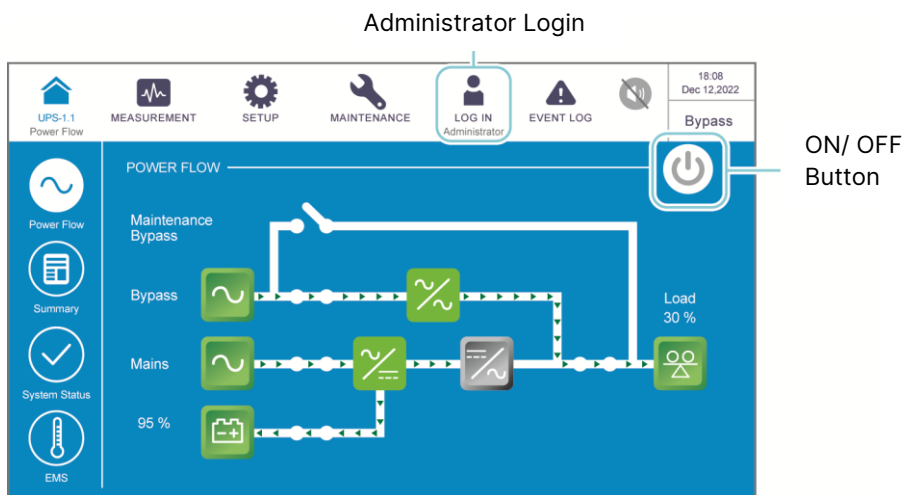


#### Step 5

Go to **SETUP** → **Mode Setting** → **Frequency Conversion**.



#### WARNING:

Once you select '**Frequency Conversion**' mode, the UPS will run in Standby mode and the output will be terminated.

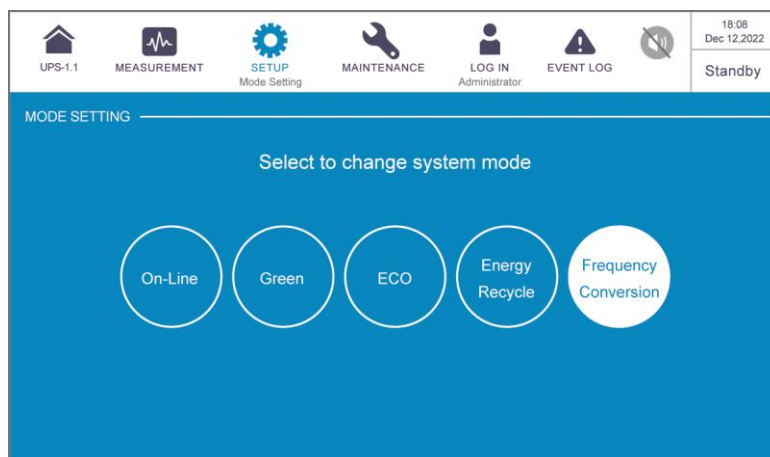


#### Step 6

Tap the icon (UPS-1.1) to go back to the **Main Screen** and tap the **ON/ OFF Button** (power button icon).

## Step 7

After the inverter turns on, the UPS will run in Frequency Conversion mode, the output frequency will be the same as the setup value, the LCD screen will show as below, and the tri-color LED indicator will illuminate green.

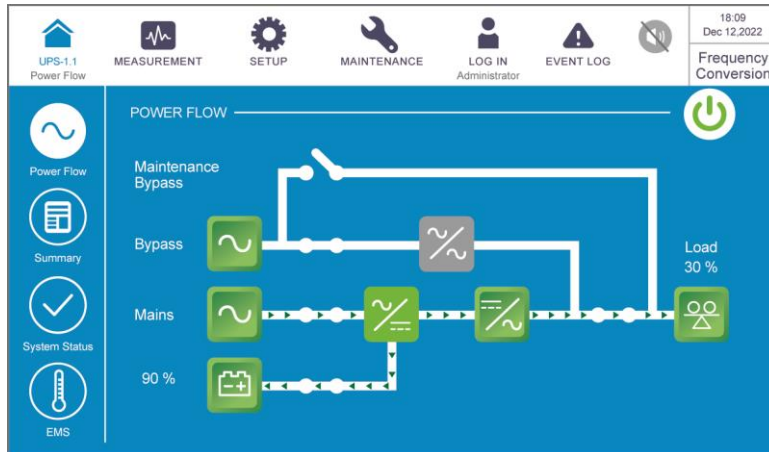

### 6.2.7 Green Mode Start-up Procedures



#### WARNING:

Before turning on the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Ensure that the Manual Bypass Switch (Q3) is in the **OFF** position.

#### Step 2

Switch **ON** every external battery cabinet's breaker (Q5).

#### Step 3


Switch **ON** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4).

If the bypass input is within the normal range, the UPS will run in Bypass mode.

#### Step 4


Log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

## Administrator Login

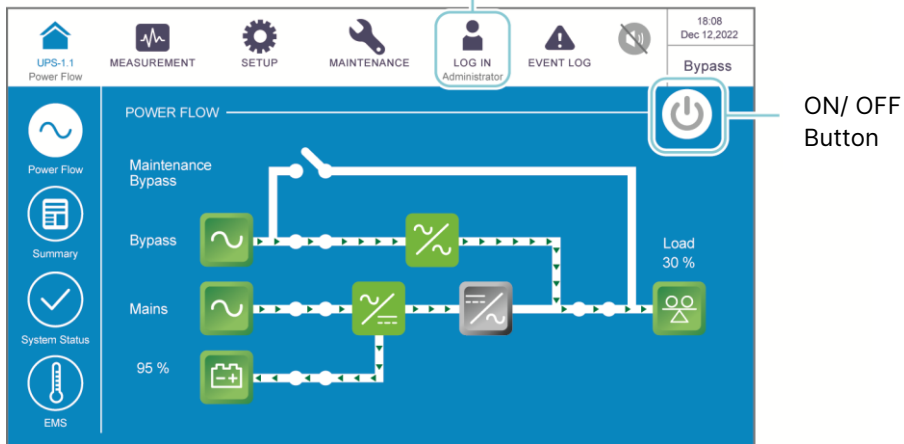

### Step 5

Go to **SETUP** → **Mode Setting** → **Green**.

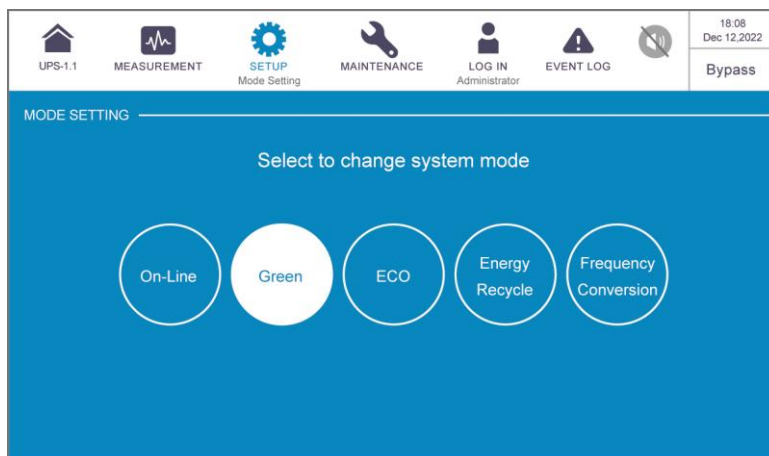


### Step 6

Tap the icon (🏠) to go back to the **Main Screen** and tap the **ON/ OFF Button** (🔌).

### Step 7

Now, the UPS automatically transfers to run in Green mode and the system automatically detects the output status (i.e. total load capacity %) to decide which specific power module(s) should be fully powered on or idle in order to achieve higher efficiency of the UPS. The LCD screen shows as below, and the tri-color LED indicator illuminates green.

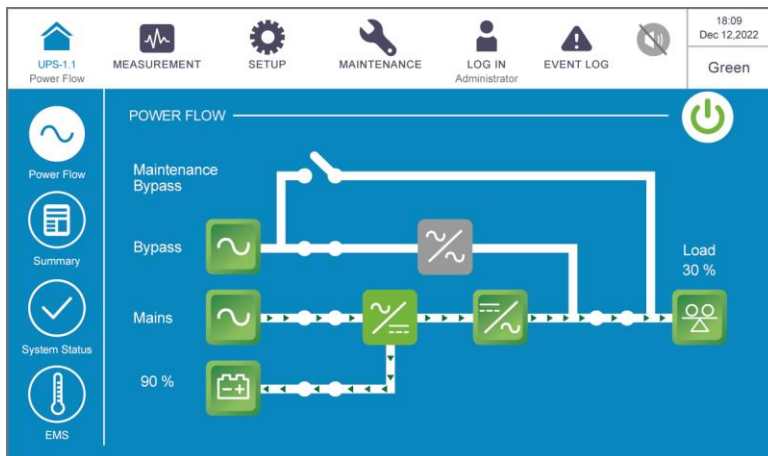

## 6.2.8 Energy Recycle Mode Start-up Procedures



### WARNING:

Energy Recycle mode is only applicable to single input and single unit application.

### Step 1

Ensure that the Manual Bypass Switch (Q3), Output Switch (Q4) and every external battery cabinet's breaker (Q5) are in the **OFF** position.

### Step 2


Switch **ON** the Input Switch (Q1) and Bypass Switch (Q2).

If the bypass input is within the normal range, the UPS will run in Bypass mode.

### Step 3

Log in as an **Administrator**. For the **Administrator** password, please contact service personnel.


#### Administrator Login

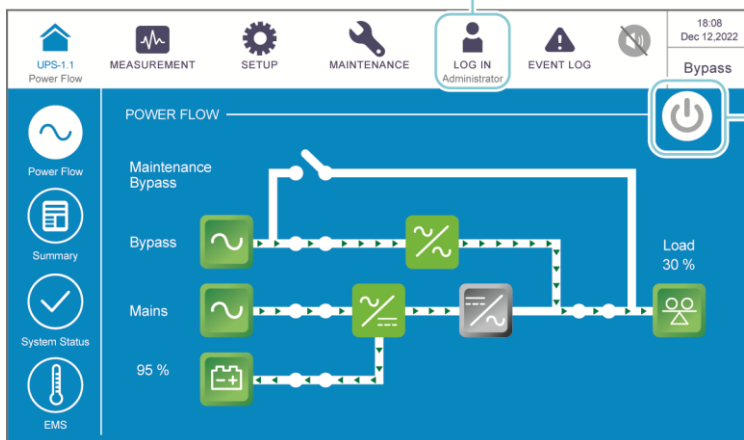

ON/ OFF  
Button

#### Step 4

Go to **SETUP** → **Mode Setting** → **Energy Recycle**.

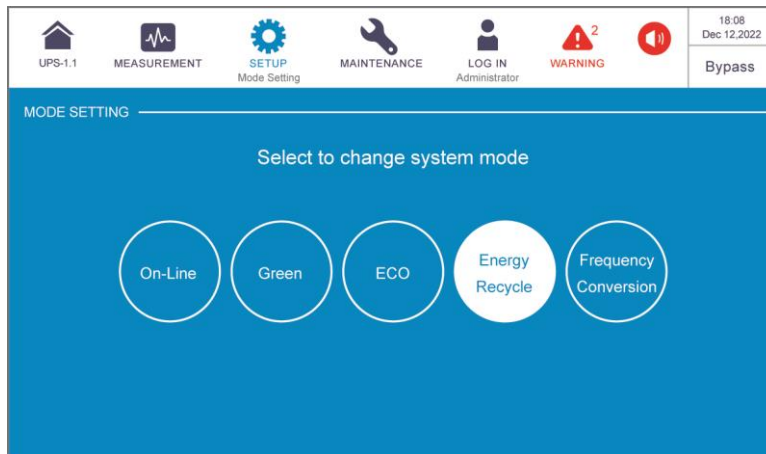


#### Step 5

Tap the icon (🏠) to go back to the **Main Screen** and tap the **ON/ OFF Button** (🔌).

#### Step 6

Now, the UPS automatically transfers to run in Energy Recycle mode. The LCD screen shows as below, and the tri-color LED indicator illuminates yellow.

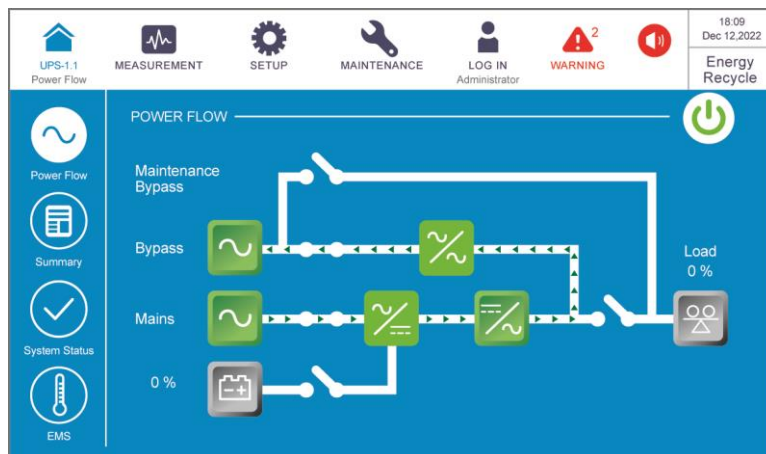



## 6.3 Turn-off Procedures


### 6.3.1 On-Line Mode Turn-off Procedures



#### WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Tap the **ON/ OFF Button** () to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

#### Step 2

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4). After that, the UPS will run in Standby mode.

#### Step 3

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

#### Step 4

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

#### Step 5

Switch **OFF** every external battery cabinet's breaker (Q5).


### 6.3.2 Battery Mode Turn-off Procedures



#### WARNING:

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

#### Step 1

Please make sure that the critical loads connected to the UPS have already been safely shut down. After confirmation, tap the **ON/ OFF Button** () to shut down the UPS's inverter. Note that once you turn off the inverter, all the output power will be completely cut off, and the UPS will transfer to Standby mode.

#### Step 2

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4).

### Step 3

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

### Step 4

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

### Step 5

Switch **OFF** every external battery cabinet's breaker (Q5).

## 6.3.3 Bypass Mode Turn-off Procedures



### **WARNING:**

Before turning off the UPS, please read *6.1 Pre Start-up & Pre Turn-off Warnings* thoroughly and ensure that the precautions and instructions have been followed.

### Step 1

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4). After that, the UPS will run in Standby mode.

### Step 2

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

### Step 3

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

### Step 4

Switch **OFF** every external battery cabinet's breaker (Q5).

## 6.3.4 Manual Bypass Mode Turn-off Procedures



### **WARNING:**

1. Ensure that the LCD, all LED indicators and fans are **OFF**.
2. Check that all the switches, breakers and power are **OFF**.

In Manual Bypass mode, the LCD and tri-color LED indicator are both **OFF**. To completely shut down the UPS, switch **OFF** the Manual Bypass Switch (Q3).

## 6.3.5 ECO Mode Turn-off Procedures



### WARNING:

Before turning off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

### Step 1


Tap the **ON/ OFF Button** (🔌) to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

### Step 2

Log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

### Step 3

Go to **SETUP** → **Mode Setting** → **On-Line**.

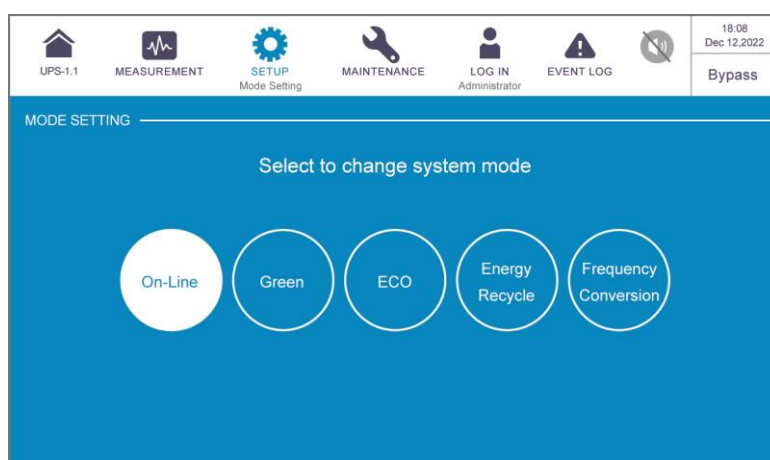

### Step 4

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4). After that, the UPS will run in Standby mode.

### Step 5

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

### Step 6

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

### Step 7

Switch **OFF** every external battery cabinet's breaker (Q5).


## 6.3.6 Frequency Conversion Mode Turn-off Procedures



### WARNING:

Before turning off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

### Step 1


Please make sure that the critical loads connected to the UPS have already been safely shut down. After confirmation, tap the **ON/ OFF Button** () to shut down the UPS's inverter. Note that once you turn off the inverter, all the output power will be completely cut off, and the UPS will transfer to Standby mode. Now, the power modules keep charging the batteries.

### Step 2

Switch OFF the Output Switch (Q4) and log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

### Step 3

Go to **SETUP** → **Mode Setting** → **On-Line**. If the bypass voltage is in the normal range, the UPS will run in Bypass mode to let the bypass AC source supply power to the output.

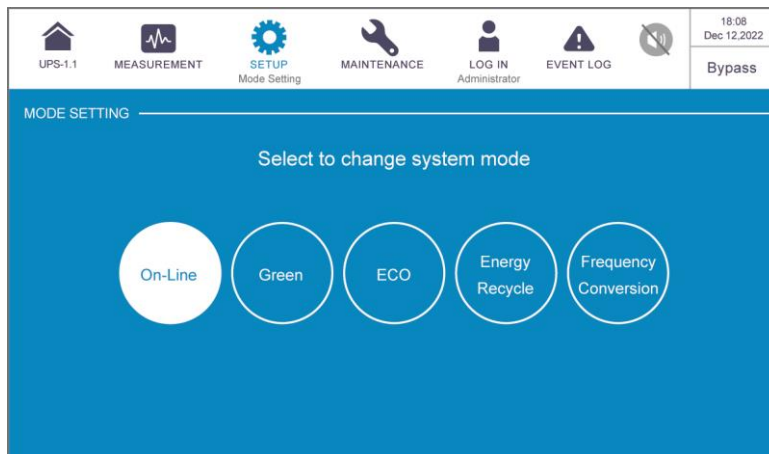

### Step 4

Switch **OFF** the Input Switch (Q1) and Bypass Switch (Q2).

### Step 5

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

## Step 6

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

## Step 7

Switch **OFF** every external battery cabinet's breaker (Q5).


### 6.3.7 Green Mode Turn-off Procedures



#### **WARNING:**

Before turning off the UPS, please read **6.1 Pre Start-up & Pre Turn-off Warnings** thoroughly and ensure that the precautions and instructions have been followed.

## Step 1


Tap the **ON/ OFF Button** () to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

## Step 2

Log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

## Step 3

Go to **SETUP** → **Mode Setting** → **On-Line**.

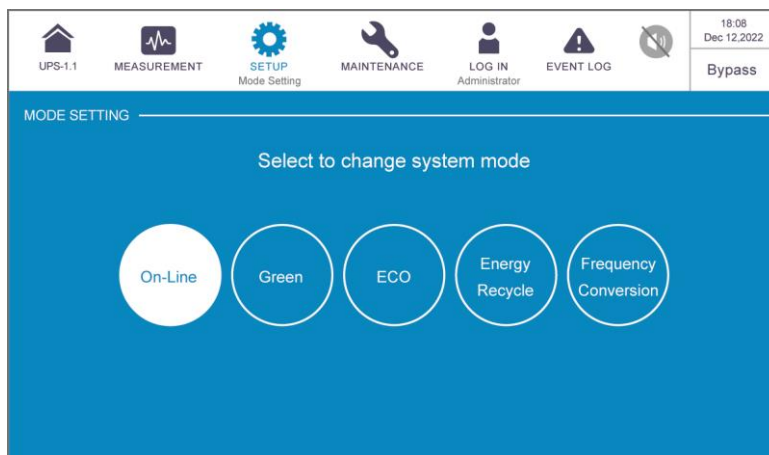

## Step 4

Switch **OFF** the Input Switch (Q1), Bypass Switch (Q2) and Output Switch (Q4). After that, the UPS will run in Standby mode.

### Step 5

Now, each power module performs DC BUS discharging and its LED indicator flashes green. After discharging, each power module's LED indicator will be off.

### Step 6

About 3 minutes later, the UPS will shut down, and the LCD and the tri-color LED indicator will be off.

### Step 7

Switch **OFF** every external battery cabinet's breaker (Q5).


## 6.3.8 Energy Recycle Mode Turn-off Procedures



#### **WARNING:**

Energy Recycle mode is only applicable to single input and single unit application.

### Step 1


Tap the **ON/ OFF Button** () to shut down the UPS's inverter. After that, the UPS will let the bypass AC source supply power. At the moment, if the bypass is abnormal, there is a risk of output interruption.

### Step 2

Please log in as an **Administrator**. For the **Administrator** password, please contact service personnel.

### Step 3

Go to **SETUP** → **Mode Setting** → **On-Line**.

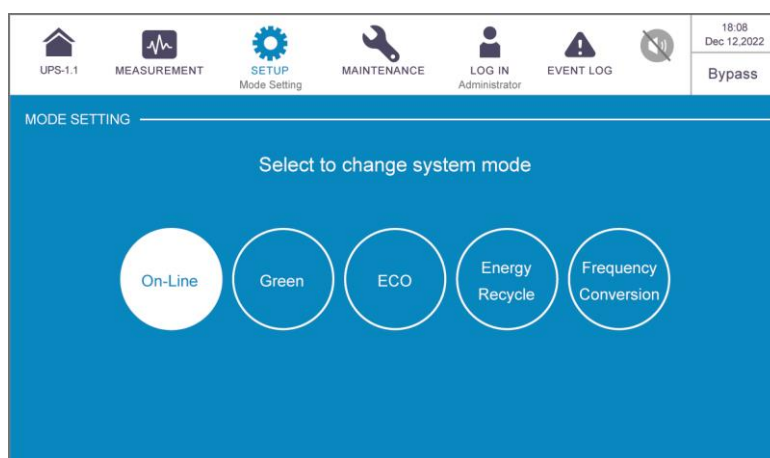


### Step 4


Switch **OFF** the Input Switch (Q1) and Bypass Switch (Q2).

# Chapter 7: LCD Display & Settings


## 7.1 LCD Display Hierarchy

Please refer to **Figure 7-1** for an overview of all the LCD items. For some of the items marked with an asterisk, they will show up only under certain conditions. Please refer to the note below for details.

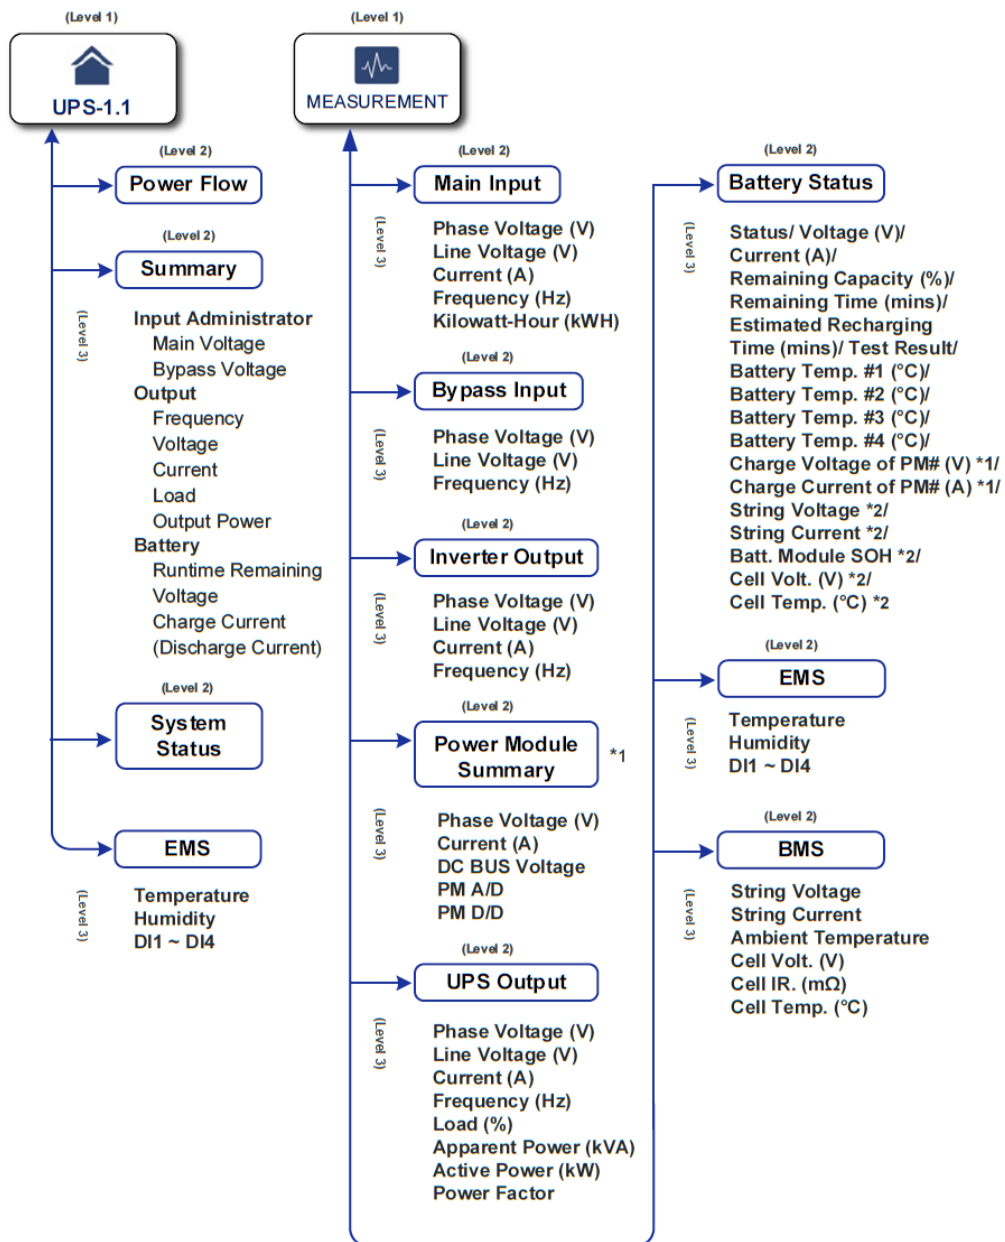

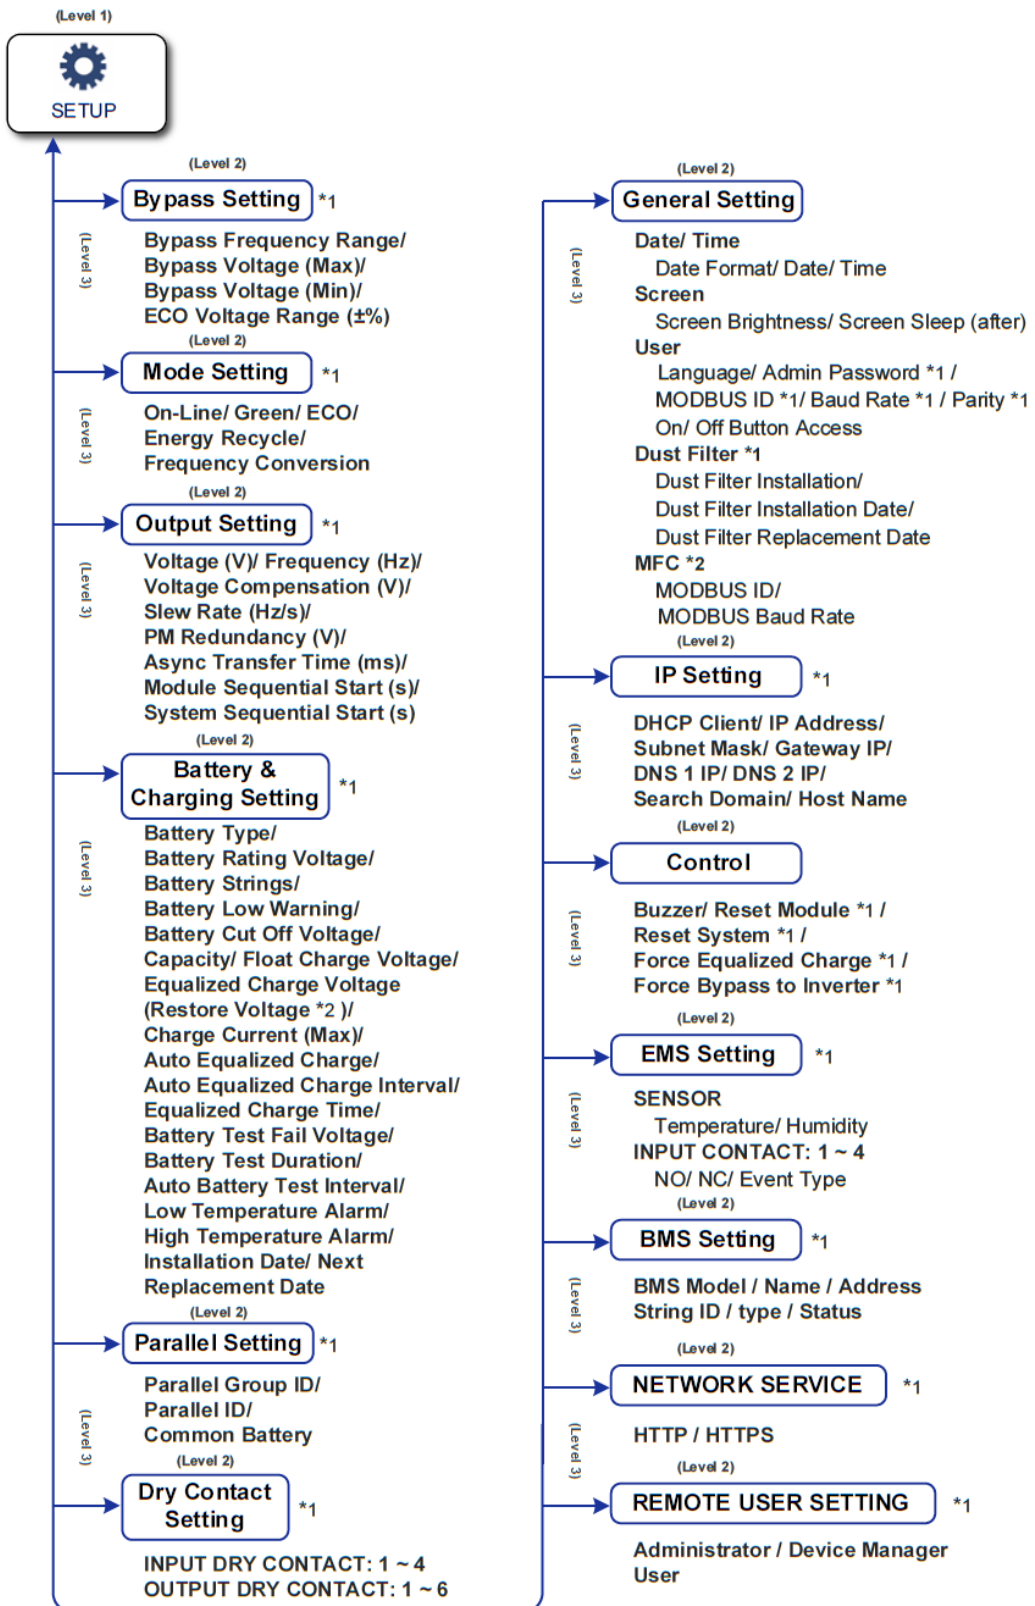



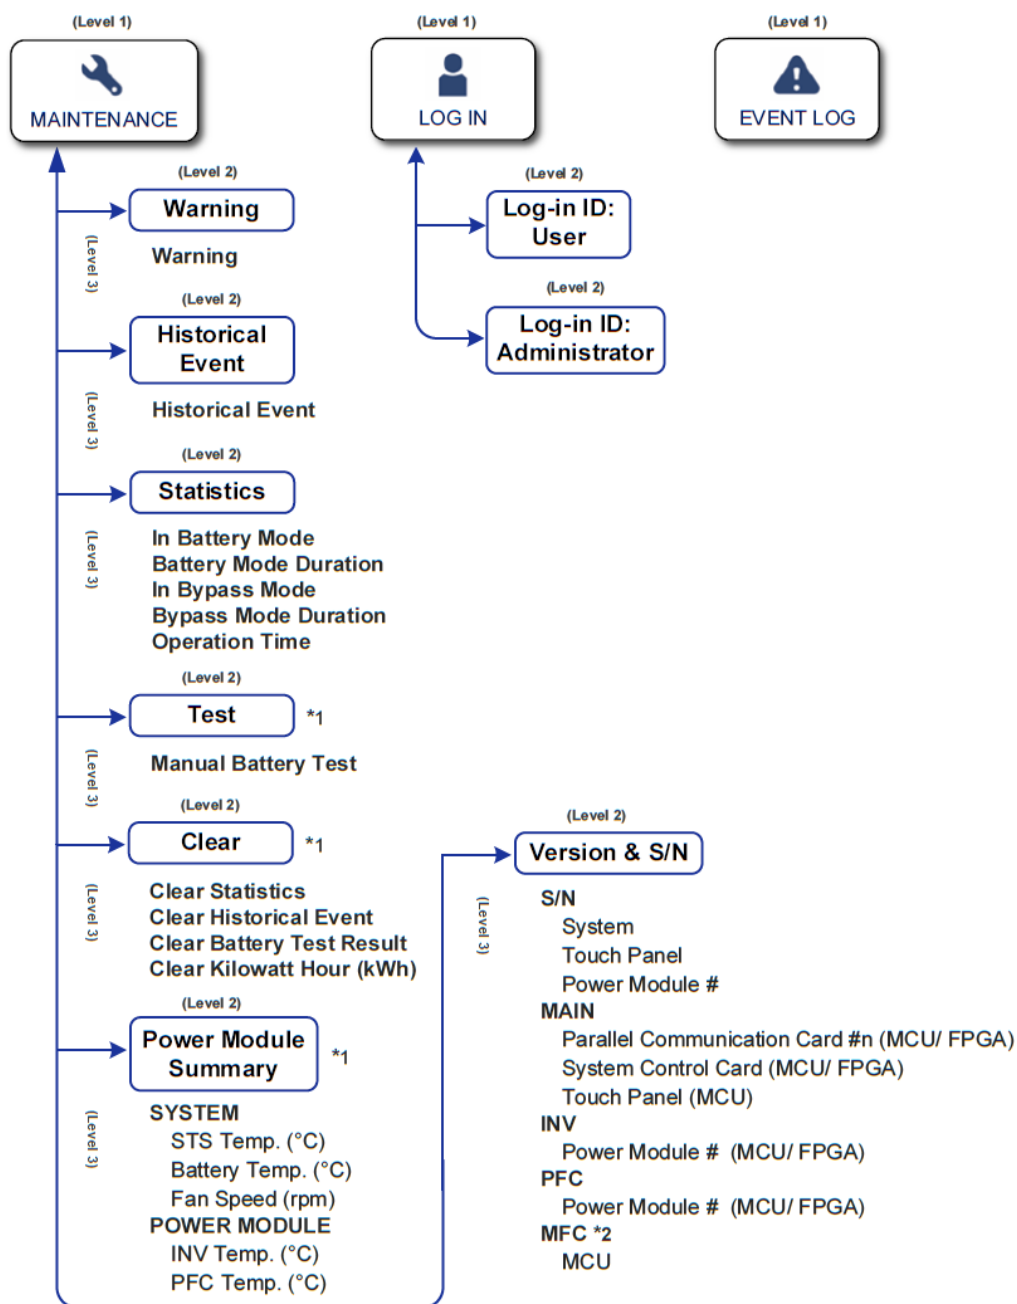

(Figure 7-1: LCD Display Hierarchy)



#### NOTE:

1. For **BMS/ BMS Setting** and **EMS/ EMS Setting**, the functions will be activated only after proper installation and settings of the optional accessories have been completed. For details, refer to **8. Optional Accessories**.
2. \*<sup>1</sup> To display the item(s), you have to log in as **Administrator**. Please refer to **7.4 Password Entry**.  
\*<sup>2</sup> the item will only appear on the LCD if you use the Delta lithium-ion batteries with the optional multifunctional communication card (MFC) being installed in the smart slot.
3. The LCD screen diagrams in the user manual are for reference only. The actual display depends on the operation situation.



## 7.2 How to Turn on the LCD


### Step 1

Perform one of the options (a ~ d) below; after that, the LCD will be on.


- a. Turn on the Input Switch (Q1); or
- b. Turn on the Bypass Switch (Q2); or
- c. Turn on the Input Switch (Q1) and Bypass Switch (Q2); or
- d. Turn on the external battery cabinet's breaker (Q5) and press any of the battery start buttons (**Figure 4-1**) for 1 second and release it.



### Step 2

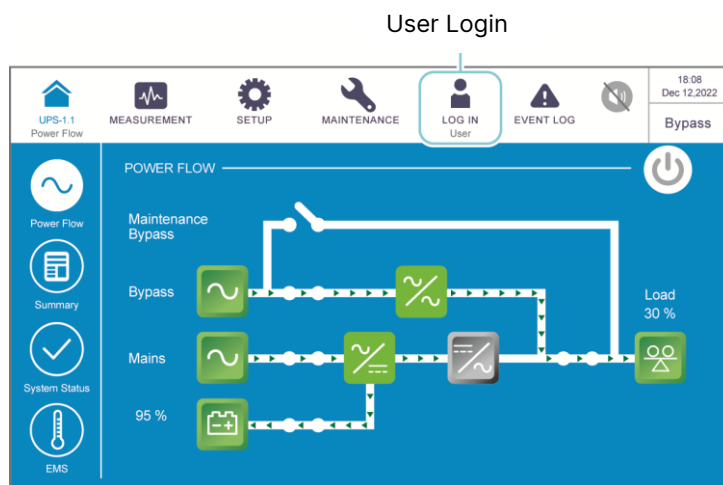



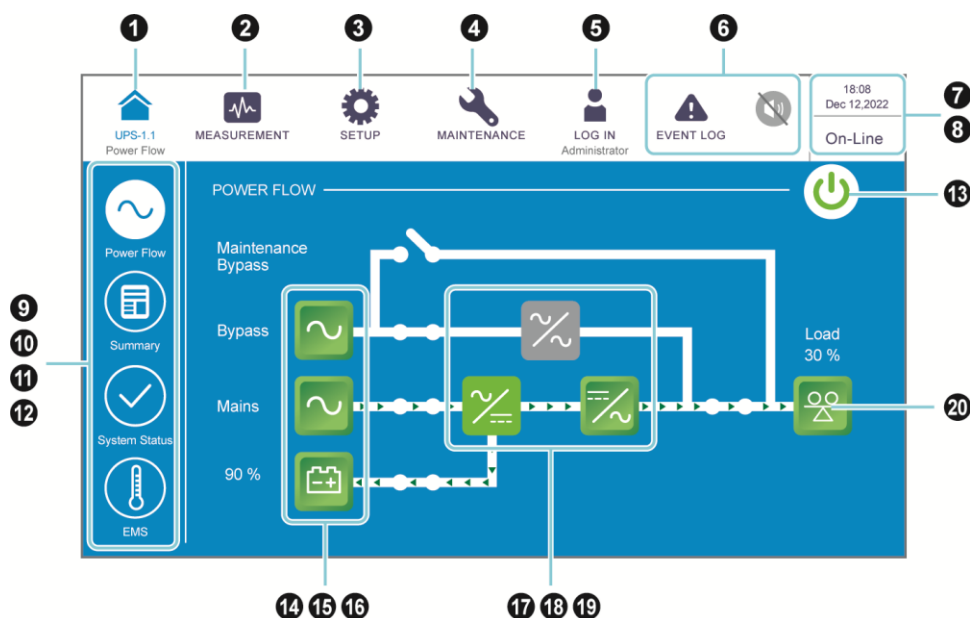



If the **ON/ OFF Button** (  ) does not appear on the screen, please log in as **Administrator** first, and then go to  → **General Setting** → **User** → **On/ Off Button Access** to change the setting.











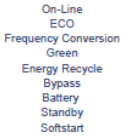











## 7.3 Introduction of Touch Panel and Function Keys








No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
1	 UPS-1.1	✓	✓		<p>Tap the button to go back to the <b>Main Screen</b>. The figure (UPS-1.1) below the icon () indicates the parallel group ID no. (former) and the parallel ID no. (latter).</p> <p><b>NOTE:</b></p> <p>On the master UPS's screen, you can check its status and readings as well as the slave UPSs' partial statuses and readings.</p> <p>On a slave UPS's screen, you can only check its own status and readings.</p>



















No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
2	 MEASUREMENT	✓			Tap the button to open the measurement menu. For the menu items, refer to <b>Figure 7-1</b> .
3	 SETUP	✓			Tap the button to open the setup menu. For the menu items, refer to <b>Figure 7-1</b> . For details, refer to <b>7.6 UPS Settings</b> .
4	 MAINTENANCE	✓			Tap the button to open the maintenance menu. For the menu items, refer to <b>Figure 7-1</b> . For details, refer to <b>7.7 System Maintenance</b> .
5	 LOG IN User	✓		✓	Indicates <b>User</b> login status. Tap the icon to change the login permission. Please refer to <b>7.5 Password Entry</b> .
	 LOG IN Administrator	✓		✓	Indicates <b>Administrator</b> login status. Tap the icon to change the login permission. Please refer to <b>7.5 Password Entry</b> .
6	 EVENT LOG	✓		✓	<ol style="list-style-type: none"> <li>1. Historical event screen shortcut button (  ).</li> <li>2. When the icon is blue (  ), it means there is no warning event.</li> </ol>

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
6		✓	✓	✓	<ol style="list-style-type: none"> <li>Warning screen shortcut button (  ) &amp; buzzer icon (  ).</li> <li>When the icon is red (  ), it indicates that there is a warning event. At this time, the buzzer will sound and the buzzer icon will appear in red (  ). The numerical value at the upper right of the icon (  ) indicates the total number of the warning events. To mute the buzzer, tap the icon (  ), and the icon will become gray (  ). If there is any new warning event happening afterwards, the buzzer will sound and the icon (  ) will appear and light up again.</li> </ol>
7			✓		Indicates the time and date.
8			✓		Indicates the UPS's current operation mode.
9		✓			Tap the button to check the power flow diagram and the operation status of the UPS.
10		✓			Tap the button to check the <b>Input</b> , <b>Output</b> , and <b>Battery</b> summary status of the UPS.

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
11		✓			Tap the button to check the status of each power module, parallel communication card, system control card, and auxiliary power card. For more information, please refer to <b>7.8 Power Flow, Summary, System Status &amp; EMS</b> .
12		✓			Tap the button to check the EMS status. To enable the function, you have to connect an optional EMS 1000 (EnviroProbe) to the UPS and complete relevant settings. For details, refer to <b>8. Optional Accessories</b> .
13		✓		✓	ON/ OFF Button. The gray icon (  ) indicates that the inverter is OFF.  The green icon (  ) indicates that the power-on process is completed and the inverter is ON.
14		✓		✓	1. Indicates bypass input status (Green: Normal/ Red: Abnormal or OFF). 2. Bypass input screen shortcut button.
15		✓		✓	1. Indicates main input status (Green: Normal/ Red: Abnormal or OFF). 2. Main input screen shortcut button.

No.	Icon/ Text	Button Function (Yes or No)	Text/ Digital Display (Yes or No)	Symbol Display (Yes or No)	Description
16		✓	✓	✓	<ol style="list-style-type: none"> <li>1. Indicates battery status (Green: Normal/ Flashing Green &amp; Gray: Battery Mode/ Flashing Red &amp; Gray: Battery Not Connected).</li> <li>2. Shows battery remaining capacity (%) and battery remaining time (minutes).</li> <li>3. Battery status screen shortcut button.</li> </ol>
17				✓	Indicates bypass static switch status (Green: ON/ Gray: Abnormal or OFF).
18				✓	Indicates rectifier status (Green: Normal/ Gray: Waiting or OFF).
19		✓		✓	<ol style="list-style-type: none"> <li>1. Indicates inverter status (Green: Normal/ Gray: Waiting or OFF).</li> <li>2. Inverter output screen shortcut button.</li> </ol>
20		✓	✓	✓	<ol style="list-style-type: none"> <li>1. Indicates output status (Green: Normal/ Gray: No Output).</li> <li>2. Shows load capacity (%).</li> <li>3. UPS output screen shortcut button.</li> </ol>



Other icons on the touch panel are shown in the table below.

No.	Icon	Function
1		Goes to the top page.
		
2		Goes to the last page.
3		Moves up.
		
4		Moves down.
		
5		Goes to the previous page.
		
6		Goes to the next page.
		
7		Increase.
8		Decrease.
9		1. Indicates the page no. 2. Choose to go to a specific page no.
10		Delete.
		
11		Capital.
12		Space.








#### NOTE:


1. After the backlight is turned off, you can tap the LCD to return to the **Main Screen**.
2. The sleep time for the backlight can be adjusted. Please go to  **→ General Setting → Screen → Screen Sleep (after)**.
3. If you are logged in as **Administrator**, you will be logged out when the backlight is off. Tap to wake up the LCD screen, and it will go back to the **Main Screen** in the **User** login status. Even if you set up the backlight in 'Never Sleep' mode, you will still be logged out after the screen is idle for 5 minutes.
4. The default language is English (which differs according to countries). To change the display language, please go to  **→ General Setting → User → Language**.



## 7.4 Password Entry

1. **Administrator** login requires a password while **User** login does not.
2. Tap  **→** enter the **Administrator** password (contact service personnel for the default password) **→** the icon  appears, indicating the **Administrator** login is successful.
3. To change the **Administrator** password, please go to  **→ General Setting → User → Admin Password** (4 digits).

## 7.5 Check Kilowatt-Hour

Path:  **→ Main Input → kWh Icon** ()

Tap the kWh icon () , and you can check the **kWh statistics** of the UPS main input in the following window.

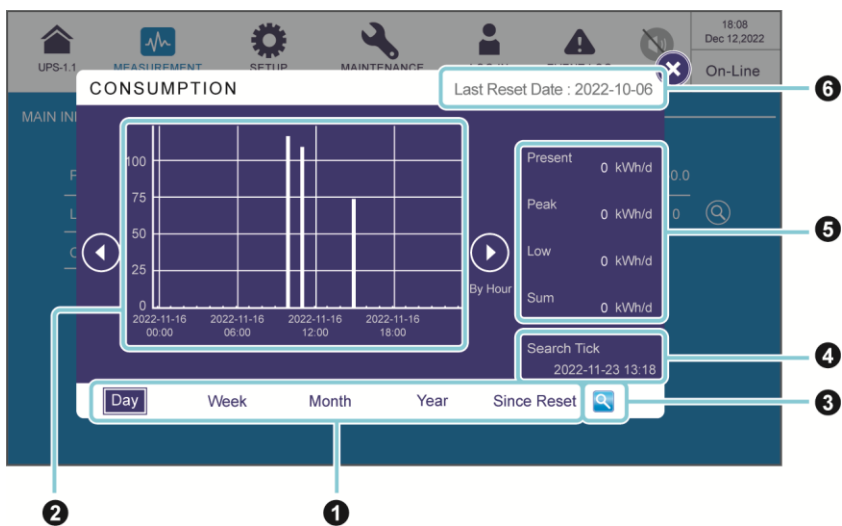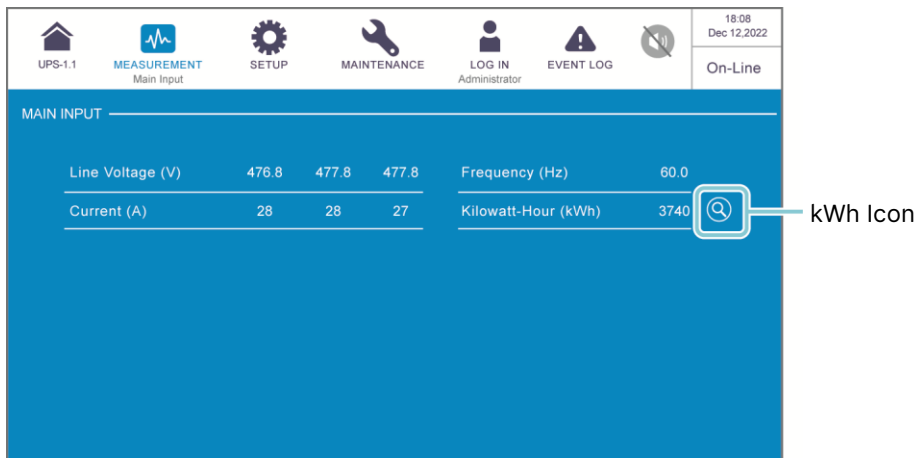

No.	Item	Description
1	Sheet Tabs (Day/ Week/ Month/ Year/ Since Reset)	Tap the sheet tabs to view the kWh statistics and column charts of different time scales.
2	Column Chart	<ol style="list-style-type: none"> <li>Shows the UPS's main input kWh statistics, with time on X-axis and kWh on Y-axis.</li> <li>Tap the column on the chart, and the corresponding piece of data will appear below the chart.</li> </ol>
3	Search Tick Setup Icon (🔍)	Tap (🔍), and you can set the date and time for the 'Search Tick' to view the corresponding column chart.

No.	Item	Description
4	Search Tick	Shows the date and time that has been set via (🔍).
5	Present/ Peak/ Low/ Sum (kWh/d)	Regardless of different kWh statistics sheets, these four items only indicate today's statistics: the present value/ the highest value (so far)/ the lowest value (so far)/ the sum (so far).
6	Last Reset Date	The last date when 'Clear Kilowatt Hour' was executed.

## 7.6 UPS Settings


This chapter lists all the UPS setting items for your reference (not including the setting items for the optional accessories). Some items will show up only under certain conditions. Please refer to *7.1 LCD Display Hierarchy* for details.


### 7.6.1 Bypass Setting

Path:  → Bypass Setting

Item	Description
Bypass Frequency Range	Set up the bypass output's frequency range.
Bypass Voltage (Max.)	Set up the bypass output's maximum voltage.
Bypass Voltage (Min.)	Set up the bypass output's minimum voltage.
ECO Voltage Range	Set up the bypass output's voltage range in ECO mode.

## 7.6.2 Mode Setting

Path:  → Mode Setting

Item	Description
On-Line Mode	Set up the UPS in On-Line mode. In On-Line mode, it is the inverter to supply power to the connected loads.
Green Mode	Set up the UPS in Green mode. In Green mode, it is the inverter to supply power to the connected loads and the power modules take turn to rest according to the situation of total load capacity.
ECO Mode	Set up the UPS in ECO mode. In ECO mode, it is the bypass to supply power to the connected loads. It is suggested that you set the UPS in ECO mode only when there is stable main AC power. Otherwise, power supply quality will be compromised.
Energy Recycle Mode	Set up the UPS in Energy Recycle mode. In Energy Recycle mode, the full load output can be simulated for the aging test without real output to the loads.
Frequency Conversion Mode	<p>Set up the UPS in Frequency Conversion mode. In Frequency Conversion mode, it is the inverter to supply power to the connected loads with a fixed output frequency. Please note that the output will be terminated once the inverter is turned off.</p> <p> <b>NOTE:</b> Frequency Conversion mode is only applicable to single UPS but not to parallel UPSs.</p>


### 7.6.3 Output Setting



Path:  → Output Setting

Item	Description
Voltage	Set up the output voltage.
Voltage Compensation	When the UPS is distant from the loads and there is a voltage drop in the output, you can adjust the INV output voltage amplitude for voltage compensation.
Frequency	Set up the output frequency as 50Hz (default) or 60Hz. The system will automatically select the output frequency in accordance with the bypass power.
Slew Rate	Set up the maximum permissible speed for the system output frequency to catch up with the bypass frequency variation.
Power Module Redundancy	Set up how many power modules that need to be preserved for redundancy.
Synchronous Transfer Time	When (1) the inverter is not synchronized with the bypass and (2) the loads need to be transferred to the bypass source, there will be an interrupted transfer time according to this setup value.
Module Sequential Start	Set up the time interval for every power module to be transferred from Battery mode to On-Line mode. The setup will help the generator to handle the whole loads in a sequential manner to avoid generator shutdown due to sudden inrush current.
System Sequential Start	Set up the time interval for the system to be transferred from Battery mode to On-Line mode. The setup will help the generator to handle the whole loads in a sequential manner to avoid generator shutdown due to sudden inrush current.

## 7.6.4 Battery & Charging Setting

Path:  → Battery & Charging Setting

Item	Description
Battery Type	<p>Set up the battery type as <b>VRLA/ LiB (Dry Contact)*1/ LiB (Integration)*2</b>.</p> <p> <b>NOTE:</b></p> <ol style="list-style-type: none"> <li>*1 If you use non-Delta lithium-ion batteries, please set up the battery type as '<b>LiB (Dry Contact)</b>'. Please refer to <b>4.1.6 Input Dry Contacts</b> and <b>7.10.6 Dry Contact Setting</b>. For more information about configurations of the lithium-ion batteries, please contact Delta customer service.</li> <li>*2 If you use the Delta lithium-ion batteries, please set up the battery type as '<b>LiB (Integration)</b>'. The item '<b>LiB (Integration)</b>' will appear on the LCD only if you use the Delta lithium-ion batteries with the optional multifunctional communication card (MFC) being installed in the SMART slot. Please contact Delta customer service if you need more information.</li> </ol>
Battery Rating Voltage	Set up the battery voltage rating.
Battery Strings	Set up how many battery strings that are used on site.
Battery Low Warning	Set up the battery low warning voltage.
Battery Cut Off Voltage	Set up the battery low voltage. In Battery mode, when the battery low voltage is reached, the battery power will be cut off, and the inverter of the UPS will shut down. The loads will then be transferred to bypass if the bypass is available; otherwise, the UPS will shut down.
Capacity	Set up the battery capacity.
Float Charge Voltage	Set up the float charge voltage.

Item	Description
Equalized Charge Voltage	<p>Set up the equalized charge voltage.</p> <p> <b>NOTE:</b> The item will only show up if the <b>Battery Type</b> is set as '<b>VRLA</b>'.</p>
Restored Voltage	<p>Set up the restored voltage.</p> <p> <b>NOTE:</b></p> <ol style="list-style-type: none"> <li>1. The item will only show up if the <b>Battery Type</b> is set as '<b>LiB (Integration)</b>'. When the remaining battery voltage reaches the setup restored voltage, the UPS will automatically activate the charger to re-charge the batteries.</li> <li>2. If the <b>Battery Type</b> is set as '<b>LiB (Dry Contact)</b>', the item will not show up.</li> </ol>
Charge Current (Max)	Set up the maximum charge current.
Auto Equalized Charge	Enable or disable the auto-equalized charge.
Auto Equalized Charge Interval	Set up the auto equalized charge interval.
Equalized Charge Time	Set up the equalized charge time.
Battery Test Fail Voltage	Set up the battery test fail voltage. When the battery voltage is under the test fail voltage, it means battery fail.
Battery Test Duration	Set up how long the battery test should last.
Auto Battery Test Interval	Set up the battery test interval.
Low Temperature Alarm	Enable or disable the low temperature alarm. If enabled, set up the temperature.
High Temperature Alarm	Enable or disable the high temperature alarm. If enabled, set up the temperature.
Installation Date	Record the battery installation date.

Item	Description
Next Replacement Date	Set up the battery replacement date.

### 7.6.5 Parallel Setting

Path:  → Parallel Setting

Item	Description
Parallel Group ID	The UPSs in parallel connection must be assigned the same parallel group ID no. in order to let the outputs of the parallel UPSs be put in parallel connection and let the loads be evenly distributed among the parallel units. If the parallel UPSs have different parallel group ID no., their output signals might be synchronized but their outputs cannot be connected in parallel.
Parallel ID	The UPSs that need to be paralleled must be assigned the same parallel group ID no. and different parallel ID no. in order to let the parallel function work.
Common Battery	If the parallel UPSs that have the same parallel group ID no. need to share common batteries, please select ' <b>Enable</b> ' for the ' <b>Common Battery</b> ' setup item. Otherwise, the function of battery abnormality detection will fail. For more information about common battery, please refer to <b>5.5 External Battery Cabinet Connection Warnings</b> .



## 7.6.6 Dry Contact Setting

Path:  → Dry Contact Setting


Input Dry Contact No.	Event Selection	Type
<b>Input Dry Contact 1</b> <b>Input Dry Contact 2</b> <b>Input Dry Contact 3</b> <b>Input Dry Contact 4</b>	1. None 2. Generator Status 3. Battery Ground Fail 4. External Battery Breaker Detection 5. Charge Off (Positive) 6. Charge Off (Negative) 7. Battery Abnormal Shutdown 8. Input Transformer OTW 9. Output Transformer OTW 10. Battery Fuse Open 11. Charge Off	Set up NO (normally open) or NC (normally closed) for each input dry contact.



Output Dry Contact No.	Event Selection	Type
<b>Output Dry Contact 1</b> <b>Output Dry Contact 2</b> <b>Output Dry Contact 3</b> <b>Output Dry Contact 4</b> <b>Output Dry Contact 5</b> <b>Output Dry Contact 6</b>	1. None 2. Load On Inverter 3. Load On Bypass 4. Load On Battery 5. Battery Low 6. Battery Input Abnormal 7. Battery Test Fail 8. Internal Comm. Fail 9. External Parallel Comm. Fail (only applicable to parallel application) 10. Output Overload	Set up NO (normally open) or NC (normally closed) for each output dry contact.

Output Dry Contact No.	Event Selection	Type
<b>Output Dry Contact 1</b> <b>Output Dry Contact 2</b> <b>Output Dry Contact 3</b> <b>Output Dry Contact 4</b> <b>Output Dry Contact 5</b> <b>Output Dry Contact 6</b>	11. EPO Activated 12. Load On Manual Bypass 13. Battery Over Temperature 14. Output Voltage Abnormal 15. Battery Need Replacement 16. Bypass Over Temperature 17. Bypass Static Switch Fault 18. UPS Over Temperature 19. Battery Breaker Shunt Trip 20. Backfeed Protection 21. General Alarm	Set up NO (normally open) or NC (normally closed) for each output dry contact.


### 7.6.7 General Setting

Path:  → General Setting

Item	Sub Item	Description
<b>DATE/ TIME</b>	Date Format	Select the date format.
	Date	Set up the date.
	Time	Set up the time.
<b>SCREEN</b>	Screen Brightness	Adjust the LCD display brightness (default: 80).
	Screen Sleep (after)	Set up the LCD backlight sleep time (default: 1 minute).
<b>USER</b>	Language	Set up the display language (default: English).
	On/ Off Button Access	Set up the access for the <b>ON/ OFF Button</b> (  ) as ' <b>Any User</b> ' or ' <b>Administrator Only</b> '.
	Admin Password	Set up the administrator password (4 digits).

Item	Sub Item	Description
USER	MODBUS ID	Set up the MODBUS ID for the MODBUS port located at the rear of the touch panel.
	Baud Rate	Set up the baud rate for the MODBUS port located at the rear of the touch panel.
	Parity	Setup the parity checking scheme for the MODBUS port located at the rear of touch panel.
DUST FILTER	Dust Filter Installation	If you have installed any dust filter, please select ' <b>Enable</b> '; if not, please select ' <b>Disable</b> '.
	Dust Filter Installation Date	Set up the dust filter installation date.  <b>NOTE:</b> Only when you select ' <b>Enable</b> ' for ' <b>Dust Filter Installation</b> ' can you set up the item.
	Dust Filter Replacement Date	Set up the dust filter replacement date. When the date is due, the red warning icon (⚠) will automatically appear in the upper right corner of the LCD, and the alarm message ' <b>Replace Dust Filter</b> ' will be displayed.
	Dust Filter Replacement Date	 <b>NOTE:</b> Only when you select ' <b>Enable</b> ' for ' <b>Dust Filter Installation</b> ' can you set up the item.





## 7.6.8 IP Setting

Path:  → IP Setting

Item	Description
DHCP Client	Enable or disable the DHCP client.
IP Address	Set up the IP address.
Subnet Mask	Set up the subnet mask.
Gateway IP	Set up the gateway IP address.
DNS 1 IP	Set up the DNS server 1 IP address.
DNS 2 IP	Set up the DNS server 2 IP address.
Search Domain	Set up the search domain.
Host Name	Set up the host name.

## 7.6.9 Control

Path:  SETUP → Control

Item	Description
Buzzer	Enable or disable the buzzer.
Reset Module	<p>Reset the power modules or not.</p> <p>In Bypass mode, when you tap the <b>ON/ OFF Button</b> () to start up the UPS but the UPS does not respond, please select '<b>Reset</b>' to reset the power modules. After the power modules are reset, please tap the <b>ON/ OFF Button</b> () to start up the UPS.</p>
Reset System	<p>Reset the system or not.</p> <p>In Bypass mode, when you tap the <b>ON/ OFF Button</b> () to start up the UPS but the UPS does not respond, please select '<b>Reset</b>' to reset the system. After the system is reset, please tap the <b>ON/ OFF Button</b> () to start up the UPS.</p>
Force Equalized Charge	Manually force the UPS to run in auto equalized charge mode to charge the batteries.
Force Bypass to Inverter	Manually force the UPS to switch from bypass to inverter when the inverter keeps staying in the soft-start status and is unable to transfer to On-Line mode successfully.

## 7.6.10 Network Service

Path:  SETUP → Network Service

Item	Description
HTTP	Enable or disable HTTP service.
HTTPS	Enable or disable HTTPS service.

## 7.6.11 Remote User Setting


Item	Sub Item	Description
Remote User Setting	Administrator	Set up the Administrator's account name, password and login limitation.
	Device Manager	Set up the Device Manager's account name, password and login limitation.
	User	Set up the User's account name, password and login limitation.

## 7.7 System Maintenance


### 7.7.1 Warning





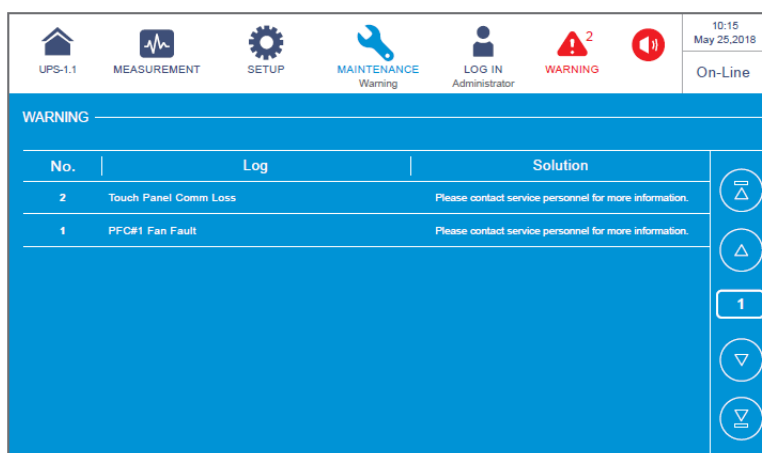

















Path 1:  → Warning

Path 2: When there is a warning, the buzzer icon (🔊) will light up in red, and the buzzer will sound. Tap the warning icon (⚠️<sup>2</sup>) to enter the **WARNING** screen.



## 7.7.2 Historical Event

Path:  → Historical Event

 UPS-1.1	 MEASUREMENT	 SETUP	 MAINTENANCE Historical Event	 LOG IN Administrator	 WARNING 2		10:15 May 25, 2018 On-Line
HISTORICAL EVENT							DOWNLOAD
No. ▲	Start Date	Code	Location	Log			
187	2017-10-15 10:27:07	3200-02	STS	Emergency PWR Off			
186	2017-10-15 10:26:52	2519-01	STS	CSU Aux Pwr #2 On Repair			
185	2017-10-15 10:26:36	2518-01	STS	CSU Aux Pwr #1 On Repair			
184	2017-10-15 09:08:59	0129-01	STS	Mains Input Freq Out Range			1
183	2017-10-15 10:27:07	5005-01	STS	No Output			
182	2017-10-15 10:26:52	480A-01	STS	COM Card #2 Absent			
181	2017-10-15 10:26:36	0100-01	STS	Mains Input Volt Out Range			
180	2017-10-15 09:18:45	3200-01	STS	About Emergency PWR Off			

## 7.7.3 Statistics

Path:  → Statistics

Item	Description
In Battery Mode	Means how many times that the UPS runs in battery mode.
Battery Mode Duration	Means how long the UPS runs in battery mode.
In Bypass Mode	Means how many times that the UPS runs in bypass mode.
Bypass Mode Duration	Means how long the UPS runs in bypass mode.
Operation Time	Means how long the UPS has operated.

To clear the statistics, please refer to **7.7.5 Clear**.

## 7.7.4 Test

Path:  → Test

You can perform a manual battery test via the LCD screen.

## 7.7.5 Clear

Path:  → Clear

Item	Description
Clear Statistics	After you select 'Clear' and confirm clearance of statistics, all records of the statistics will be cleared.
Clear Historical Event	After you select 'Clear' and confirm clearance of historical event logs, all historical event logs will be cleared.
Clear Battery Test Result	After you select 'Clear' and confirm clearance of battery test result, the battery test result will be cleared.
Clear Kilowatt Hour (kWh)	After you select 'Clear' and confirm clearance of kilowatt hour records, the kilowatt hour statistics will be cleared.



### NOTE:

The records mentioned above are important information for system analysis and maintenance. Do not clear any of them without the consent of qualified service personnel.

## 7.7.6 Advanced Diagnosis

Path:  → Advanced Diagnosis

After entering the **ADVANCED DIAGNOSIS** screen, you can check:

1. STS temperature, battery temperature, and fan speed of the system.
2. INV temperature and PFC temperature of a specific power module.

Item	Sub Item	Description
System	STS Temp. (°C)	Shows the STS module's SCR temperature.
	Battery Temp. (°C)	Shows the batteries' temperature.
	Fan Speed (rpm)	Shows the fan speed.
Power Module	INV Temp. (°C)	Shows a specific power module's inverter temperature.
	PFC Temp. (°C)	Shows a specific power module's PFC temperature.




## 7.7.7 Version & S/N



### NOTE:



1. To operate the UPSs in parallel, please make sure all the versions below are the same for each parallel unit.

Path:  → Version & S/N

Item	Sub Item	Description
S/N	System	Check the system's serial No.
	Touch Panel	Check the touch panel's serial No.
	Power Module #	Check a specific power module's serial No.
MAIN	Parallel Communication Card #_ MCU/ FPGA	Check and update the MCU or FPGA firmware version of a specific parallel communication card.
	System Control Card_ MCU/ FPGA	Check and update the MCU or FPGA firmware version of the system control card.
	Touch Panel _ MCU	Check and update the touch panel's MCU firmware version.
INV	PM #_ MCU/ FPGA	Check and update the MCU or FPGA firmware version of a specific power module's inverter.
PFC	PM #_ MCU/ FPGA	Check and update the MCU or FPGA firmware version of a specific power module's PFC.

## Chapter 8: Optional Accessories

No.	Item	Function
1	Dust Filter	Prevents dust from entering into the UPS to ensure UPS reliability and to prolong product life.
2	Relay I/O Card	Increases the quantity of dry contacts.
3	EMS 1000 (EnviroProbe)	Monitors temperature, humidity and other connected monitoring devices in a room environment. Connect the EMS 1000 (EnviroProbe) to the UPS's EMS port located at the rear of the touch panel, and the UPS will integrate the detected information from the EMS 1000 (EnviroProbe) and display relevant data on the LCD. See <b>Figure 4-18</b> and <b>Figure 4-19</b> for the location of the EMS port. For details, please refer to <b>8.1 EMS Function on the LCD Screen</b> .
4	Battery Cabinet Temperature Sensor Cable	Detects the temperature of an external battery cabinet connected to the UPS.
5	Parallel Cable (Length: 10 m (393.7"))	Connects the parallel UPSs.
6	Parallel Cable (Length: 20 m (787.4"))	Connects the parallel UPSs.


No.	Item	Function
7	Battery Management System (BMS)	<p>If you use the lead-acid batteries, it is recommended to install the BMS to monitor (1) each battery's voltage, (2) each battery string's voltage and charging/ discharging current, and (3) battery environment temperature.</p> <p>The BMS should be connected to the UPS's BMS port located at the rear of the touch panel (see <i>Figure 4-18</i> and <i>Figure 4-19</i>). For details, please refer to <i>8.2 BMS Function on the LCD Screen</i> and <i>7.6.4 Battery &amp; Charging Setting</i>.</p> <p> <b>NOTE:</b></p> <p>The quantity of BMS to be installed depends on how many external battery cabinets (lead-acid batteries) are connected to the UPS. For BMS installation, please contact Delta customer service.</p>
8	Multifunctional Communication Card (MFC)	<p>If you use the Delta lithium-ion batteries, you must purchase and install the multifunctional communication card (MFC) in the SMART slot shown in <i>Figure 4-1</i> to monitor the battery status via the UPS's LCD. For relevant information, please refer to <i>8.3 MFC Function on the LCD Screen</i>. Please contact Delta customer service if you need more information.</p> <p> <b>NOTE:</b></p> <p>For parallel UPSs, you must install one multifunctional communication card (MFC) in each parallel UPS if you use the Delta lithium-ion batteries.</p>



**NOTE:**

For installation and operation details, please refer to the *Quick Guide* or *User Manual* included in the package of the optional accessory. To purchase any accessory mentioned above, please contact your local dealer or customer service.

## 8.1 EMS Function on the LCD Screen


- **Path 1:** Tap the shortcut button (  ) on the **Main Screen**.


**Path 2:**  → **EMS**

The UPS can display the information of the optional EMS 1000 (EnviroProbe) on the **EMS** screen. To activate it, please connect the EMS 1000 (EnviroProbe) with the UPS and complete relevant settings.



### NOTE:

1. The **EMS** screen is related to the settings shown in  → **EMS Setting**. The settings can be adjusted according to your needs.
2. For installation of the optional EMS 1000 (EnviroProbe), please refer to the instructions below and the *EnviroProbe 1000 Quick Guide* included in its package.

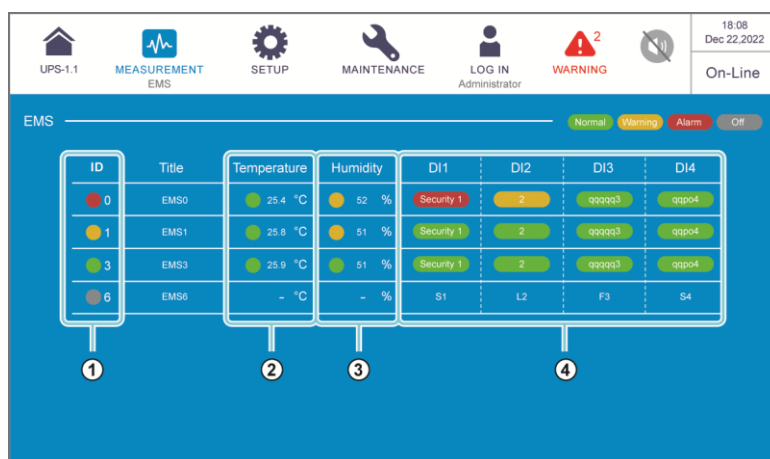

No.	Item	Color (Status)	Descriptions
①	ID	Green (Normal) Yellow (Warning) Red (Alarm) Gray (Off)	<ol style="list-style-type: none"> <li>1. ID # represents each EMS 1000 (EnviroProbe) device which is connected and set as 'Enable'.</li> <li>2. Shows the integrated status of each EMS 1000 (EnviroProbe) device. The integrated status is determined by the most severe status among <b>Temperature</b> (°C), <b>Humidity</b> (%) and <b>DI1 ~ DI4</b>.</li> </ol>

No.	Item	Color (Status)	Descriptions
②	Temperature	Green (Normal) Yellow (Warning) Red (Alarm)	Shows the statuses of Temperature/ Humidity based on the EMS settings. <ul style="list-style-type: none"> <li>● <b>Green (Normal):</b> lower than the set Warning value.</li> <li>● <b>Yellow (Warning):</b> higher than the set Warning value, but lower than the set Alarm value.</li> <li>● <b>Red (Alarm):</b> higher than the set Alarm value.</li> </ul>
③	Humidity	Green (Normal) Yellow (Warning) Red (Alarm)	If <b>Red (Alarm)/ Yellow (Warning)</b> is triggered, the status will recover only when the detected value is lower than the <b>Recovery</b> value.
④	DI1	Green (None/ Information)	1. Shows the statuses of the input contacts. 2. The <b>Title</b> , <b>NO/ NC</b> , and <b>Event Type</b> can be adjusted according to your needs.
	DI2		
	DI3	Yellow (Warning)	
	DI4	Red (Alarm)	

- **Connecting the Optional EMS 1000 (EnviroProbe)**

1. Each UPS can be connected with a maximum of 16 EMS 1000 (EnviroProbe) devices in string to expand the environment monitoring range. A maximum of three UPS units can be paralleled. Please use a CAT-5 cable (user-supplied & the cable length depends on the on-site application and environment) to connect the EMS 1000 (EnviroProbe) to the EMS port on the UPS. For the location of the EMS port, please see *Figure 4-18*.
2. The UPS only supports RS485 communication. When installing the EMS 1000 (EnviroProbe), please set the device's communication mode as RS485 following **3-1 Comm DIP Switch Settings** of the *EnviroProbe 1000 Quick Guide*.
3. When installing, please set the ID # by the four ID DIP switches on the left of the device following **3-2 ID DIP Switch Settings** of the *EnviroProbe 1000 Quick Guide*.




**NOTE:**

The ID # of each EMS 1000 (EnviroProbe) device connected to the UPS must be different so that the UPS can identify each device.


4. To enable the EMS function, you have to set up relevant items on the LCD after connecting the optional EMS 1000 (EnviroProbe) to the UPS.

- Path:  → EMS Setting (Administrator login required)

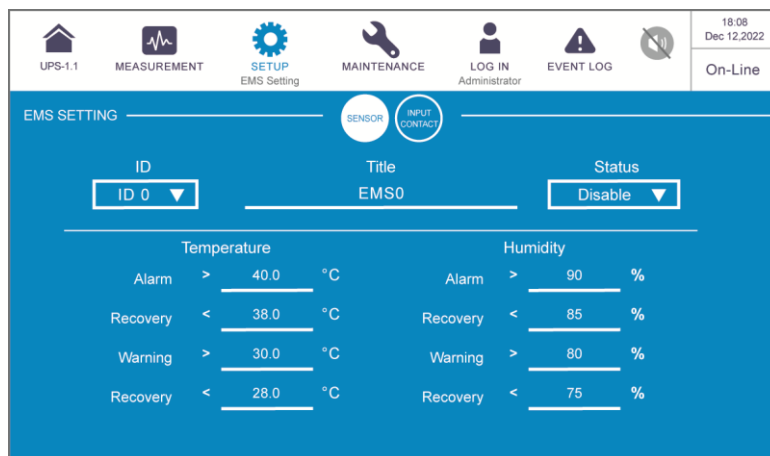

The screenshot shows the 'EMS SETTING' screen with the 'SENSOR' tab selected. The top navigation bar includes icons for UPS-1.1, MEASUREMENT, SETUP EMS Setting, MAINTENANCE, LOG IN Administrator, EVENT LOG, and a status indicator 'On-Line' with the time '18:08 Dec 12,2022'. Below the navigation bar, the 'EMS SETTING' section has a title 'EMS0' and a status 'Disable'. The main area is divided into two columns: 'Temperature' and 'Humidity'. Each column has four rows for 'Alarm', 'Recovery', 'Warning', and 'Recovery' thresholds.

Temperature		Humidity	
Alarm	> 40.0 °C	Alarm	> 90 %
Recovery	< 38.0 °C	Recovery	< 85 %
Warning	> 30.0 °C	Warning	> 80 %
Recovery	< 28.0 °C	Recovery	< 75 %

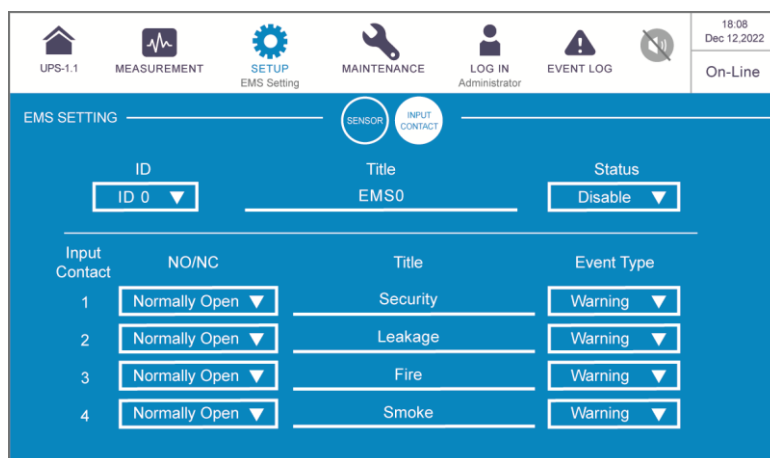


The screenshot shows the 'EMS SETTING' screen with the 'INPUT CONTACT' tab selected. The top navigation bar is identical to the previous screenshot. Below the navigation bar, the 'EMS SETTING' section has a title 'EMS0' and a status 'Disable'. The main area is divided into two columns: 'Input Contact' and 'Event Type'. Each column has four rows for 'NO/NC' and 'Title' configurations.

Input Contact		Event Type	
1	Normally Open	Security	Warning
2	Normally Open	Leakage	Warning
3	Normally Open	Fire	Warning
4	Normally Open	Smoke	Warning



#### NOTE:

The default values are shown in the figures above.

Item	Sub Item	Description
SENSOR	ID	Set the ID # (ID 0/ ID 1/ .../ ID 15) according to the ID DIP switch setting of the EMS 1000 (EnviroProbe) device.   <b>NOTE:</b> If the ID # setting is wrong, the warning message ' <b>The EMS 1000 ID # Communication Fail</b> ' will appear.
	Title	Set the title for each EMS 1000 (EnviroProbe) device.
	Status	The status ' <b>Enable/ Disable</b> ' determines whether or not the LCD shows the information of the EMS 1000 (EnviroProbe) device (ID #) on the screen.
	Temperature	Set the temperature (°C) values for Alarm/ Warning/ Recovery.
	Humidity	Set the humidity (%) values for Alarm/ Warning/ Recovery.
INPUT CONTACT	Input Contact 1	1. Set each input contact as Normally Open (NO)/ Normally Closed (NC). 2. Set the title for each input contact. 3. Set the event type as None/ Information/ Warning/ Alarm.
	Input Contact 2	
	Input Contact 3	
	Input Contact 4	



## 8.2 BMS Function on the LCD Screen


- Path:  MEASUREMENT → BMS


To activate the BMS function (only applicable to the lead-acid batteries), you have to connect the optional battery management system (BMS) to the UPS and complete relevant settings. After that, you can check **String Voltage**, **String Current**, **Ambient Temperature**, **Cell Volt.** (Voltage), **Cell IR**.<sup>\*1</sup> (Internal Resistance) and **Cell Temp**<sup>\*2</sup> (Temperature) of each **String**.



### NOTE:

- \*1 The item will show up after you go to  → **BMS Setting**, select 'CM' in the **BMS Model** list and '**Internal Resistance**' in the **Type** list or select '**CM-TA**' in the **BMS Model** list.
- \*2 The item will show up only after you go to  → **BMS Setting** and select '**CM-TA**' in the **BMS Model** list.

Tap the icon () , and you can view the **Internal Resistance Alarm Threshold**.

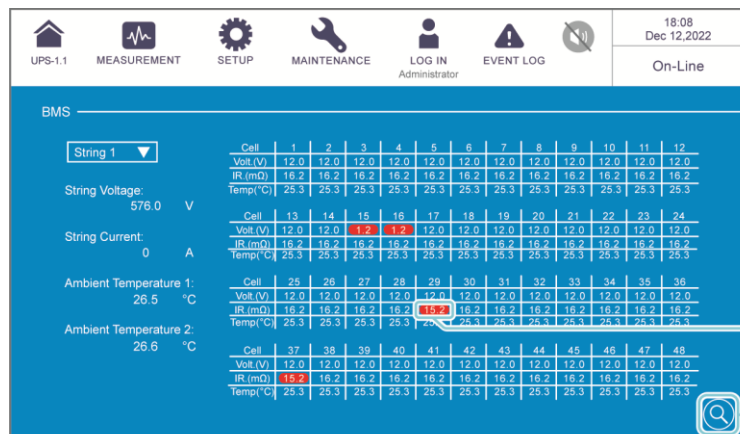

When the Cell IR. Value Exceeds the Internal Resistance Alarm Threshold Value, the Column Will Show the

Tap the Icon to View the Internal Resistance Alarm Threshold Value.

- **Path:**  → **BMS Setting (Administrator login required)**

1. Select 'CM' in the **BMS Model** list, you can view the **Alarm Threshold Values (High & Low)\*<sup>1</sup>** of **Cell Voltage**, **String Voltage** and **Ambient Temperature**.

You can also set up the following items. These settings must be carried out by qualified service personnel. Please contact Delta customer service for assistance.



#### NOTE:

1. \*<sup>1</sup> The **Alarm Threshold Values (High & Low)** are defined by the service personnel during the installation process of the optional battery management system (BMS).

<div> <div>UPS-1.1</div> <div>MEASUREMENT</div> <div>SETUP BMS Setting</div> <div>MAINTENANCE</div> <div>LOG IN Administrator</div> <div>WARNING 4</div> <div>18:08 Dec 12, 2022</div> <div>On-Line</div> </div>					
BMS SETTING					
BMS Module	Name	Address	String ID	Type	Status
CM	Main	1	1	Internal Resistance	Enable
Alarm Threshold Values				High	Low
Cell Voltage (V)				15.0	10.8
String Voltage (V)				720.0	528.4
Ambient Temperature (°C)				50.0	0.0



Item	Description
<b>BMS Model</b>	Select CM/ CM-TA
<b>Name</b>	Select Main/ Ext #n module.
<b>Address</b>	Set the module address.
<b>Type</b>	Set the module type as Voltage Type/ Internal Resistance.
<b>Status</b>	'Enable/ Disable' the display of the Main and Ext #n modules' information on the BMS screen.

2. Select '**CM-TA**' in the **BMS Model** list, you can view the **Alarm Threshold Values (High & Low)\*<sup>1</sup>** of **Cell Voltage**, **String Voltage**, **Cell Temperature** and **Ambient Temperature**.

You can also set up the following items. These settings must be carried out by qualified service personnel. Please contact Delta customer service for assistance.



#### NOTE:

1. \*<sup>1</sup> The **Alarm Threshold Values (High & Low)** are defined by the service personnel during the installation process of the optional battery management system (BMS).


Alarm Threshold Values		High	Low
Cell Voltage (V)		15.0	10.8
String Voltage (V)		720.0	528.4
Cell Temperature (°C)		50.0	0.0
Ambient Temperature (°C)		50.0	0.0

Item	Description
<b>BMS Model</b>	Select CM/ CM-TA
<b>Name</b>	Select String 1-6.
<b>Address</b>	Set the module address.
<b>Status</b>	'Enable/ Disable' the display of the String 1-6's information on the BMS screen.

## 8.3 MFC Function on the LCD Screen


The **PAGE 3 & MFC** screens (see the figures below) will appear on the LCD only if you use the Delta lithium-ion batteries with the optional multifunctional communication (MFC) card being installed in the SMART slot (see *Figure 4-1*). Please contact Delta customer service if you need more information.

- Path:  → **Battery Status**

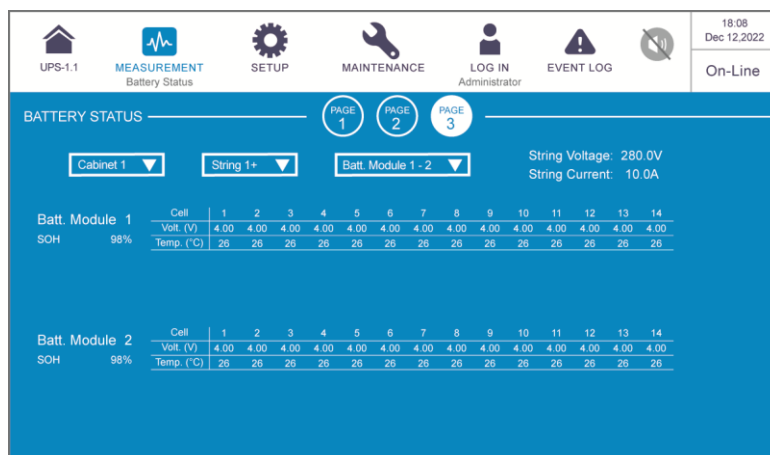


In the screen shown above, you can use the three drop-down lists in the upper left corner to choose the **Cabinet**, **String**, and **Battery Module** to view the corresponding **String Voltage**, **String Current**, battery module's **SOH** (State of Health) and the battery cell's **Voltage** and **Temperature**.

- Path:  → **General Setting** (Administrator login required)

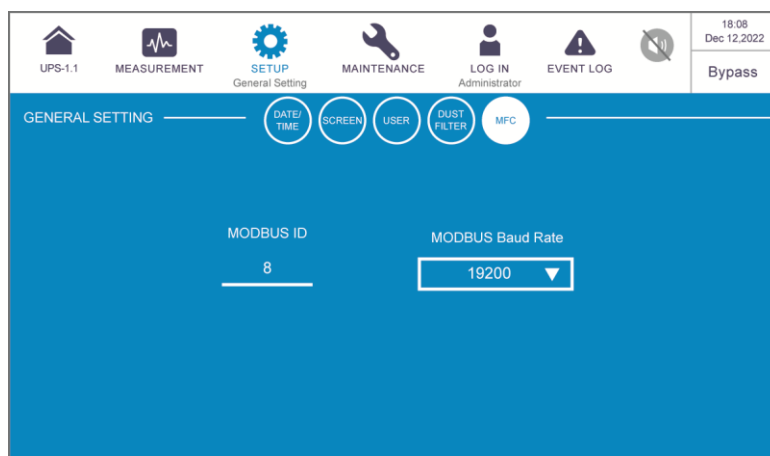

Item	Sub Item	Description
MFC	MODBUS ID	Set up the MODBUS ID for the optional multifunctional communication card (MFC).
	MODBUS Baud Rate	Set up the MODBUS baud rate for the optional multifunctional communication card (MFC).

- Path:  MAINTENANCE → Version & S/N

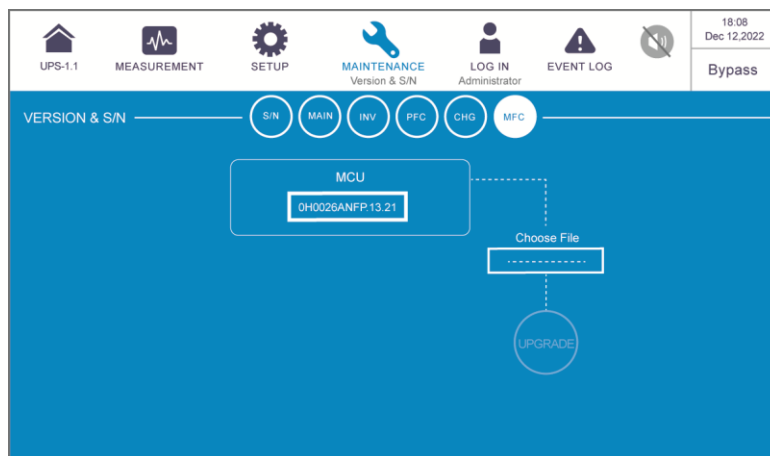

Item	Sub Item	Description
MFC	MCU	Check and update the MCU firmware version of the optional multifunctional communication card (MFC).

## Chapter 9: Maintenance

### ● UPS

#### 1. UPS Cleaning:

Regularly clean the UPS, especially the slits, openings and filters, to ensure that the air freely flows into the UPS to avoid overheating. If necessary, use an air blower to clean the slits and openings and replace the filters regularly to prevent any object from blocking or covering these areas.

#### 2. UPS Regular Inspection:

- a. Monthly check the filters and regularly replace them.
- b. Biannually check the UPS and inspect:
  - 1) Whether the UPS, LED indicators and alarm function normally.
  - 2) Whether the UPS works in Bypass mode (normally, the UPS works in On-Line mode). If yes, check if any error, overload, internal fault, etc. occur.
  - 3) Whether the battery voltage is normal. If the battery voltage is too high or too low, find the root cause.

### ● Batteries

The DPH series UPS uses the lead-acid batteries or lithium-ion batteries. Make sure to replace batteries according to the battery life. The actual battery life depends on the environment temperature, usage, and charging/ discharging frequency. High temperature environments and high charging/ discharging frequency will quickly shorten the battery life; thus, battery inspection and maintenance are required periodically. Please follow the suggestions below to ensure normal battery life.

1. Keep usage temperature between 15°C ~ 25°C (59°F ~ 77°F).
2. When the UPS needs to be stored for an extended period of time, the lead-acid batteries must be recharged once every three months and the charging time must not be less than 24 hours each time. As for the lithium-ion batteries, please contact your battery supplier for the charging frequency and charging duration.

### ● Fans

Higher temperature will shorten fan life. When the UPS is running, please check if all fans work normally and make sure if air can move freely around and through the UPS. If not, please replace abnormal fans.



#### NOTE:

Please ask your local dealer or customer service for more maintenance information. Do not perform maintenance if you are not trained for it.

## Appendix 1: Technical Specifications

Model		DPH-200K-FR			
Power Rating*1	kVA	50	100	150	200
	kW	50	100	150	200
	System Capacity	200			
	Parallel Configuration	Up to 8 units			
Input	Nominal Voltage	220/380, 230/400, 240/415 Vac			
	Phase/ Wire	3P4W+PE			
	Voltage Range	176~276/ 305~477 Vac (full load) 132~176/ 229~305 Vac (with derating to 70% load)			
	Frequency Range	40 ~ 70 Hz			
	Total Harmonic Distortion (THDi)	< 3% (with full linear load); < 5% (with full non-linear load);			
	Power Factor (100% Load)	> 0.99			
	Connection	Dual feed			

Model		DPH-200K-FR			
Output	Nominal Voltage	220/380, 230/400, 240/415 Vac			
	Voltage Regulation	±1% (static)			
	Frequency	50/60 Hz ± 0.05Hz			
	Total Harmonic Distortion (THDv)	< 2% (linear load); < 5% (non-linear load)			
	Power Factor	1			
	Permitted Load Power Factor	0.5 leading to 0.5 lagging without derating			
	Overload Capability	≤ 125%: 10 minutes; ≤ 150%: 1 minute; > 150%: 1 second			
	Short-circuit Current (RMS)	220A ± 50A	440A ± 50A	660A ± 100A	880A ± 100A
	Phase Angle Accuracy w/ Balanced Loads	120±2°			
	Phase Angle Accuracy w/ Unbalanced Loads	120±2°			
	Range of Frequency Synchronized with Bypass	50/ 60 Hz±5Hz			
	Current Crest Ratio	3:1			

Model		DPH-200K-FR
Efficiency	Online Mode	up to 96.50%
	ECO Mode	99%
	Battery Mode	96.50%
	Clean Mode (VI Mode)	99%
Battery	Battery Type	VRLA, Lithium-ion, Vented lead-acid, Nickel-Zinc
	Battery Quantity	30~46 pcs
	Battery Nominal Voltage	±240 Vdc
	Battery Operational Voltage Limits	±272 Vdc
	Maximum Charge Current	15A/ per module
Communication Interfaces	Display	10-inch color LCD touchscreen
	Ports	External battery temperature detection × 4, External switch/ breaker status dry contact × 4, Output dry contact × 6, Input dry contact × 4, Parallel port × 2, USB type A × 2, USB type B × 1, RS-232 port × 1, Modbus port × 1, BMS (RS485) × 1, EMS/CONSOLE (RJ45) × 1 Ethernet × 1, SMART slot × 1, REPO × 1

Model		DPH-200K-FR			
Communication Interfaces	REPO (Emergency Power Off)	standard			
	Protocols	SNMP, Modbus RTU, Modbus TCP/IP, HTTP(S), SNTP, SMTP, BOOTP, DHCP, Syslog			
Physical	Dimensions (W × D × H)	600 × 1109 × 2000 mm (23.62"×43.66"×78.74")			
	Net Weight (kg)	UPS: 275 kg (606 lb) (without power modules)			
		Power module (optional): 36.2 kg (79.8 lb)			
		312 kg 687 lb	348 kg 767 lb	384 kg 846 lb	420 kg 925 lb
	Ventilation	Front to back			
Environment	Operating Temperature	0~40°C (32 ~ 104°F)			
	Humidity	0~95% (non-condensing)			
	Audible Noise	< 75 dBA*2			
	Altitude	1000 meters (3280 ft) (without derating)			
	Storage Temperature	-20~70°C (-4 ~ 158°F)			
	Storage Humidity	0~95% (non-condensing)			
	Ingress Protection Level	IP20			



Model		DPH-200K-FR
Conformance	IEC Pollution Degree (PD)	PD 2
	Over Voltage Category (OVC)	OVC III
	Type of System Earthing	TN-S, TN-C, TN-C-S
	Safety	CE
	EMC	IEC 62040-2
	Performance	IEC 62040-3
	Sustainability	RoHS, REACH



**NOTE:**

1. \*1: The UPS has 5 power module slots for redundancy.
2. \*2: Conditional.
3. Please refer to the rating label for the safety certification.
4. All specifications are subject to change without prior notice.

## Appendix 2: Warranty

Seller warrants this product, if used in accordance with all applicable instructions, to be free from original defects in material and workmanship within the warranty period. If the product has any failure problem within the warranty period, Seller will repair or replace the product at its sole discretion according to the failure situation.

This warranty does not apply to normal wear or to damage resulting from improper installation, operation, usage, maintenance or irresistible force (i.e. war, fire, natural disaster, etc.), and this warranty also expressly excludes all incidental and consequential damages.

Maintenance service for a fee is provided for any damage out of the warranty period. If any maintenance is required, please directly contact the supplier or Seller.



### **WARNING:**

The individual user should take care to determine prior to use whether the environment and the load characteristic are suitable, adequate or safe for the installation and the usage of this product. The User Manual must be carefully followed. Seller makes no representation or warranty as to the suitability or fitness of this product for any specific application.

## Global Headquarter

### Taiwan

Delta Electronics Inc.  
30 Section 2, Huandong Road, Shanhua District,  
Tainan City 74144, Taiwan  
T +886 6 505 6565  
E [ups.taiwan@deltaww.com](mailto:ups.taiwan@deltaww.com)

## Regional Office

### Netherland

Delta Electronics (Netherlands) B.V.  
Zandsteen 15, 2132 MZ Hoofddorp, The Netherlands  
T +31 (0)20 800 3900  
E [info@delta-emea.com](mailto:info@delta-emea.com)

### Poland

Delta Electronics (Poland) Sp. z o.o.  
23 Poleczki St., 02-822 Warszawa, Poland  
T +48 22 335 26 00  
E [ups.poland@deltaww.com](mailto:ups.poland@deltaww.com)

### Brazil

Delta Electronics Brasil Ltda.  
Estrada Velha Rio-São Paulo, 5300 – Eugênio de Melo –  
CEP 12247-001 São José dos Campos-SP-Brazil  
T +55 12 39322300  
E [ups.brazil@deltaww.com](mailto:ups.brazil@deltaww.com)

### Peru

Delta Electronics (Peru) Inc. S.R.L.  
Av. Pardo y Aliaga 699 Of. 601, San Isidro Lima, Peru.  
T +51 962 834 287  
E [ups.peru@deltaww.com](mailto:ups.peru@deltaww.com)

### China

Delta GreenTech (China) Co., Ltd.  
238 Minxia Road, Pudong, Shanghai, 201209 P.R.C  
T +86 21 5863 5678  
+86 21 5863 9595  
E [ups.china@deltaww.com](mailto:ups.china@deltaww.com)

### South Korea

Delta Electronics (Korea), Inc.  
1511, Byucksan Digital Valley 6-cha, Gasan-dong, Geumcheon-gu,  
Seoul, Korea, 153-704  
T +82-2-515-5303  
E [ups.south.korea@deltaww.com](mailto:ups.south.korea@deltaww.com)

### Thailand

Delta Electronics (Thailand) Public Co., Ltd.  
909 Soi 9, Moo 4, E.P.Z., Bangpoo Industrial Estate, Tambon Phraksa,  
Amphur Muang-samutprakarn, Samutprakarn Province 10280,  
Thailand  
T +662 709-2800  
E [ups.thailand@deltaww.com](mailto:ups.thailand@deltaww.com)

### Vietnam (Hanoi)

Delta Electronics (Vietnam) Co., Ltd.  
3rd Floor, Vietnam 3D Creative Center Building, No. 3 Duy Tan Street,  
Dich Vong Hau Ward, Cau Giay District, Hanoi City, Vietnam  
T +84 966 532 266  
E [ups.vietnam@deltaww.com](mailto:ups.vietnam@deltaww.com)

### Indonesia

Delta Electronics International (S) Pte Ltd.  
Soho Capital, 30th Fl, Unit SC3009  
Jl. Letjend S. Parman kav 28. Jakarta 11470 Indonesia  
T + 65 9667 4687  
E [ups.indonesia@deltaww.com](mailto:ups.indonesia@deltaww.com)

### UK

Delta Electronics (UK) Ltd.  
Eltek House, Unit 1 Cleveland Road, Hemel Hempstead,  
Hertfordshire, HP2 7EY, UK  
T +44 1442 210805  
E [sales.gb@eltek.com](mailto:sales.gb@eltek.com)

### U.S.A

Delta Electronics (Americas) Ltd.  
46101 Fremont Blvd. Fremont, CA 94538  
T +1 510 668 5100  
E [ups.na@deltaww.com](mailto:ups.na@deltaww.com)

### Colombia

Delta Electronics Colombia SAS  
Cra 72 # 95 – 51 Bodega 16, Parque Empresarial Los Lagartos  
Bogota DC, Colombia  
T +57 317 4052794  
E [ups.colombia@deltaww.com](mailto:ups.colombia@deltaww.com)

### India

Delta Electronics India Pvt. Ltd.  
Plot No. 43, Sector-35, HSIDC, Gurgaon-122001,  
Haryana, India  
T +91 124 4874 900  
E [ups.india@deltaww.com](mailto:ups.india@deltaww.com)

### Japan

Delta Electronics (Japan), Inc.  
2-1-14 Shibadaimon, Minato-Ku, Tokyo, 105-0012,  
Japan  
T +81-3-5733-1111  
E [jpstps@deltaww.com](mailto:jpstps@deltaww.com)

### Singapore

Delta Electronics Int'l (Singapore) Pte Ltd.  
17 Kallang Junction, #01-01, TRION,  
Singapore 339274  
T +65 6747 5155  
E [ups.singapore@deltaww.com](mailto:ups.singapore@deltaww.com)

### Vietnam (Ho Chi Minh)

Delta Electronics (Vietnam) Co., Ltd.  
10th Floor, The Galleria Office Building,  
258 Nam Ky Khoi Nghia Street, Vo Thi Sau Ward,  
District 3, Ho Chi Minh City, Vietnam  
T +84 903 133 548  
E [ups.vietnam@deltaww.com](mailto:ups.vietnam@deltaww.com)

### Philippines

Eltek Power Inc./ Delta  
302 Orient Square Bldg  
F. Ortigas JR Road, Barangay  
San Antonio, Pasig City  
1605 Philippines  
E [ups.philippines@deltaww.com](mailto:ups.philippines@deltaww.com)

### Australia

Delta Electronics (Australia) Pty Ltd.  
St Leonard's Corporate Centre  
Unit 18/39 Herbert Street, St Leonards NSW 2065, Australia  
T +61 2 9479 4200  
E [ups.australia@deltaww.com](mailto:ups.australia@deltaww.com)

